


TVS-871U-RP & TVS-1271U-RP disassembly SOP

1. Remove Top Covers

Rear top cover




Front top cover

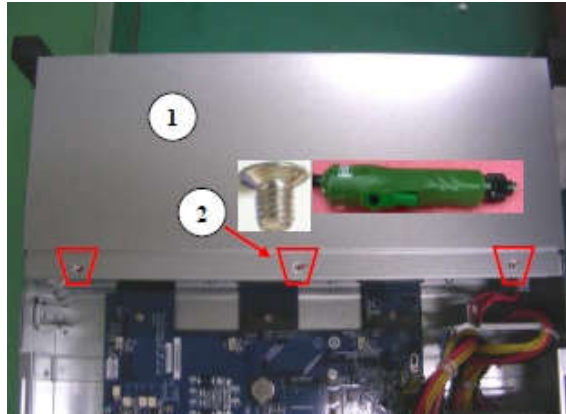



2. Remove FAN Module




Fan screw positions

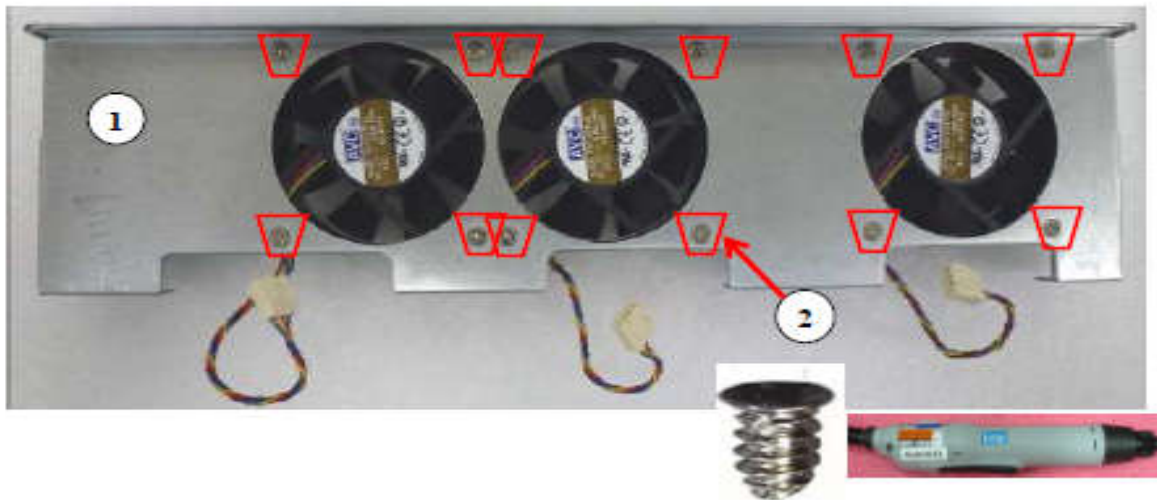



3. Remove Rear Panel

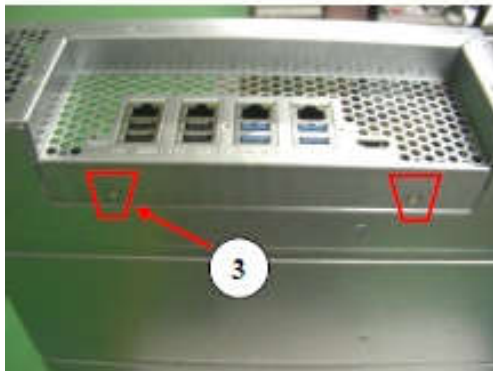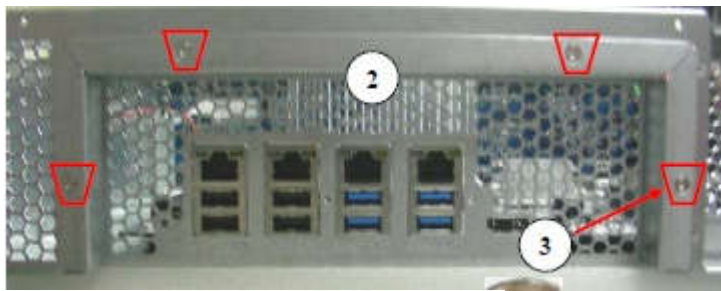


4. Remove the cable connections of Power Supply Cage

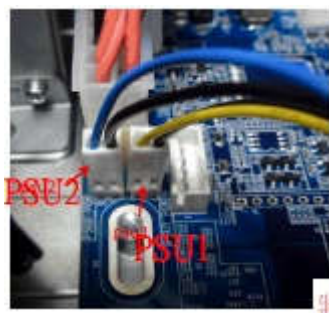


5. Remove Power Supply Cage

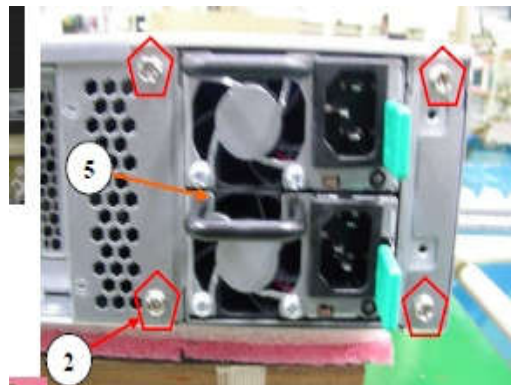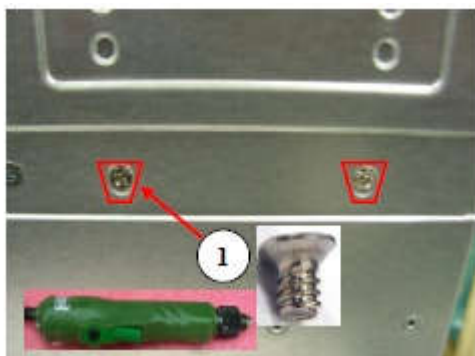

6. Remove top cover switch

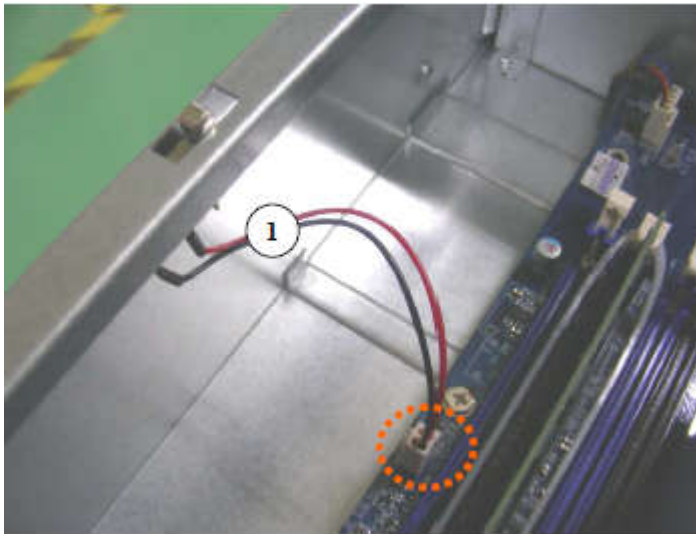


7. Remove screws of MB

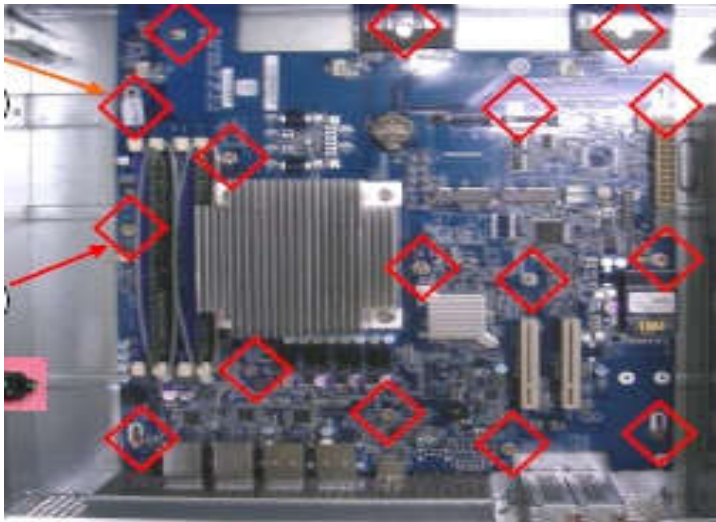

8. Remove Flexible Flat Cable on BP before removing BP




9. Remove screws on the lateral side for BP

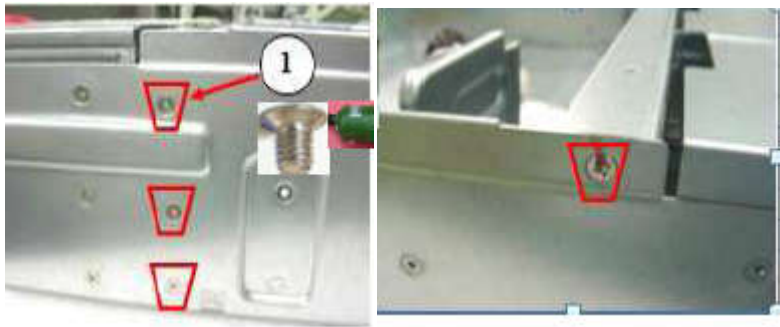


Backplane board screw positions

44053-030005-00*14

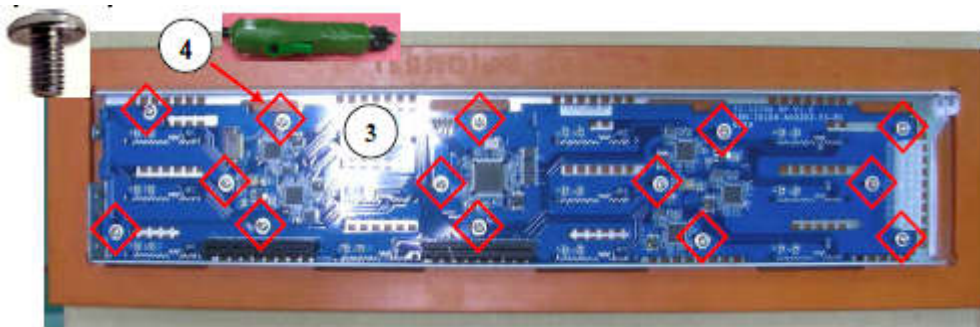


10. Motherboard components

DOM

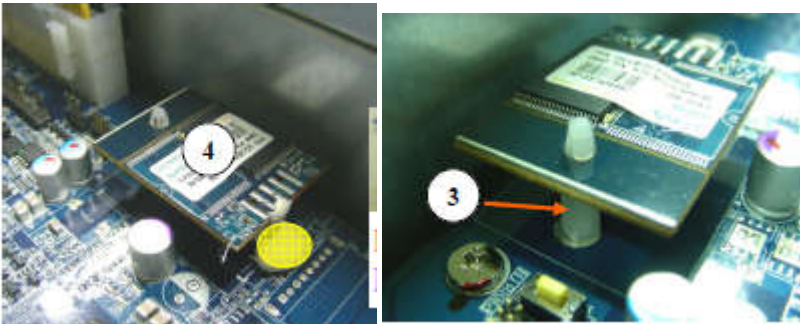


RAM

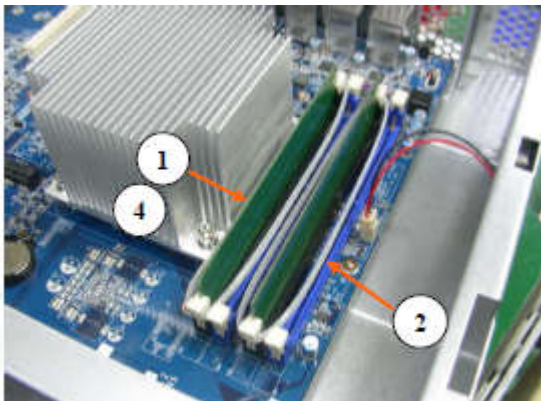

RAM should be installed by order DIMM1(1)→DIMM3(2)→DIMM2→DIMM4

HEATSINK

- Fin direction should be parallel to RAM
- Tighten screws in cross-wise fashion

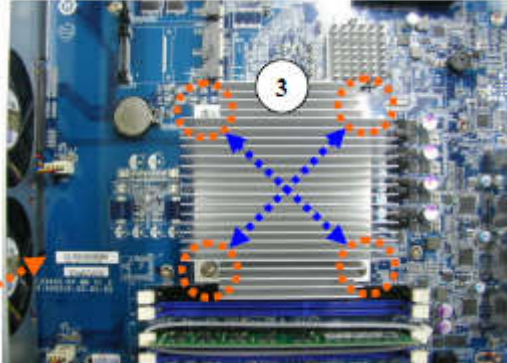

CPU

