



**QNAP**

# **QSW-M2116P-2T2S**

**用户指南**

# 内容

<b>1. 重要信息</b>	
安全信息.....	3
<b>2. 产品概述</b>	
关于 QSW-M2116P-2T2S.....	5
硬件规格.....	5
包装内容.....	6
组件.....	6
前面板.....	7
后面板.....	7
前面板 LED.....	8
<b>3. 安装和访问</b>	
安装要求.....	9
设置交换机.....	9
安装橡胶垫脚.....	9
安装手柄.....	11
将交换机连接到计算机或网络.....	13
将交换机连接到计算机.....	13
将交换机连接到网络.....	14
交换机访问.....	14
使用浏览器访问交换机.....	14
使用 Qfinder Pro 访问交换机.....	15
<b>4. 基本操作</b>	
重置按钮.....	17
LED.....	17
<b>5. QSS</b>	
关于 QSS.....	20
开始使用.....	20
客户端设备管理.....	20
扫描已连接设备.....	20
向设备发送 WoL 数据包.....	20
删除 MAC 地址.....	21
清除 MAC 地址历史记录.....	21
网络管理.....	21
配置端口设置.....	22
管理 PoE 设置.....	22
添加 VLAN.....	23
添加链路聚合组 (LAG).....	24
管理快速生成树协议 (RSTP) 设置.....	25
添加静态 MAC 地址.....	26
添加访问控制列表条目.....	26
配置 IGMP 侦听.....	27
配置 QoS 设置.....	28
配置 QoS 速率限制.....	28
配置端口镜像.....	29
启用或禁用 LLDP.....	29
配置循环保护.....	30

系统管理.....	30
系统设置.....	30
固件管理.....	37

## 6. 支持和其他资源

### 7. 术语表

Qfinder Pro.....	41
QSS.....	41

### 8. 声明

有限保修.....	42
免责声明.....	42
版权和商标.....	42
GNU General Public License.....	42
CE 声明.....	50
FCC 声明.....	50
VCCI 声明.....	51
BSMI 声明.....	51
SJ/T 11364-2006.....	51
废弃电子电气设备 (WEEE) 欧盟指令 2002/96/EC.....	52
EU RoHS 声明.....	52
激光合规声明.....	52
UKCA 声明.....	52

# 1. 重要信息

## 原始包装

请保留原始包装和包装材料。如果要产品退货或寄回进行修理，请使用原始包装以免损坏。

对于因包装不当受损的产品，QNAP 保留不提供退款或保修服务的权利。

## 硬件缺陷

如果您的 QNAP 产品有硬件方面的缺陷，请将产品退回 QNAP 或 QNAP 授权的服务中心进行维修或更换。您本人或未经授权的第三方对产品进行的任何维修或维护流程均会使保修失效。

对于因未经授权进行的修改和安装不受支持的第三方应用程序而造成的任何损坏或数据丢失，QNAP 概不负责。

有关详细信息，请参见 [QNAP 产品保修服务条款](#)。

## 安全信息

以下说明有助于确保个人安全和环境安全。在执行任何操作之前，请仔细阅读这些说明。

### 一般说明

- 设备应存放在通过器具、锁和钥匙或任何安保措施限制进入的安全场所。
- 只有经过授权并掌握技能的合格人员才能实际接触设备，相关人员需了解所有限制措施、安全预防措施和安装维护流程。
- 为避免潜在伤害或组件的损坏，请务必等硬盘和其他内部系统组件冷却后再触碰。
- 请执行静电放电 (ESD) 规程，以避免可能的人员受伤或组件受损。

### 电源

- 为降低失火或触电风险，请确保只将电源线连接到接地良好的电源插座。
- 为避免受到严重伤害，安装或更换系统组件前，必须由经培训的维修技师从设备拔下所有 PSU 线。

### 系统电池

- 此产品配有纽扣电池。
- 如果被吞食，锂纽扣电池可能会在 2 小时内导致严重或致命伤害。
- 请避免儿童接触电池。
- 如果您认为可能电池已被吞食或部于身体的某个部位，请立即就医求助。
- 为避免潜在的电池爆炸、导致人员受伤或组件受损，请确保使用同型电池更换现有电池。
- 请按当地法规或电池制造商的指示正确处置使用过的电池。

### 运动的部件

•



**转动的风扇叶片：** 在设备连接到电源时，使您的身体各部位远离正在转动的风扇叶片。



**运动的组件：** 使您的身体各部位远离正在运动的其他组件。

- 设备不适合在儿童可能会出现的场所使用。

## 2. 产品概述

本章提供有关 QNAP QSW-M2116P-2T2S 交换机的基本信息。

### 关于 QSW-M2116P-2T2S

QNAP QSW-M2116P-2T2S 是专为 PoE 网络设计的托管交换机。这款交换机配备了 16 个 2.5 GbE PoE+ 端口和 2 个 10 GbE PoE++ 端口，可以建立高速、大功率连接。此交换机的总功耗预算为 280 瓦，另有两个 10 GbE SFP+ 端口，可轻松实现网络扩展。用户和 IT 管理员可通过 QSS Web 界面轻松管理第 2 层网络功能和 PoE 设置。

### 硬件规格



#### 提示

型号规格如有更改，恕不另行通知。要查看最新规格，请转到 <https://www.qnap.com>。

组件	QSW-M2116P-2T2S
处理器	
CPU	Microchip VSC7448-02
芯片组	
内存	4 GB
网络接口	<ul style="list-style-type: none"> <li>• 16 x 2.5G/1G RJ45 端口</li> <li>• 2 x 10G/5G/1G SFP+ 端口</li> <li>• 2 x 10G/5G/1G BASE-T RJ45 端口</li> </ul>
管理接口	1 x 1 GbE 管理端口
PoE 支持	
802.3af (PoE)	端口 1 至 16  <b>注</b> 端口支持 IEEE 802.3af-2003 PoE 标准，并提供最高 15.4 W 的直流电源。
802.3at (PoE+)	端口 1 至 16  <b>注</b> 端口支持 IEEE 802.3at-2009 PoE 标准，并提供最高 30 W 的直流电源。
802.3bt (PoE++)	端口 19 和 20  <b>注</b> 端口支持 IEEE 802.3bt-2018 PoE 标准，并提供最高 90 W 的直流电源。
PoE 最大电源端口	<ul style="list-style-type: none"> <li>• 端口 1 至 16：最高 30 W</li> <li>• 端口 19 和 20：最高 90 W</li> </ul>
总 PoE 功耗预算	280 W
接口	
按钮	交换机重置
LED	


组件	QSW-M2116P-2T2S
系统	<ul style="list-style-type: none"> <li>• 状态</li> <li>• PoE</li> <li>• 风扇</li> </ul>
端口	<ul style="list-style-type: none"> <li>• 链路</li> <li>• 速度</li> <li>• PoE</li> </ul>
尺寸	
外形规格	1U 机架式
尺寸 (高 x 宽 x 深)	43.5 x 285 x 234.8 mm (1.71 x 11.22 x 9.24 英寸)
净重	2.08 kg (4.59 磅)
其他	
电源单元	100-240V, 50/60 Hz
最大功耗	350 W
风扇	系统: 2 x PWM 双滚珠轴承风扇
工作温度	0°C 至 40°C (32 至 104°F)
相对湿度	<ul style="list-style-type: none"> <li>• 无冷凝相对湿度: 5% 至 95%</li> <li>• 湿球温度: 27°C (80.6°F)</li> </ul>
安全锁孔	Kensington 安全锁孔

## 包装内容

项目	数量
QSW-M2116P-2T2S	1
电源线	1
导轨支架	2
导轨支架螺丝	6
橡胶垫脚	4
快速安装指南 (QIG)	1

## 组件

## 前面板

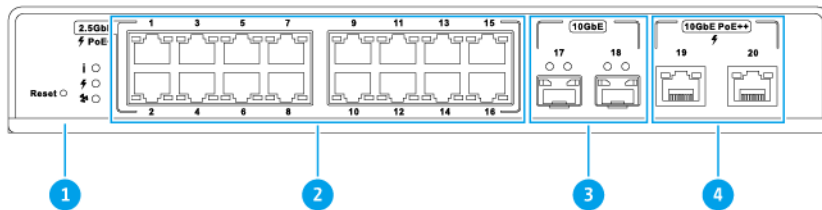

编号	组件	编号	组件
1	重置按钮	3	10 GB 以太网 (SFP+) 端口
2	<ul style="list-style-type: none"> <li>2.5 GB (RJ45) 802.3af PoE/802.3at PoE+ 端口</li> </ul>	4	10 GB (RJ45) 802.3bt PoE++ 端口


## 后面板



编号	组件	编号	组件
1	电源输入	3	Kensington 安全锁孔
2	管理端口	-	-



## 前面板 LED

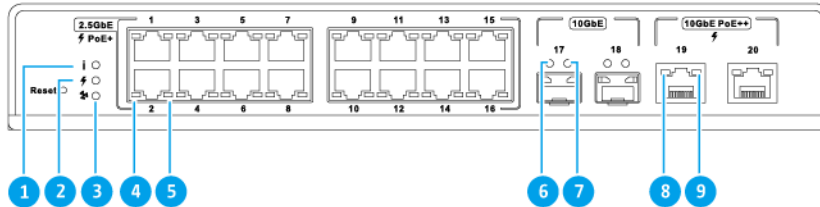

编号	组件	编号	组件
1	系统状态 LED	6	10 GB SFP+ 10G 速度 LED
2	PoE LED	7	10 GB SFP+ 1G 速度 LED
3	风扇 LED	8	2.5 GB RJ45 链路 LED
4	2.5 GB 以太网 (SFP+) 链路 LED	9	2.5 GB RJ45 PoE++ LED
5	2.5 GB 以太网 (SFP+) PoE LED	-	-

### 3. 安装和访问

本章提供特定硬件安装和交换机访问步骤。

#### 安装要求


类别	项目
环境	<ul style="list-style-type: none"> <li>• 室温：0°C 至 40°C (32 至 104°F)</li> <li>• 无冷凝相对湿度：5% 至 95%</li> <li>• 湿球温度：27°C (80.6°F)</li> <li>• 平坦的防静电表面，无直射阳光、液体或化学药剂</li> <li>• 无可能阻塞设备通风或者压住设备或电源线的物品</li> </ul>
硬件和外围设备	<ul style="list-style-type: none"> <li>• 计算机或 NAS</li> <li>• 网线</li> </ul>
工具	<ul style="list-style-type: none"> <li>• 1 号或 2 号十字螺丝刀</li> <li>• 平头螺丝刀</li> <li>• 防静电腕带</li> </ul>

#### 设置交换机

1. 将交换机置于符合要求的环境中。  
有关详细信息，请参见[安装要求](#)。
2. 启动交换机。
3. 将交换机连接到计算机或网络。  
有关详细信息，请参见[将交换机连接到计算机或网络](#)。
4. 登录 QSS。


#### 安装橡胶垫脚

1. 关闭设备。
2. 从插座上拔下电源线。
3. 拔掉所有线缆和外接部件。
4. 将设备倒置。

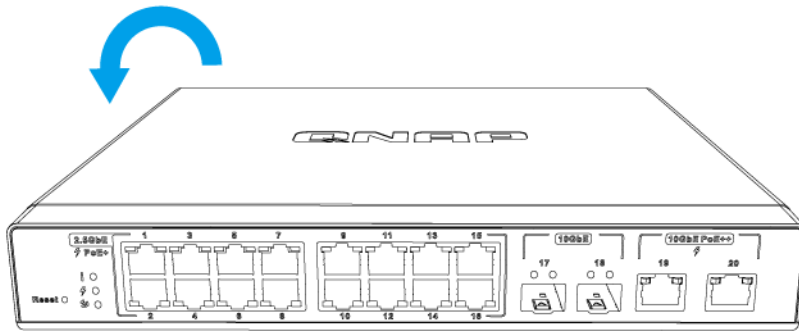


**5. 安装橡胶垫脚。**

- a. 取下橡胶垫脚的保护膜。
- b. 安装橡胶垫脚。

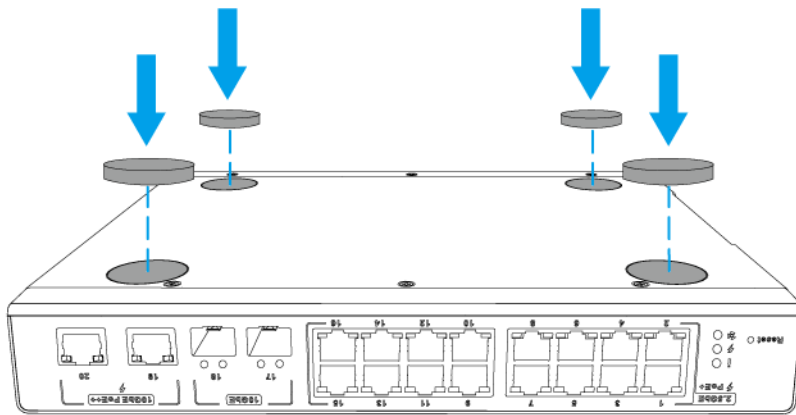

- c. 将设备正常直立放置。

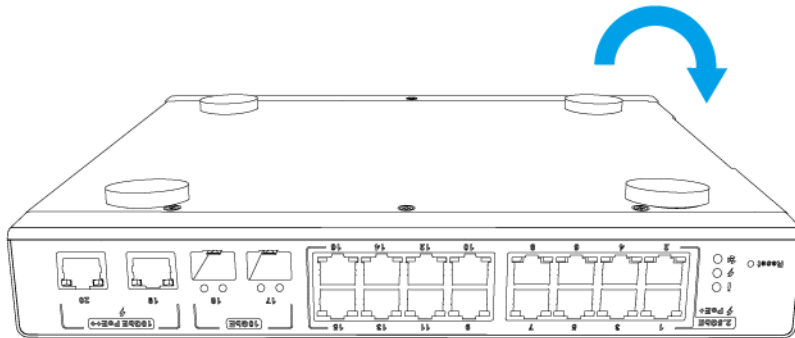


6. 连接所有线缆和外接部件。
7. 将电源线连接到插座。
8. 启动设备。

## 安装手柄

安装手柄可以便于拿取和将设备固定在机架上。

1. 关闭设备。
2. 从插座上拔下电源线。
3. 拔掉所有线缆和外接部件。
4. 将手柄安装到角码上。
  - a. 将手柄上的开孔对准角码上的两个圆螺丝孔。
  - b. 装上螺丝，将手柄固定在角码上。

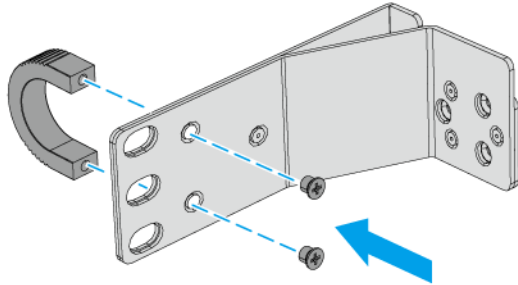


5. 将角码安装到设备上。
  - a. 将角码上的孔对准机箱上的孔。



**注**  
确保手柄与前面板朝向一致。

- b. 装上螺丝，将角码固定到机箱上。

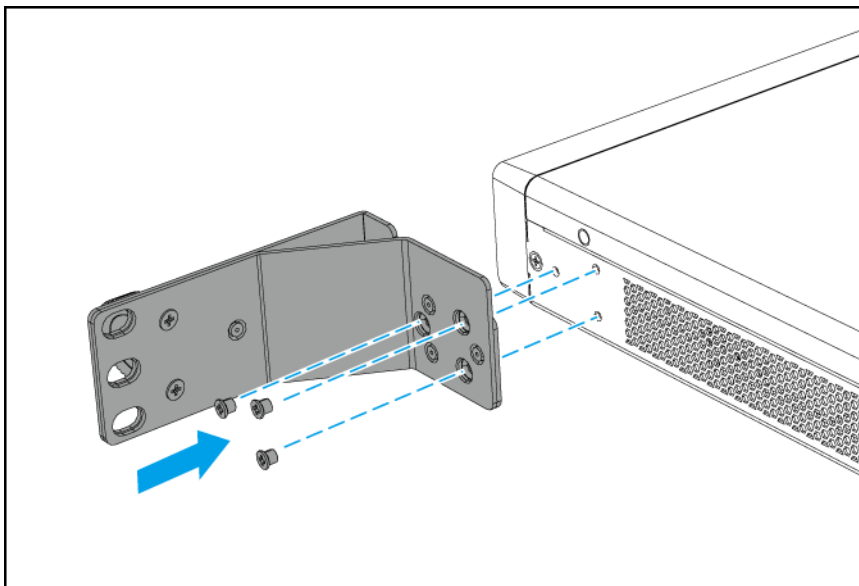

6. 将第二个手柄安装到机箱的另一侧。
7. 连接所有线缆和外接部件。
8. 将电源线连接到插座。
9. 启动设备。

## 将交换机连接到计算机或网络


可以将交换机连接到计算机或局域网。有关详细信息，请参见以下主题：

- [将交换机连接到计算机](#)
- [将交换机连接到网络](#)

## 将交换机连接到计算机

将交换机连接到 QNAP NAS 可以扩展存储容量，还可通过将网线连接到交换机上的管理端口将数据备份到另一 NAS。但是，必须将交换机连接到计算机才能配置设置。

1. 启动交换机。
2. 将交换机连接到计算机。
  - a. 将网线连接到交换机上的管理端口或 PoE 端口。
  - b. 将网线连接到计算机上的千兆位网络端口。
  - c. 可选: 将交换机连接到 NAS。

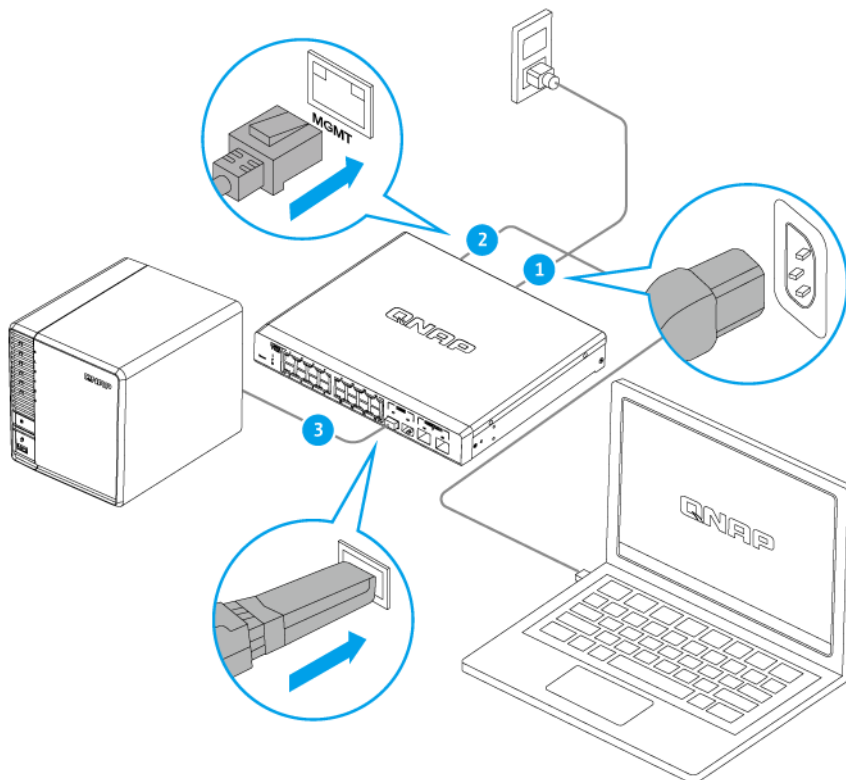

3. 确认计算机可识别交换机。
  - a. 在主机计算机上打开 Qfinder Pro。



**注**  
要下载 Qfinder Pro，请转到 <https://www.qnap.com/utilities>。

- b. 在列表上找到所需交换机。

## 将交换机连接到网络

可以通过管理端口或 PoE 端口将交换机连接到局域网。

1. 启动交换机。
2. 使用管理端口或 PoE 端口将交换机连接到局域网。
3. 在已连接到同一局域网的计算机上运行 Qfinder Pro。



### 注

要下载 Qfinder Pro，请转到 <https://www.qnap.com/utilities>。

4. 在列表中找到交换机，然后双击名称或 IP 地址。此时会出现 QSS 登录屏幕。
5. 输入 QSS 登录信息。
6. 单击登录。

## 交换机访问

方法	描述	要求
Web 浏览器	如果您掌握以下信息，便可使用同一网络上的任意计算机访问交换机： <ul style="list-style-type: none"> <li>• 交换机名称（例如：http://example123/）或 IP 地址</li> <li>• 有效用户帐户的登录凭据</li> </ul> 有关详细信息，请参见 <a href="#">使用浏览器访问交换机</a> 。	<ul style="list-style-type: none"> <li>• 连接到交换机所在网络的计算机</li> <li>• Web 浏览器</li> </ul>
Qfinder Pro	Qfinder Pro 是一个桌面实用工具，可用于在特定网络上查找并访问 QNAP 设备。此实用工具支持 Windows、macOS、Linux 和 Chrome 操作系统。有关详细信息，请参见 <a href="#">使用 Qfinder Pro 访问交换机</a> 。	<ul style="list-style-type: none"> <li>• 连接到交换机所在网络的计算机</li> <li>• Web 浏览器</li> <li>• Qfinder Pro</li> </ul>

## 使用浏览器访问交换机



如果您知道交换机的 IP 地址和有效用户帐户的登录凭据，便可以使用网络上的任何计算机访问此交换机。QNAP 交换机默认支持 DHCP 客户端配置以进行 IP 分配。连接到网络时，交换机将自动从 DHCP 服务器获取 IP 地址。



### 注

- 如果不知道交换机的 IP 地址，可以使用 Qfinder Pro 查找该交换机。
- 如果交换机未连接到支持 DHCP 的网络，您可以将计算机的 IP 地址更改为 169.254.100.102 以访问交换机 Web 接口。
- 交换机的默认 IP 地址为 169.254.100.101。

1. 请确认您的计算机与交换机位于同一网络中。
2. 在计算机上打开 Web 浏览器。
3. 在地址栏中键入交换机的 IP 地址。  
此时会出现 QSS 登录页面。
4. 指定用户名和密码。

默认用户名	默认密码
admin	<p>交换机映像的 MAC 地址会省略所有标点并大写所有字母。</p> <p> <b>提示</b> 例如，如果 MAC 地址为 00:0a:0b:0c:00:01，则默认密码为 000A0B0C0001。</p> <p> <b>注</b></p> <ul style="list-style-type: none"> <li>• 您可以使用 Qfinder Pro 找到设备 MAC 地址，此地址也可能粘贴在设备的标签上，列示为“MAC”。</li> <li>• 首次登录后，系统将提示您更改密码。</li> <li>• 出于安全原因，QNAP 强烈建议首次登录后更改密码。</li> </ul>

5. 单击登录。

此时会出现 QSS 桌面。



#### 重要

设置交换机之后，请确保将计算机的 IP 地址更改为原始配置。

## 使用 Qfinder Pro 访问交换机

1. 在已连接到交换机所在网络的计算机上安装 Qfinder Pro。





#### 提示

要下载 Qfinder Pro，请转到 <https://www.qnap.com/en/utilities>。

2. 打开 Qfinder Pro。  
Qfinder Pro 会自动搜索网络上的所有 QNAP 设备。
3. 在列表中找到交换机，然后双击名称或 IP 地址。  
QSS 登录屏幕将在默认 Web 浏览器中打开。
4. 指定用户名和密码。



默认用户名	默认密码
admin	<p>交换机映像的 MAC 地址会省略所有标点并大写所有字母。</p> <p> <b>提示</b> 例如，如果 MAC 地址为 00:0a:0b:0c:00:01，则默认密码为 000A0B0C0001。</p> <p> <b>注</b></p> <ul style="list-style-type: none"> <li>• 您可以使用 Qfinder Pro 找到设备 MAC 地址，此地址也可能粘贴在设备的标签上，列示为“MAC”。</li> <li>• 首次登录后，系统将提示您更改密码。</li> <li>• 出于安全原因，QNAP 强烈建议首次登录后更改密码。</li> </ul>

### 5. 单击登录。

此时会出现 QSS 桌面。

## 4. 基本操作

本章介绍交换机的基本操作。

### 重置按钮

操作	用户操作	结果
基本系统重置	按住此按钮 5 秒钟。	以下设置将重置为默认值： <ul style="list-style-type: none"> <li>系统管理员密码：默认密码为设备 MAC 地址（去掉特殊字符），以大写字母表示。例如，如果设备 MAC 地址为 00-08-9B-F6-15-75，则管理员密码为 00089BF61575。</li> </ul> <div style="border-left: 2px solid #0070C0; padding-left: 10px; margin-top: 10px;"> <p><b>注</b></p> <p>您可以使用 Qfinder Pro 找到设备 MAC 地址，此地址也可能粘贴在设备的标签上，列示为“MAC”。</p> </div> <ul style="list-style-type: none"> <li>admin 帐户将自动启用。</li> </ul>
高级系统重置	按住此按钮 10 秒钟。	恢复默认出厂设置。


### LED

开启交换机电源后，LED 指示灯会指示系统状态和相关信息。以下 LED 信息仅适用于交换机已连接到网络的情况。

有关 LED 位置的详细信息，请参见[前面板 LED](#)。

#### 系统状态 LED

状态	描述
绿色	<ul style="list-style-type: none"> <li>设备已就绪。</li> <li>固件已更新。</li> <li>密码已重置。</li> <li>设备已重置为出厂默认设置。</li> </ul>
闪烁绿色	<ul style="list-style-type: none"> <li>设备正在初始化。</li> <li>固件正在更新。</li> </ul> <div style="border-left: 2px solid #C00000; padding-left: 10px; margin-top: 10px;"> <p><b>重要</b></p> <p>更新固件时，请勿拔下电源线，也不要强行退出应用程序。</p> </div> <ul style="list-style-type: none"> <li>设备正在重置。</li> <li>设备密码正在重置。</li> </ul>

状态	描述
红色	<ul style="list-style-type: none"> <li>发生系统错误。</li> <li>检测到网络循环。</li> <li>系统过热。</li> <li>发生风扇错误。</li> </ul> <p> <b>注</b> 有关详细信息，请登录到 QSS。</p>
熄灭	<ul style="list-style-type: none"> <li>设备已关机。</li> <li>设备可进行密码重置。</li> <li>设备可恢复出厂设置。</li> </ul>

### PoE LED

状态	描述
绿色	PoE 状态正常。
红色	发生 PoE 致命错误。

### 风扇 LED

状态	描述
绿色	系统风扇状态正常。
红色	发生致命系统风扇错误。

### 2.5 Gb 以太网 (RJ45) 链路 LED - 左

状态	描述
绿色	网络连接正以 2.5 Gbps 的速度运行。
闪烁绿色	正在传输数据。
琥珀色	网络连接正以 1 Gbps 或 100 Mbps 的速度运行。
闪烁琥珀色	正在传输数据。
熄灭	<ul style="list-style-type: none"> <li>端口未连接任何线缆。</li> <li>QSS 中已禁用该端口。</li> <li>检测到网络循环，循环保护已禁用该端口。</li> </ul>

### 2.5 Gb 以太网 (RJ45) PoE LED - 右

状态	描述
绿色	交换机已连接至电源设备。
闪烁绿色	电源设备发生错误。
熄灭	<ul style="list-style-type: none"> <li>没有电源设备连接到端口。</li> <li>QSS 中已对端口禁用 PoE 模式。</li> </ul>

**10 Gb 以太网 (SFP+) 10G 速度 LED - 左**

状态	描述
绿色	网络连接正以 10 Gbps 的速度运行。
闪烁绿色	正在传输数据。
熄灭	<ul style="list-style-type: none"> <li>端口未连接任何线缆。</li> <li>QSS 中已禁用该端口。</li> <li>检测到网络循环，循环保护已禁用该端口。</li> </ul>

**10 Gb 以太网 (SFP+) 1G 速度 LED - 右**

状态	描述
琥珀色	网络连接正以 1 Gbps 的速度运行。
闪烁琥珀色	正在传输数据。
熄灭	<ul style="list-style-type: none"> <li>端口未连接任何线缆。</li> <li>QSS 中已禁用该端口。</li> <li>检测到网络循环，循环保护已禁用该端口。</li> </ul>

**10 Gb 以太网 (RJ45) 链路 LED - 左**

状态	描述
绿色	网络连接正以低于 10 Gbps 的速度运行。
闪烁绿色	正在传输数据。
琥珀色	网络连接正以 5 Gbps、2.5 Gbps、1 Gbps 或 100 Mbps 的速度运行。
闪烁琥珀色	正在传输数据。
熄灭	<ul style="list-style-type: none"> <li>端口未连接任何线缆。</li> <li>QSS 中已禁用该端口。</li> <li>检测到网络循环，循环保护已禁用该端口。</li> </ul>

**10 Gb 以太网 (RJ45) PoE LED - 右**

状态	描述
绿色	交换机已连接至电源设备。
闪烁绿色	电源设备发生错误。
熄灭	<ul style="list-style-type: none"> <li>没有电源设备连接到端口。</li> <li>QSS 中已对端口禁用 PoE 模式。</li> </ul>

## 5. QSS

### 关于 QSS

QNAP 交换机系统 (QSS) 是一个针对 QNAP 交换机设备的网络管理操作系统。QSS 支持第 2 层网络管理功能和交换机系统管理功能。

### 开始使用

1. 以管理员身份登录交换机。  
默认管理员帐户为 `admin`。  
有关详细信息，请参见[交换机访问](#)。
2. 配置系统设置。  
有关详细信息，请参见[系统设置](#)。
3. 配置端口设置和其他网络设置。  
有关详细信息，请参见[网络管理](#)。

### 客户端设备管理

**MAC 历史记录** 屏幕显示有关交换机所连接设备的信息。可通过此屏幕访问所有连接的设备，还可以访问网络唤醒 (WoL) 命令。


对于启用了 WoL 的设备，WoL 允许网络管理员通过向已关闭的设备发送可将其开机的特殊编码网络数据包，来远程维护这些设备。

### 扫描已连接设备

1. 登录 QSS。
2. 转到 **设备 > MAC 历史记录**。
3. 单击 **扫描**。

QSS 随即扫描查找已连接的设备。

### 向设备发送 WoL 数据包

1. 登录 QSS。
2. 转到 **设备 > MAC 历史记录**。
3. 找到一个连接的设备。
4. 单击 。  
此时会打开发送 WoL 命令窗口。
5. 选择 WoL 设置。

设置	描述
现在唤醒	立即向设备发送 WoL 命令。


设置	描述
稍后唤醒	<p>在计划日期向设备发送 WoL 命令。</p> <ol style="list-style-type: none"> <li>单击 。</li> <li>选择日期。</li> <li>单击 。</li> <li>选择时间。</li> </ol>

#### 6. 单击保存。


QSS 随即向设备发送 WoL 命令。



#### 提示

要向新设备发送唤醒命令，请单击 。

## 删除 MAC 地址

1. 登录 QSS。
2. 转到 **设备 > MAC 历史记录**。
3. 找到一个连接的设备。
4. 单击 。  
此时会打开一个确认窗口。
5. 单击删除。

QSS 随即删除 MAC 地址。

## 清除 MAC 地址历史记录

1. 登录 QSS。
2. 转到 **设备 > MAC 历史记录**。
3. 单击清除。  
此时会打开一个确认窗口。
4. 单击清除。

QSS 随即清除 MAC 地址历史记录。

## 网络管理

交换机的基本网络配置包括通过服务质量 (QoS) 和访问控制列表 (ACL) 进行的端口管理、VLAN 配置、各类协议的配置，以及流量管理。

### 仪表板

仪表板在接口的配置部分打开。单击仪表板中的下拉菜单，可查看端口状态、VLAN 状态、链路聚合状态以及所有端口的端口流量。

您还可以删除用户配置的网络设置和监控交换机的网络设置。

## 配置端口设置

1. 登录 QSS。
2. 转到配置 > 端口管理。
3. 转到端口配置。
4. 指定一个端口。
5. 配置设置。

设置	描述
状态	启用或禁用交换端口
端口名称	指定介于 1 和 24 个字符之间的端口名称。
速度	指定端口的最大运行速度
流量控制	启用或禁用端口流量控制 <ul style="list-style-type: none"> <li>• 当端口速度设置为<b>自动</b>时，会将最大速度播发给链接伙伴。</li> <li>• 当端口速度固定时，流量控制会自动匹配指定的速度。</li> </ul>
最大帧大小	控制端口允许的最大帧大小

6. 单击**保存**。

QSS 随即保存设置。

## 管理 PoE 设置

以太网供电 (PoE) 系统通过以太网线缆传输电力，支持使用同一线缆同时提供数据连接和供电，适用于如无线接入点、摄像头或 VoIP 电话等设备。

**PoE** 屏幕显示有关 PoE 功耗的信息，同时还可以通过此屏幕访问 PoE 计划和配置选项。

## 配置 PoE 设置

1. 登录 QSS。
2. 转到配置 > **PoE**。
3. 转到**电源配置**。
4. 指定一个端口。
5. 配置设置。



设置	描述
PoE 模式	控制端口的 PoE 操作模式 <ul style="list-style-type: none"> <li>• <b>已禁用</b>：禁用选定端口的 PoE。</li> <li>• <b>PoE</b>：为 PoE 设备提供 15.4 瓦。</li> <li>• <b>PoE+</b>：为 PoE 设备提供最高 30 瓦。</li> </ul>

设置	描述
优先级	控制每个端口的优先级 <ul style="list-style-type: none"> <li>• <b>最高</b>: 在为端口分配功率方面分配最高优先级。</li> <li>• <b>高</b>: 在为端口分配功率方面分配第二优先级。</li> <li>• <b>低</b>: 在为端口分配功率方面分配最低优先级。</li> </ul> 如果多个端口优先级相同, 则编号较小的端口优先。
功耗	显示当前受电设备消耗的功率

#### 6. 单击保存。

QSS 随即保存 PoE 设置。

### 配置 PoE 计划

1. 登录 QSS。
2. 转到配置 > PoE。
3. 转到 PoE 计划。
4. 指定一个端口。
5. 单击 。  
为此端口启用计划。
6. 单击 。  
此时会打开 PoE 计划配置窗口。
7. 配置计划。
  - a. 可选: 选择其他端口。  
选定端口也将包括在此计划中。
  - b. 选择端口操作时间。
  - c. 可选: 选择立即激活计划。
8. 单击保存。  
PoE 计划配置窗口随即关闭。
9. 单击保存。

QSS 随即保存计划。

### 添加 VLAN

虚拟 LAN (VLAN) 将多个网络设备组合在一起并限制广播域。VLAN 的各成员之间彼此隔离, 网络流量仅在组成员之间发送。

为每个 VLAN 均分配一个特定的 VLAN 识别码。此 VLAN 屏幕显示有关现有 VLAN 的信息, 同时还可以通过此屏幕访问 VLAN 配置选项。

1. 登录 QSS。



2. 转到**配置 > VLAN**。
3. 单击**添加**。  
此时会打开**添加 VLAN** 窗口。
4. 指定 VLAN ID。
5. 指定 VLAN 名称。
6. 选择要包括在 VLAN 中的端口。  
仅已标记的端口可以属于多个 VLAN。
7. 单击**保存**。

QSS 随即添加 VLAN。

## 添加链路聚合组 (LAG)


使用链路聚合控制协议 (LACP)，可以将多个交换端口合并到一个逻辑网络接口中。这可以确保提高吞吐量，并实现冗余。如果某个端口发生故障，流量还会在其余端口继续。



**链路聚合**页面显示有关现有链路聚合组的信息，同时还可以通过此页面访问配置选项。



### 警告

为防止 LAG 配置过程中发生网络循环错误，在所有设备上配置好 LAG 之前，请勿使用多条网线将交换机连接到其他设备。您可以启用循环保护以避免连接的网络中发生网络循环。

1. 登录 QSS。
2. 转到**配置 > 链路聚合**。
3. 指定组。
4. 单击 。  
此时会打开**编辑组**窗口。
5. 配置组设置。

设置	描述
模式	控制组的链路聚合模式 <ul style="list-style-type: none"> <li>• <b>LACP</b>：使用 IEEE 802.3ad 协议将链路聚合控制协议数据单元 (LACPDU) 发送到连接的设备以建立链路聚合。这样您就可以控制将多个物理链路绑定到一个逻辑链路中。</li> <li>• <b>静态</b>：不使用 LACP 协议建立链路聚合</li> </ul> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p><b>重要</b> 确保在将电缆连接到交换机之前配置 LAG 以免产生数据循环。</p> </div> </div>
端口配置	指定组中要包含哪些端口 <div style="display: flex; align-items: center; margin-top: 10px;">  <div style="margin-left: 10px;"> <p><b>注</b> 请确保为 LAG 中的所有成员端口配置相同的设置。</p> </div> </div>

6. 单击**保存**。

QSS 随即更新组设置。



**注**  
将 LAG 分配给 VLAN 时，QNAP 建议从 VLAN 移除单个 LAG 端口成员，然后按需将整个组添加到 VLAN。如果未移除单个端口成员，VLAN 将重置为默认设置。

## 管理快速生成树协议 (RSTP) 设置

RSTP 提供了生成树的快速收敛，并为交换机网络构建了无环路拓扑。RSTP 支持在活动链路发生故障时启用备份链路。



- 注**
- RSTP 默认处于禁用状态。
  - 交换机的默认网桥优先级为 32768。

### 启用或禁用 RSTP

1. 登录 QSS。
2. 转到 **配置 > RSTP > RSTP 配置**。
3. 指定一个端口。
4. 启用或禁用 RSTP。

切换设置	描述
	单击可启用 RSTP 功能。
	单击可禁用 RSTP 功能。

5. 单击 **保存**。

QSS 随即保存设置。

### 设置网桥优先级

您可以在 RSTP 配置字段中配置交换机的 RSTP 网桥优先级。

1. 登录 QSS。
2. 转到 **配置 > RSTP > RSTP 配置**。
3. 启用 RSTP。



**注**  
有关详细信息，请参见 [启用或禁用 RSTP](#)。

4. 从下拉列表中选择 RSTP 网桥优先级。




- 注**
- 默认网桥优先级为 32768。
  - 有关根网桥优先级，QNAP 建议将该值设置为零。

### 5. 单击保存。

QSS 随即更新 RSTP 网桥优先级。

## 添加静态 MAC 地址

MAC 地址表跟踪 MAC 地址并通过特定端口转发相关的单播流量。

1. 登录 QSS。
2. 转到配置 > MAC 地址表。
3. 在动态 MAC 地址老化时间旁边，单击 。



**注**  
您可以配置条目在 MAC 表中保留的时间。

4. 请指定介于 10 到 630 秒之间的老化时间。
5. 单击 。
6. 单击添加。  
此时会打开添加静态 MAC 地址窗口。
7. 配置 MAC 地址设置。
  - a. 指定 VLAN ID。
  - b. 指定 MAC 地址。
  - c. 选择交换端口。
8. 单击保存。  
添加静态 MAC 地址窗口随即关闭。

QSS 随即添加 MAC 地址。

## 添加访问控制列表条目

通过访问控制列表 (ACL)，可以使用受控规则集处理交换机内的网络流量。每个 ACL 规则是用户创建的一组条件，供交换机用于确定数据包是否可以通过网络。如果数据包与现有 ACL 规则匹配，则交换机使用此规则确定是允许还是拒绝该数据包。如果没有匹配的 ACL 规则或者没有任何 ACL 规则，则交换机将应用默认规则。

1. 登录 QSS。
2. 转到配置 > ACL。
3. 单击添加。  
此时会打开添加 ACL - IP 地址窗口。
4. 配置 ACL 设置。

设置	用户操作
ACL 编号	指定 ACL 条目的编号 此值必须介于 1 至 250 之间

设置	用户操作
协议	选择受 ACL 条目影响的流量类型 <ul style="list-style-type: none"> <li>• <b>TCP</b>: 允许或拒绝 TCP IP 流量。</li> <li>• <b>UDP</b>: 允许或拒绝 UDP IP 流量。</li> </ul>
<b>来源</b>	
IP 地址	指定传入连接的 IP 地址
子网掩码	指定传入连接使用的子网掩码
服务端口	指定传入连接使用的端口号
<b>目标</b>	
IP 地址	指定源连接访问的 IP 地址
子网掩码	指定源连接访问的子网掩码 <div style="border-left: 2px solid red; padding-left: 10px; margin-top: 10px;"> <p><b>重要</b> 如果未指定源，请将子网掩码设置为 255.255.255.255。如果设置为 255.255.255.0，则将为整个子网配置该条目。</p> </div>
服务端口	指定源连接访问的端口号
权限	指定用于此 ACL 条目的权限类型 <ul style="list-style-type: none"> <li>• <b>允许</b>: 允许已配置 IP 地址的访问</li> <li>• <b>拒绝</b>: 限制已配置 IP 地址的访问</li> </ul>

**注**

如果来源或目标字段留空，则权限设置将应用于所有连接。


5. 选择要应用 ACL 规则的交换端口。
6. 单击**保存**。

QSS 随即添加 ACL 条目。


## 配置 IGMP 侦听

Internet 组管理协议 (IGMP) 管理 IP 多播组的成员关系。IP 主机和相邻的多播路由器使用 IGMP 来建立多播组成员关系。

**IGMP 侦听**页面显示有关检测到的 IGMP 组的信息，同时还可以通过此页面访问 IGMP 侦听配置选项。

1. 登录 QSS。
2. 转到**配置 > IGMP 侦听**。
3. 单击 。  
QSS 随即启用 IGMP 侦听。
4. 配置 IGMP 侦听设置。

设置	描述
<b>IGMP 查询器</b>	使用交换机将定期查询数据包发送到多播组以免出现多播流量丢失
<b>多播泛洪阻止</b>	阻止来自未知源的多播泛洪

设置	描述
路由器端口	<p>指定要用作交换机的路由器端口的端口 接收到 IGMP 数据包后，QSS 会通过选定的路由器端口转发控制数据包。</p> <p> <b>注</b> 如果未指定路由器端口，QSS 将自动分配一个端口以用作路由器端口。</p>
快速离开	<p>指定支持快速离开的端口 接收到 IGMP 离开消息后，QSS 会停止向选定的快速离开端口转发多播流量。</p>

#### 5. 单击保存。

QSS 随即保存 IGMP 侦听设置。

## 配置 QoS 设置

服务质量(QoS)通过对不同的网络设备和数据包进行分类和优先级排序来改善网络流量的形成。

1. 登录 QSS。
2. 转到配置 > QoS。
3. 选择 QoS 模式。

模式	描述
基于端口	对每个端口的流量进行优先级排序。按队列值安排时间的数据包从交换端口传输。
基于 VLAN	对每个 VLAN 的流量进行优先级排序。包含 VLAN ID 的数据包根据队列值安排传输时间。

4. 配置优先级。  
队列 0 的优先级最低，队列 7 的优先级最高。
5. 单击应用。


QSS 随即更新 QoS 设置。



#### 提示

要在设备上禁用 QoS，请将所有端口基于端口或基于 VLAN 的优先级改为相同的优先级。

## 配置 QoS 速率限制

1. 登录 QSS。
2. 转到配置 > QoS > 速率限制。
3. 指定一个端口。
4. 单击 。  
此时会打开配置速率限制窗口。
5. 配置速率限制。
  - a. 可选: 选择其他端口。  
速率限制也将应用于其他端口。

- b. 移动滑块以选择入口速率。
- c. 移动滑块以选择出口速率。



#### 提示


- 或者选择**匹配速率**，使出口速率与入口速率相匹配。
- 启用**无限制**可允许不受限制的入口或出口流量。

#### 6. 单击**保存**。

QSS 随即保存速率限制。

## 配置端口镜像

端口镜像监视网络流量，并将数据包的副本从一个网络交换机端口转发到另一个网络交换机端口。

1. 登录 QSS。
2. 转到**配置 > 端口镜像**。
3. 单击 。  
QSS 随即启用端口镜像。
4. 选择镜像类型。

镜像类型	描述
传输并接收	镜像所有数据包至目标端口
仅传输	仅将传出数据包镜像至目标端口
仅接收	仅将传入数据包镜像至目标端口

5. 选择源端口。



#### 提示

可以同时选择多个源端口。

6. 选择目标端口。
7. 单击**保存**。

QSS 随即保存设置。

## 启用或禁用 LLDP

链路层发现协议 (LLDP) 使用定期广播在网络上播发设备信息并发现邻近设备。此协议在运行时建立分布式数据库并从网络链路连接的邻近端口收集信息。

**LLDP** 页面显示有关检测到的设备的信息，同时可在此页面启用或禁用 LLDP。

1. 登录 QSS。
2. 转到**配置 > LLDP**。
3. 启用或禁用 LLDP。


切换设置	用户操作
	单击可启用 LLDP 功能。
	单击可禁用 LLDP 功能。



#### 4. 单击保存。

QSS 随即保存设置。

## 配置循环保护

当数据包持续在端口间转发时，将发生循环。网络循环通常会导致网络性能显著下降。启用循环保护可临时禁用受影响的接口以免网络性能下降。

1. 登录 QSS。
2. 转到配置 > 循环保护。
3. 在循环保护旁，单击 。
4. 配置循环保护设置。

设置	描述
传输时间	控制传输循环保护数据包之间的间隔时间   <b>注</b> <ul style="list-style-type: none"> <li>• 默认传输时间为 5 秒。</li> <li>• 此值必须介于 1 到 10 秒之间。</li> </ul>
关闭时间	控制检测到循环后禁用端口的时间   <b>注</b> <ul style="list-style-type: none"> <li>• 默认关机时间为 180 秒。</li> <li>• 此值必须介于 0 到 604800 秒之间。</li> </ul>

#### 5. 单击保存。

QSS 随即保存设置。

## 系统管理




可在 QSS 导航菜单的**系统**部分访问设备配置选项。

## 系统设置

**系统设置**菜单包含交换机的系统信息、IP 信息、密码设置、安全连接设置以及时间设置等系统配置选项。

## 更改交换机名称



1. 登录 QSS。
2. 转到**系统 > 系统设置 > 系统信息**。

3. 单击 。
4. 指定设备名称：  
要求：
  - 长度：1-20 个字符
  - 有效字符：A-Z、a-z、0-9
  - 有效特殊字符：连字符 (-)
5.  单击  确认交换机名称。

QSS 随即更新交换机名称。

### 配置连接设置

1. 登录 QSS。
2. 转到 **系统 > 系统设置 > IP**。
3. 单击 **添加**。  
此时会出现 **添加 VLAN 管理 IP** 窗口。
4. 指定介于 1 到 4000 之间的 VLAN ID。
5. 配置连接设置。



设置	描述
自动获取 IP 与 DNS	从 DHCP 服务器自动获取 IP 和 DNS 信息。   <b>提示</b> 单击  刷新 IP 和 DNS 信息。
手动设置 IP 与 DNS	手动指定 IP 地址、子网、网关和 DNS 信息。

6. 单击 **保存**。

QSS 随即更新连接设置。

### 更新交换机密码

1. 登录 QSS。
2. 转到 **系统 > 系统设置 > 密码**。
3. 指定一个新密码。

 **提示**  
单击  可显示密码。

设置	用户操作
当前密码	指定设备的当前密码
新密码	指定包含 8 至 20 个 ASCII 字符的密码。
确认新密码	重新输入新密码



#### 4. 单击保存。

QSS 随即从交换机界面中将您注销。您可以使用新密码访问交换机。

### 配置时间设置



**注**  
必须正确配置系统时间以确保下列各项：

- 使用 Web 浏览器连接到设备或保存文件时，显示的操作时间正确。
- 事件日志反映事件发生的确切时间。
- 计划性任务在正确的时间运行。

1. 登录 QSS。
2. 转到**系统 > 系统设置 > 时间**。
3. 指定时区。
4. 指定时间配置。

设置	描述
<b>与 Internet 时间服务器同步</b>	确保设备连接到 Internet，然后指定以下信息： <b>服务器：</b> 指定网络时间协议 (NTP) 服务器。 示例：time.nist.gov、time.windows.com
<b>手动配置</b>	指定日期和时间。

5. 配置夏令时 (DST) 设置。
  - **禁用：**禁用 DST 设置。
  - **手动调整系统时钟：**允许手动配置开始时间、结束时间和时差设置。
6. 单击保存。

QSS 随即更新时间设置。

### 备份系统设置

1. 登录 QSS。
2. 转到**系统 > 系统设置 > 备份和恢复**。
3. 单击**备份**。

设备会将系统设置导出为 BIN 文件，并将该文件下载至计算机。

### 恢复系统设置



**警告**  
如果选定的备份文件包含设备上已存在的用户或用户组信息，系统将覆盖现有信息。

1. 登录 QSS。
2. 转到**系统 > 系统设置 > 备份和恢复**。  
此时会打开文件资源管理器窗口。

3. 单击浏览。
4. 选择包含设备系统设置的有效 BIN 文件。
5. 单击恢复。

QSS 随即会恢复交换机设置。

## 重置交换机密码




注

- 还可以按住实体重置按钮 5 秒，重置交换机密码。
- 系统重置后，将自动启用默认“admin”帐户。

1. 登录 QSS。
2. 转到系统 > 系统设置 > 备份和恢复。
3. 单击密码重置。

QSS 随即重置交换机密码。

默认用户名	默认密码
admin	交换机映像的 MAC 地址会省略所有标点并大写所有字母。   <b>提示</b> 例如，如果 MAC 地址为 00:0a:0b:0c:00:01，则默认密码为 000A0B0C0001。 您可以使用 Qfinder Pro 找到 MAC 地址。设备上的贴纸也印有带“MAC”字样的 MAC 地址。

## 将交换机重置为出厂设置

重置交换机会删除设备上存储的数据，并将交换机恢复到默认的出厂设置。



提示

还可以按住实体重置按钮 10 秒，将交换机重置为出厂默认设置。

1. 登录 QSS。
2. 转到系统 > 系统设置 > 备份和恢复。
3. 单击恢复出厂设置。  
此时会出现确认消息。
4. 单击是。

QSS 随即将交换机重置为出厂默认设置。



注

要再次登录到界面，必须使用 Qfinder Pro 查找设备。有关详细信息，请参见[交换机访问](#)。

## 启用安全连接 (HTTPS)

1. 登录 QSS。

2. 转到**系统 > 系统设置 > HTTPS**。
3. 选择**启用安全连接(HTTPS)**。
4. 选择 TLS 版本。

**注**

选择 TLS 的最新版本以最大程度地提高系统安全性。确保系统满足 TLS 要求以避免兼容性问题。

5. 可选: 选择**强制使用安全连接(HTTPS)**。

**注**

启用此设置后，仅可通过 HTTPS 访问 Web 管理页面。

6. 单击**保存**。



QSS 随即保存安全连接设置。

## 配置 SNMP 设置

简单网络管理协议 (SNMP) 用于收集和组织有关网络上托管设备的信息。启用 SNMP 服务可以直接向网络管理站 (NMS) 立即报告诸如警告或错误等事件。

1. 登录 QSS。
2. 转到**系统 > 系统设置 > SNMP**。
3. 选择**启用 SNMP 服务器**。
4. 选择 NMS 使用的 SNMP 版本。

选项	用户操作
<b>SNMPv2c</b>	<p>指定由以下各组中的任何字符构成，包含 1 至 64 个字符的 SNMP 社区名称：</p> <ul style="list-style-type: none"> <li>• 字母：A 至 Z、a 至 z</li> <li>• 数字：0 至 9</li> </ul> <p>SNMP 社区字符串充当用于对 NMS 和设备之间所发送消息进行身份验证的密码。NMS 和 SNMP 代理之间所传输的每个数据包均包含社区字符串。</p>

选项	用户操作
<b>SNMPv3</b>	<p>指定用户名、身份验证协议和密码以及加密协议和密码。</p> <p>a. 指定用户名。</p> <p> <b>注</b> 用户名由以下各组中的任何字符构成，包含 1 至 32 个字符：</p> <ul style="list-style-type: none"> <li>• 字母：A 至 Z、a 至 z</li> <li>• 数字：0 至 9</li> <li>• 多字节字符：中文、日语、韩语和俄语</li> <li>• 特殊字符：除 "'/\ 之外的所有字符</li> </ul> <p>b. 可选： 选择<b>身份验证</b>。</p> <p>1. 指定身份验证协议。</p> <p> <b>提示</b> 可以选择 <b>HMAC-MD5</b> 或 <b>HMAC-SHA</b>。如果您不确定此设置，QNAP 建议选择 <b>HMAC-SHA</b>。</p> <p>2. 指定包含 8 至 64 个 ASCII 字符的身份验证密码。</p> <p>c. 可选： 选择<b>隐私</b>。</p> <p>1. 指定包含 8 至 64 个 ASCII 字符的加密密码。</p>

#### 5. 选择 SNMP 陷阱。

SNMP 陷阱	描述
<b>coldStart</b>	coldStart 陷阱表示 SNMP 实体正在自行重新初始化，以便更改代理配置或协议实体实现。
<b>warmStart</b>	warmStart 陷阱表示 SNMP 实体正在自行重新初始化，以便代理配置或协议实体实现可以保持不变。
<b>linkUp</b>	linkUp 陷阱表示发送协议实体获知，代理配置中显示的通信链路之一已变为活动状态。
<b>linkDown</b>	linkDown 陷阱表示发送协议实体获知，代理配置中显示的通信链路之一出现故障。

#### 6. 指定主机或目标收件人的陷阱地址。

#### 7. 单击**保存**。

QSS 随即保存 SNMP 设置。

### 配置智能风扇设置



1. 登录 QSS。
2. 转到**系统 > 系统设置 > 智能风扇**。
3. 选择风扇转速模式。

选项	描述
正常(建议)	风扇以正常速度运行。此为默认设置。
静音	风扇低速运行以降低噪声。
全速	风扇高速运行以降低系统温度。此模式适合负载较高的系统。

#### 4. 单击保存。

QSS 随即保存 SNMP 设置。

### 重新启动交换机

1. 登录 QSS。
2.  单击位于页面右上角的 。
3. 单击重新启动交换机。  
此时会出现确认消息。
4. 单击是。

QSS 随即重新启动交换机。

### 查看交换机上的信息

要查看交换机的硬件和系统信息，可以转到**系统 > 系统设置 > 系统信息**。

该屏幕提供以下信息。

信息	描述
交换机名称	显示交换机的默认名称或修改后的名称
型号名称	显示交换机的型号名称
MAC 地址	显示交换机的 MAC 地址
IP 地址	显示交换机的 DHCP 或静态 IP 地址
系统运行时间	显示系统的运行时间
当前固件版本	显示交换机的固件映像版本

### 管理交换机日志

您可以基于日志的严重性级别筛选日志，搜索特定日志文件，或将其全部删除。这些日志可用于诊断问题或监控交换机操作。

1. 登录 QSS。
2. 转到**系统 > 日志**。
3. 执行以下任一任务。

任务	用户操作
搜索日志文件	<ol style="list-style-type: none"> <li>a. 找到<b>搜索</b>字段。</li> <li>b. 输入搜索词。</li> </ol>

任务	用户操作
删除日志文件	<p>a. 单击<b>清除</b>。 此时会打开<b>清除日志</b>窗口。</p> <p>b. 单击<b>清除</b>。</p>

QSS 将执行指定的任务。

## 固件管理


QNAP 建议设备固件始终保持最新版本。这可确保您的设备可以从新 QSS 软件功能、安全更新、增强功能和错误修复中获益。

可以使用以下方法之一更新固件：

更新方法	描述
使用 <b>检查更新</b>	QSS 会自动检测固件更新并将其安装到您的设备上。 有关详细信息，请参见 <b>检查实时更新</b> 。
使用 <b>固件更新</b>	您可以在 <a href="#">QNAP 网站</a> 上检查固件更新，将固件更新下载到计算机并将固件更新手动安装到您的设备。 有关详细信息，请参见 <b>手动更新固件</b> 。

## 固件更新要求

设备必须符合以下要求才能执行固件更新：

要求	描述
硬件设备	<ul style="list-style-type: none"> <li>一台计算机</li> <li>以太网线</li> </ul> <p> <b>注</b> QNAP 建议使用有线以太网连接更新固件，以确保在固件更新过程中网络连接保持稳定。</p>
管理员权限	您必须是交换机管理员或具有管理权限才能更新固件。
停止交换机操作	QNAP 建议在固件更新前停止所有其他交换机操作。要使固件更新生效，必须重新启动交换机，并且可能会中断正在进行的交换机服务或操作。
设备型号名称	<p>确保您具有正确的交换机型号名称。您可以使用以下方法之一找到交换机型号名称：</p> <ul style="list-style-type: none"> <li>在设备底部或后面的贴纸上找到设备型号名称。</li> <li>转到<b>系统 &gt; 固件更新 &gt; 实时更新 &gt; 型号名称</b>。</li> <li>查看 QSS 顶部横幅上的型号名称。</li> </ul>
固件版本	如果正在使用 <b>固件更新</b> 手动更新固件，请确保所选固件版本适用于您的设备型号。

## 检查实时更新



**警告**

- 为防止数据丢失，QNAP 建议您在更新固件前备份设备上的所有数据。有关详细信息，请参见[备份系统设置](#)。
- 在固件更新过程中不要关闭设备。



### 重要

- 在更新固件前，确保您已查看[固件更新要求](#)的全部内容。
- 更新可能需要花费数分钟或更长时间，具体取决于硬件配置和网络连接。

1. 登录 QSS。
2. 转到 **系统 > 固件更新 > 实时更新**。
3. 单击 **检查更新**。  
QSS 将检查是否有固件更新可用。如果有可用更新，您可以选择更新 QSS。
4. 单击 **更新系统**。  
此时会出现确认消息。
5. 单击 **更新**。

QSS 随即更新固件。

## 手动更新固件



### 警告

- 为防止数据丢失，QNAP 建议您在更新固件前备份设备上的所有数据。有关详细信息，请参见[备份系统设置](#)。
- 在固件更新过程中不要关闭设备。



### 重要

- 在更新固件前，确保您已查看[固件更新要求](#)的全部内容。
- 更新可能需要花费数分钟或更长时间，具体取决于硬件配置和网络连接。

1. 下载设备固件。
  - a. 转到 <http://www.qnap.com/download>。
  - b. 选择产品类型。
  - c. 选择您的设备型号。
  - d. 阅读发行说明并确认以下信息：
    - 设备型号与固件版本匹配。
    - 需要更新固件。
    - 检查是否有其他固件更新设置说明。
2. 确保产品型号与固件正确。
3. 根据您的位置选择下载服务器。

4. 下载固件包。
5. 单击**浏览**。
6. 选择一个文件夹。
7. 保存下载的固件包。
8. 解压缩固件映像文件。
9. 登录 QSS。
10. 转到**系统 > 固件更新 > 固件更新**。
11. 单击**浏览**，然后选择解压缩后的固件映像文件。
12. 单击**更新系统**。  
此时会出现确认消息窗口。
13. 单击**更新**。

QSS 将更新固件，且设备会立即启动。



## 6. 支持和其他资源

QNAP 提供了以下资源：

资源	URL
文档	<a href="https://docs.qnap.com">https://docs.qnap.com</a>
服务门户	<a href="https://service.qnap.com">https://service.qnap.com</a>
下载	<a href="https://download.qnap.com">https://download.qnap.com</a>
社区论坛	<a href="https://forum.qnap.com">https://forum.qnap.com</a>

## 7. 术语表

### **Qfinder Pro**

一种 QNAP 实用工具，可用于查找和访问局域网中的 QNAP 设备

### **QSS**

QNAP 交换机管理操作系统

## 8. 声明

本章提供有关保修、免责声明、许可和联邦法规的信息。

### 有限保修

QNAP 为本公司产品提供有限保修服务。自发票注明日期起一 (1) 年或更长期限内，QNAP 品牌的硬件产品享受材料和工方面艺缺陷的保修服务。("保修期")。请访问 [www.qnap.com/warranty](http://www.qnap.com/warranty) 查看您的法定权利 (QNAP 可不时自行修改这些权利)。

### 免责声明

本文档中提供的信息与 QNAP Systems, Inc. (即 "QNAP") 的产品有关。本文档未通过禁止反言或其他方式授予对任何知识产权的明示或暗示许可。除非在 QNAP 针对此类产品的销售条款和条件中明确注明，QNAP 不承担任何责任，并且 QNAP 不提供任何与 QNAP 产品的销售和/或使用有关的明示或暗示的担保，包括与特定用途的适用性、适销性或者侵犯任何专利、版权或其他知识产权有关的责任或担保。

QNAP 产品不适用于医疗、救生、生命维持、关键控制、安全系统或核设施应用。

在任何情况下，对于因使用本产品、其随附软件或文档而导致的直接、间接、特殊、偶发或继发损失，QNAP 的赔偿责任均不超出产品售价。QNAP 对其产品或本文档的内容或使用以及所有随附软件，不做任何明示、暗示或法定的保证或表述，并特别声明，不保证其质量、性能、适销性或适用于任何特定用途。QNAP 保留修改或更新其产品、软件或文档的权利，无需通知任何个人或实体。

建议定期备份系统，以避免任何潜在的数据丢失。QNAP 对所有类型的数据丢失或恢复不承担任何责任。

如果退回 QNAP 产品 (例如 NAS，网络连接存储) 包装中的任何组件进行退款或维修，请务必妥善包装以便运输。对于因包装不当而造成的任何形式的损坏，QNAP 将不予赔偿。

所有特性、功能和其他产品规格如有更改，恕不另行通知，亦不承担任何责任。本文所包含的信息如有更改，恕不另行通知。

此外，文中未使用 ® 或 ™ 符号。

### 版权和商标

版权所有 © 2023 QNAP Systems, Inc. 保留所有权利。

QNAP 和其他 QNAP 产品名称及徽标是 QNAP Systems, Inc. 的专有标志、商标或注册商标。



词语 HDMI、HDMI High-Definition Multimedia Interface (高清晰度多媒体接口)、HDMI 商业外观和 HDMI 徽标均为 HDMI Licensing Administrator, Inc. 的商标或注册商标。

本文提及的其他公司名称和产品是其各自持有者的商标或注册商标。

### GNU General Public License

Version 3, 29 June 2007

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

## Preamble

The GNU General Public License is a free, copy left license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program--to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

## Terms and Conditions

### 1. Definitions.

"This License" refers to version 3 of the GNU General Public License.

"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you". "Licensees" and "recipients" may be individuals or organizations.

To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.

A "covered work" means either the unmodified Program or a work based on the Program.

To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a

computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well. To “convey” a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays “Appropriate Legal Notices” to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

## 2. Source Code.

The “source code” for a work means the preferred form of the work for making modifications to it.

“Object code” means any non-source form of a work.

A “Standard Interface” means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The “System Libraries” of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A “Major Component”, in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The “Corresponding Source” for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work’s System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

## 3. Basic Permissions.

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below.

Sublicensing is not allowed; section 10 makes it unnecessary.

## 4. Protecting Users' Legal Rights From Anti-Circumvention Law.

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

**5. Conveying Verbatim Copies.**

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

**6. Conveying Modified Source Versions.**

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- a. The work must carry prominent notices stating that you modified it, and giving a relevant date.
- b. The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".
- c. You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.
- d. If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.  
A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

**7. Conveying Non-Source Forms.**

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a. Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b. Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this

conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.

- c. Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d. Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e. Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

"Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

## 8. Additional Terms.

"Additional permissions" are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used



separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a. Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b. Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c. Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d. Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e. Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f. Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors. All other non-permissive additional terms are considered “further restrictions” within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

## 9. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.



**10. Acceptance Not Required for Having Copies.**

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

**11. Automatic Licensing of Downstream Recipients.**

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An "entity transaction" is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

**12. Patents.**

A "contributor" is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's "contributor version". A contributor's "essential patent claims" are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, "control" includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement

with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

**13. No Surrender of Others' Freedom.**

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

**14. Use with the GNU Affero General Public License.**

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

**15. Revised Versions of this License.**

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

**16. Disclaimer of Warranty.**

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

**17. Limitation of Liability.**

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE

PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### 18. Interpretation of Sections 16 and 17.

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

END OF TERMS AND CONDITIONS

## CE 声明



本设备符合 CE 合规性 A 类标准。

## FCC 声明

### FCC A 类声明



此设备符合 FCC 规则的第 15 部分的要求。运行需满足下面两个条件：

1. 本设备不会产生有害干扰。
2. 本设备必须承受受到的干扰，包括可能导致运行异常的干扰。



#### 注

经测试，本设备符合 FCC 规则第 15 部分中针对 A 类数字设备的限制标准。这些限制标准旨在提供合理的保护，以防止在商业环境中运行设备时产生有害干扰。本设备会产生、使用并可发出射频能量，如果不按说明手册安装和使用，可能会对无线电通信产生有害干扰。在住宅区运行本设备可能会造成有害干扰，用户需自付费用消除干扰。



#### 重要

若未经 QNAP Systems, Inc. 批准对本设备进行改动，可能会导致用户失去 FCC 授予的操作本设备的资格。

## VCCI 声明



この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

VCCI-A

## BSMI 声明



D33B77  
RoHS

警告：為避免電磁干擾，本產品不應安裝或使用於住宅環境。

## SJ/T 11364-2006



本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	0	0	0	0	0	0
显示	0	0	0	0	0	0
印刷电路板	0	0	0	0	0	0
金属螺帽	0	0	0	0	0	0
电缆组装	0	0	0	0	0	0
风扇组装	0	0	0	0	0	0
电力供应组装	0	0	0	0	0	0

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电池	0	0	0	0	0	0
O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。						
X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。						

## 废弃电子电气设备 (WEEE) 欧盟指令 2002/96/EC



根据 WEEE 法规的要求，向所有受 WEEE 指令约束的 QNAP 品牌电子产品提供以下用户信息。

产品或其包装上的此标志表示该产品不得与其他生活垃圾一起处理。相反，您有责任将废弃设备移交给指定的回收废弃电气和电子设备的回收点，来处置废弃设备。在处置时对废弃设备进行单独收集和回收，将有助于保护自然资源，并确保以保护人类健康和环境的方式进行回收。有关废弃设备回收点位置的更多信息，请联系您当地的市政府、生活垃圾处理服务或购买产品的商店。

## EU RoHS 声明

本设备符合关于限制在电子电器设备中使用某些有害成分的欧盟 RoHS 指令 2011/65/EU。该指令适用于在电子电器设备中使用铅、汞、镉、六价铬、多溴联苯 (PBB) 和多溴联苯醚 (PBDE)。

## 激光合规声明

确保光纤小型可插拔 (SFP) 模块符合 CNS 15016-2 或 IEC 60852-1 认证和 1 类激光规范。

使用光纖可插拔 (SFP) 模組時，請確保它通過了 CNS 15016-2 或 IEC 60825-1 認證和 1 類激光產品。

## UKCA 声明



此设备符合在英国销售产品的 UKCA 要求。