

# TS-x62、 TS-x64

**TS-262**

**TS-462**

**TS-264**

**TS-464**

**TS-664**

## 用户指南

# 目录

## 1. 重要信息

|           |   |
|-----------|---|
| 安全信息..... | 3 |
|-----------|---|

## 2. 产品概述

|                         |    |
|-------------------------|----|
| 关于 TS-x62 和 TS-x64..... | 6  |
| 硬件规格.....               | 6  |
| 包装内容.....               | 11 |
| 组件.....                 | 12 |
| 前面板.....                | 12 |
| 后面板.....                | 14 |
| 系统主板.....               | 18 |
| 正面硬盘编号.....             | 20 |
| 网络端口编号.....             | 22 |
| USB 端口编号.....           | 23 |
| 安装要求.....               | 24 |
| 设置 NAS.....             | 24 |

## 3. 安装和配置

|  |    |
|--|----|
| 硬件安装.....                                    | 25 |
| 硬盘安装.....                                    | 25 |
| 更换内存模块 (TS-462-2G、TS-464-4G、TS-664-4G) ..... | 40 |
| 安装扩展卡.....                                   | 46 |
| 扩展单元安装.....                                  | 52 |
| QTS 安装.....                                  | 55 |
| 使用 Qfinder Pro 初始化 QTS.....                  | 56 |
| 使用云安装网站初始化 QTS.....                          | 59 |
| 使用 HDMI 连接初始化 QTS.....                       | 63 |

## 4. 基本操作

|                 |    |
|-----------------|----|
| 电源按钮.....       | 65 |
| 重置按钮.....       | 65 |
| USB 一键复制按钮..... | 66 |
| LED.....        | 66 |
| 警告音.....        | 69 |

## 5. NAS 移

|                         |    |
|-------------------------|----|
| NAS 移要求.....            | 70 |
| NAS 移后的状态和设置变化.....     | 70 |
| 迁移 NAS.....             | 72 |
| 使用 HBS 3 移迁 NAS 数据..... | 72 |
| 准备目标 NAS.....           | 72 |
| 创建单向同步作业.....           | 73 |
| 将本地用户或组设置导入目标 NAS.....  | 75 |

## **6. 故障排除**

|  |    |
|--|----|
| 强制 Qfinder Pro 或 myQNAPcloud 定位 NAS..... | 77 |
| 热插拔故障硬盘.....                             | 77 |
| 恢复意外移除的硬盘.....                           | 78 |
| 支持和其他资源.....                             | 78 |

## **7. 术语表**

|                       |    |
|-----------------------|----|
| Cloud Key.....        | 80 |
| myQNAPcloud.....      | 80 |
| myQNAPcloud Link..... | 80 |
| Qfinder Pro.....      | 80 |
| QNAP ID.....          | 80 |
| QTS.....              | 80 |

## **8. 声明**

|                                 |    |
|---------------------------------|----|
| 有限保修.....                       | 81 |
| 免责声明.....                       | 81 |
| 版权和商标.....                      | 81 |
| GNU General Public License..... | 82 |
| CE 声明.....                      | 90 |
| UKCA 声明.....                    | 91 |
| FCC 声明.....                     | 91 |
| VCCI 声明.....                    | 92 |
| BSMI 声明.....                    | 92 |
| SJ/T 11364-2006.....            | 92 |

# 1. 重要信息

## 原始包装

请保留原始包装和包装材料。如果要将产品退货或寄回进行修理，请使用原始包装以免损坏。

对于因包装不当受损的产品，QNAP 保留不提供退款或保修服务的权利。

## 硬件缺陷

如果您的 QNAP 产品有硬件方面的缺陷，请将产品退回 QNAP 或 QNAP 授权的服务中心进行维修或更换。您本人或未经授权的第三方对产品进行的任何维修或维护流程均会使保修失效。

对于因未经授权进行的修改和安装不受支持的第三方应用程序而造成的任何损坏或数据丢失，QNAP 概不负责。

有关详细信息，请参见 [QNAP 产品保修服务条款](#)。

## 安全信息

以下说明有助于确保个人安全和环境安全。在执行任何操作之前，请仔细阅读这些说明。

### 一般说明

- 设备应存放在通过器具、锁和钥匙或任何安保措施限制进入的安全场所。
- 只有经过授权并掌握技能的合格人员才能实际接触设备，相关人员需了解所有限制措施、安全预防措施和安装维护流程。

### ⚠ 警告



为避免潜在伤害或组件的损坏，请务必等硬盘和其他内部系统组件冷却后再触碰。



请执行静电放电 (ESD) 规程，以避免可能的人员受伤或组件受损。

## 电源

### !**警告**



为降低失火或触电风险，请确保只将电源线连接到接地良好的电源插座。



为避免受到严重伤害，安装或更换系统组件前，经培训的维修技师必须先从设备拔下所有电源单元线。

## 运动的部件

### !**警告**



**转动的风扇叶片：**在设备连接到电源时，使您的身体各部位远离任何正在转动的风扇叶片。



**运动的组件：**使您的身体各部位远离任何正在运动的其他组件。

设备不适合在儿童可能会出现的场所使用。

## 系统电池

### !**警告**



#### 摄入危险

- 此产品配有纽扣电池。
- 请避免儿童接触电池。
- 如果被吞食，锂纽扣电池可能会在 2 小时内导致严重或致命伤害。
- 如果您认为可能电池已被吞食或部于身体的某个部位，请立即就医求助。

- 为避免潜在的电池爆炸、导致人员受伤或组件受损，请确保使用同型电池更换现有电池。
- 请按当地法规或电池制造商的指示正确处置使用过的电池。
- 即使是使用过的电池，也可能导致严重伤害或死亡。
- 有关诊疗信息，请致电当地中毒控制中心。
- 有关设备中纽扣电池类型和电压的信息，请参见硬件规格表。

- 非充电电池不可充电。
- 请勿强行放电、充电、拆卸、加热或焚烧。这样做可能会导致因通风、泄漏或爆炸造成的化学烧伤而导致的伤害。
- 确保电池按照极性（+ 和 -）正确安装。
- 请勿将新旧电池或不同品牌、不同类型的电池（如碱性电池、碳锌电池、充电电池等）混用。
- 对于长时间不使用的设备，请根据当地法规取出并立即回收或处理电池。
- 始终完全固定电池盒。如果电池盒无法牢固关闭，请停止使用本产品，取出电池，并将电池置于儿童接触不到的地方。

## 导轨套件

机架式型号可能需要导轨套件以便安装到服务器机架或机柜上。

为确保设备和人身安全，在安装导轨套件和安装设备之前，请仔细阅读导轨套件的安装说明。

要检查您的设备是否为机架式设备，请参见硬件规格表。

### ⚠ 警告

- 当导轨套件安装在服务器机架上时，除安装或拆卸设备外，请勿将导轨完全展开或拔掉闩锁。
- 如果导轨完全展开并拔掉闩锁，可能会导致重型设备坠落。这可能会导致设备损坏，以及严重甚至致命的伤害。
- 在准备导轨以安装或拆卸设备前，请仔细阅读并确保理解安装说明。
- 安装或拆卸设备时，请勿在设备或导轨上放置任何物品或增加任何额外的负重。
- 安装设备时，请将设备完全推入服务器机架，使导轨完全锁住，并将设备固定在服务器机架上。

## 2. 产品概述

本章提供有关 QNAP 设备的基本信息。

### 关于 TS-x62 和 TS-x64

TS-x62 和 TS-x64 QNAP NAS 系列配有针对专用备份作业优化的硬件、AI 驱动的应用程序、多媒体流式传输和 VPN 服务。Intel® Celeron® CPU 集成了 GPU，后者提供 60 Hz 时最高 4K 的 HDMI 分辨率，并提高了 AI 驱动的应用程序（例如 QuMagie 和 DA Drive Analyzer）的性能。通过 M.2 SSD，QTS 操作系统还提供现代安全保护和快速缓存。TS-x62 和 TS-x64 系列是多用途 NAS 设备，可作为个人备份服务器、居家办公的 VPN 工具或多媒体管理服务器。

### 硬件规格

#### 警告

如果您的 QNAP 产品有硬件方面的缺陷，请将产品退回 QNAP 或 QNAP 授权的服务中心进行维修或更换。您本人或未经授权的第三方对产品进行的任何维修或维护流程均会使保修失效。

对于因未经授权进行的修改和安装不受支持的第三方应用程序而造成的任何损坏或数据丢失，QNAP 概不负责。

有关详细信息，请参见 [QNAP 产品保修服务条款](#)。

| 订购部件号     | CPU                   | 预安装内存                          | 硬盘架                    |
|-----------|-----------------------|--------------------------------|------------------------|
| TS-262-4G | Intel® Celeron® N4505 | 4 GB RAM（不可扩展）                 | 2 x 3.5 英寸 SATA 6 Gbps |
| TS-264-8G | Intel® Celeron® N5095 | 8 GB RAM（不可扩展）                 | 2 x 3.5 英寸 SATA 6 Gbps |
| TS-462-2G | Intel® Celeron® N4505 | 2 GB RAM: 1 x 2 GB DDR4 SODIMM | 4 x 3.5 英寸 SATA 6 Gbps |
| TS-462-4G | Intel® Celeron® N4505 | 4 GB RAM（不可扩展）                 | 4 x 3.5 英寸 SATA 6 Gbps |
| TS-464-4G | Intel® Celeron® N5095 | 4 GB RAM: 1 x 4 GB DDR4 SODIMM | 4 x 3.5 英寸 SATA 6 Gbps |
| TS-464-8G | Intel® Celeron® N5095 | 8 GB RAM（不可扩展）                 | 4 x 3.5 英寸 SATA 6 Gbps |
| TS-664-4G | Intel® Celeron® N5095 | 4 GB RAM: 1 x 4 GB DDR4 SODIMM | 6 x 3.5 英寸 SATA 6 Gbps |

| 订购部件号     | CPU                   | 预安装内存           | 硬盘架                    |
|-----------|-----------------------|-----------------|------------------------|
| TS-664-8G | Intel® Celeron® N5095 | 8 GB RAM (不可扩展) | 6 x 3.5 英寸 SATA 6 Gbps |

**重要**

- 请仅使用 QNAP 内存模块，以保证系统性能和稳定性。对于有多个内存插槽的 NAS 设备，请使用规格相同的 QNAP 模块。
- 使用不受支持的模块可能导致性能下降、引发错误或使操作系统无法启动。



为避免潜在伤害或组件的损坏，NAS 连接电源时，切勿触及风扇。

| 组件   | TS-262、TS-462   | TS-264、TS-464、TS-664             |
|--|---|----------------------------------|
| <b>处理器</b>   |   |                                  |
| CPU  | Intel® Celeron® N4505   | Intel® Celeron® N5095            |
| 频率   | 2 核/2 线程 2.00 GHz 基本/2.90 GHz 脉冲  | 4 核/4 线程 2.00 GHz 基本/2.90 GHz 脉冲 |
| 架构   | x86 64 位  |                                  |
| 加密引擎   | AES-NI  |                                  |
| 显卡   | Intel® UHD Graphics   |                                  |
| <b>内存</b>  |   |                                  |
| 内存插槽   | <ul style="list-style-type: none"> <li>• TS-262、TS-264、TS-464-8G、TS-664-8G、TS-462-4G：不可扩展内存</li> <li>• TS-462-2G、TS-464-4G、TS-664-4G：2 x DDR4 SODIMM</li> </ul> |                                  |
| <div style="background-color: #fdf5e6; padding: 10px;"> <b>重要</b> <ul style="list-style-type: none"> <li>• 请仅使用 QNAP 内存模块，以保证系统性能和稳定性。对于有多个内存插槽的 NAS 设备，请使用规格相同的 QNAP 模块。</li> <li>• 使用不受支持的模块可能导致性能下降、引发错误或使操作系统无法启动。</li> </ul> </div> |   |                                  |

| 组件           | TS-262、TS-462   | TS-264、TS-464、TS-664   |
|--------------|---|--|
| 最大内存         | <ul style="list-style-type: none"> <li>• TS-262、TS-462-4G：<br/>4 GB RAM（不可扩展）</li> <li>• TS-264、TS-464-8G、TS-664-8G：<br/>8 GB RAM（不可扩展）</li> <li>• TS-462-2G、TS-464-4G、TS-664-4G：<br/>16 GB RAM：2 x 8 GB</li> </ul>   |  |
| 闪存           | 4 GB（双重引导操作系统保护）  |  |
| 存储空间         |   |  |
| 硬盘架          | <ul style="list-style-type: none"> <li>• TS-262：<br/>2 x 3.5 英寸 SATA 6 Gbps</li> <li>• TS-462：<br/>4 x 3.5 英寸 SATA 6 Gbps</li> </ul>  | <ul style="list-style-type: none"> <li>• TS-264：<br/>2 x 3.5 英寸 SATA 6 Gbps</li> <li>• TS-464：<br/>4 x 3.5 英寸 SATA 6 Gbps</li> <li>• TS-664：<br/>6 x 3.5 英寸 SATA 6 Gbps</li> </ul> |
| 硬盘兼容性        | <ul style="list-style-type: none"> <li>• 3.5 英寸 SATA 机械硬盘</li> <li>• 2.5 英寸 SATA 固态硬盘</li> </ul> <p><b>注意</b><br/>您可以从 QNAP 或授权经销商处购买托盘底座。有关详细信息，请转到 <a href="https://shop.qnap.com/">https://shop.qnap.com/。</a></p> |  |
| M.2 SSD 插槽   | 2 x M.2 2280 PCIe Gen 3 x1  |  |
| M.2 SSD 外形规格 | 2280  |  |
| SSD 缓存加速支持   | 支持  |  |
| 热插拔          | 本设备支持热插拔硬盘，以下各项除外：<br>M.2 SSD   |  |
| 网络           |   |  |
| 2.5 千兆位网络接口  | 1 x 2.5 GbE RJ45  | 2 x 2.5 GbE RJ45   |

| 组件             | TS-262、TS-462   | TS-264、TS-464、TS-664 |
|----------------|---|----------------------|
| 2.5 千兆位网络接口    | <p><b>注意</b></p> <p>2.5 Gb 以太网端口支持以下网络连接速度：2.5 GbE、1 GbE、100 Mb 和 10 Mb。</p>  |                      |
| 外部 I/O 端口和扩展插槽 |   |                      |
| USB 端口         | <ul style="list-style-type: none"> <li>正面：1 x USB 3.2 Gen 2 A 型</li> </ul> <p><b>注意</b></p> <p>此 USB 端口支持一键复制。</p> <ul style="list-style-type: none"> <li>背面：1 x USB 3.2 Gen 2 A 型</li> <li>背面：2 x USB 2.0 Gen 1 A 型</li> </ul> |                      |
| PCIe 插槽        | <p>1 x PCIe 3.0 x2</p> <p><b>提示</b></p> <p>有关兼容的硬盘型号和扩展卡的列表，请转到 <a href="https://www.qnap.com/compatibility">https://www.qnap.com/compatibility</a>。</p>  |                      |
| HDMI 端口        | 1 x HDMI 2.0 (60 Hz 时分辨率最高 4096 x 2160)   |                      |
| 界面             |   |                      |
| 按钮             | <ul style="list-style-type: none"> <li>电源</li> <li>重置</li> <li>USB 一键复制</li> </ul>  |                      |
| 尺寸             |   |                      |
| 外形规格           | 立式  |                      |

| 组件             | TS-262、TS-462   | TS-264、TS-464、TS-664   |
|----------------|---|--|
| 尺寸 (高 x 宽 x 深) | <ul style="list-style-type: none"> <li>• TS-262:<br/>168 x 105 x 226 mm<br/>(6.61 x 4.13 x 8.90 英寸)</li> <li>• TS-462:<br/>168 x 170 x 226 mm<br/>(6.61 x 6.69 x 8.90 英寸)</li> </ul>  | <ul style="list-style-type: none"> <li>• TS-264:<br/>168 x 105 x 226 mm<br/>(6.61 x 4.13 x 8.90 英寸)</li> <li>• TS-464:<br/>168 x 170 x 226 mm<br/>(6.61 x 6.69 x 8.90 英寸)</li> <li>• TS-664:<br/>168 x 235 x 226 mm<br/>(6.61 x 9.25 x 8.90 英寸)</li> </ul> |
| 净重             | <ul style="list-style-type: none"> <li>• TS-262:<br/>1.55 kg (3.41 磅)</li> <li>• TS-462:<br/>2.26 kg (4.98 磅)</li> </ul>  | <ul style="list-style-type: none"> <li>• TS-264:<br/>1.55 kg (3.41 磅)</li> <li>• TS-464:<br/>2.26 kg (4.98 磅)</li> <li>• TS-664:<br/>2.9 kg (6.39 磅)</li> </ul>  |
| 其他             |   |  |
| 电源单元           | <ul style="list-style-type: none"> <li>• TS-262:<br/>65W, 100-240V AC, 50/60 Hz</li> <li>• TS-462:<br/>90W, 100-240V AC, 50/60 Hz</li> </ul>  | <ul style="list-style-type: none"> <li>• TS-264:<br/>65W, 100-240V AC, 50/60 Hz</li> <li>• TS-464:<br/>90W, 100-240V AC, 50/60 Hz</li> <li>• TS-664:<br/>120W, 100-240V AC, 50/60 Hz</li> </ul>  |
| 系统电池           | CR2032 锂电池 (3V, 225 mAh) <div style="background-color: #fce4ec; padding: 10px; margin-top: 10px;"> <b>警告</b> <ul style="list-style-type: none"> <li>此电池为纽扣电池。如果被吞食，锂纽扣电池可能会在 2 小时内导致严重或致命伤害。请避免儿童接触电池。</li> <li>为避免潜在的电池爆炸、导致人员受伤或组件受损，请确保使用同型电池更换现有电池。</li> </ul> </div> |  |

| 组件   | TS-262、TS-462   | TS-264、TS-464、TS-664  |
|------|---|---|
| 风扇   | <ul style="list-style-type: none"> <li>• TS-262:<br/>1 x 70 mm, 12V DC 智能风扇</li> <li>• TS-462:<br/>1 x 120 mm, 12V DC 智能风扇</li> </ul> | <ul style="list-style-type: none"> <li>• TS-264:<br/>1 x 70 mm, 12V DC 智能风扇</li> <li>• TS-464:<br/>1 x 120 mm, 12V DC 智能风扇</li> <li>• TS-664:<br/>2 x 90 mm, 12V DC 智能风扇</li> </ul> |
| 工作温度 | 0°C 至 40°C (32 至 104°F)   |   |
| 相对湿度 | <ul style="list-style-type: none"> <li>• 无冷凝相对湿度: 5% 至 95%</li> <li>• 湿球温度: 27°C (80.6°F)</li> </ul>                                  |   |
| 安全锁孔 | Kensington 安全锁孔   |   |

**提示**

型号规格如有更改，恕不另行通知。要查看最新规格，请转到 <https://www.qnap.com>。


## 包装内容

| 项目              | 数量   |
|-----------------|--|
| TS-x62/TS-x64   | 1  |
| 硬盘托盘            | <ul style="list-style-type: none"> <li>• TS-262, TS-264: 2</li> <li>• TS-464、TS-462: 4</li> <li>• TS-664: 6</li> </ul>   |
| 适用于 2.5 英寸硬盘的螺丝 | <ul style="list-style-type: none"> <li>• TS-262, TS-264: 8</li> <li>• TS-464、TS-462: 16</li> <li>• TS-664: 24</li> </ul> |
| 适用于 3.5 英寸硬盘的螺丝 | <ul style="list-style-type: none"> <li>• TS-262, TS-264: 8</li> <li>• TS-464、TS-462: 16</li> <li>• TS-664: 24</li> </ul> |
| 交流电源适配器         | 1  |

| 项目           | 数量 |
|--------------|----|
| 电源线          | 1  |
| CAT 5e 以太网线  | 1  |
| 快速安装指南 (QIG) | 1  |


## 组件

### 前面板

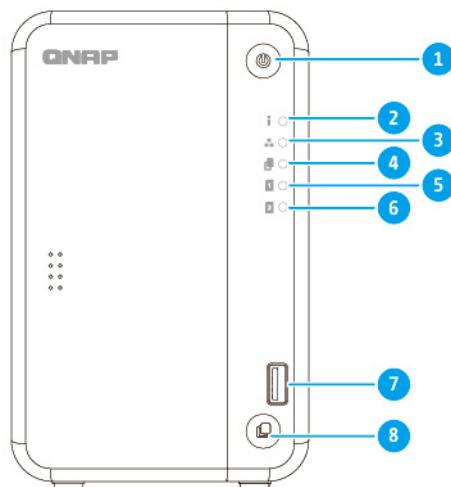

TS-262、TS-264

| 编号 | 组件      | 编号 | 组件                       |
|----|---------|----|--------------------------|
| 1  | 电源按钮    | 5  | 硬盘 1 LED                 |
| 2  | 状态 LED  | 6  | 硬盘 2 LED                 |
| 3  | LAN LED | 7  | USB 3.2 Gen 2 一键复制 A 型端口 |
| 4  | USB LED | 8  | USB 一键复制按钮               |

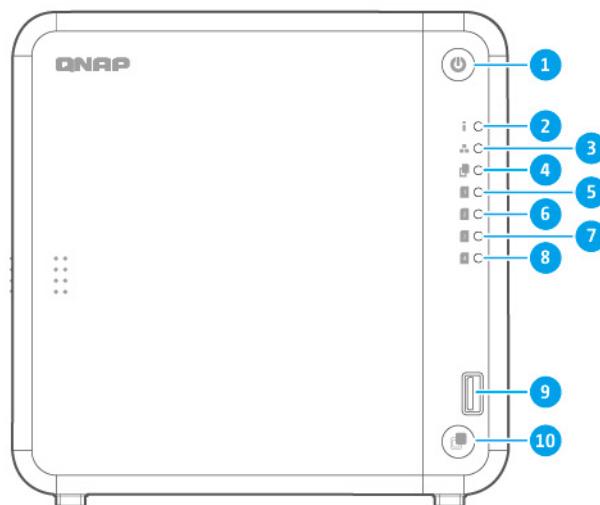

TS-462、TS-464


| 编号 | 组件       | 编号 | 组件                       |
|----|----------|----|--------------------------|
| 1  | 电源按钮     | 6  | 硬盘 2 LED                 |
| 2  | 状态 LED   | 7  | 硬盘 3 LED                 |
| 3  | LAN LED  | 8  | 硬盘 4 LED                 |
| 4  | USB LED  | 9  | USB 3.2 Gen 2 一键复制 A 型端口 |
| 5  | 硬盘 1 LED | 10 | USB 一键复制按钮               |



TS-664

| 编号 | 组件       | 编号 | 组件                       |
|----|----------|----|--------------------------|
| 1  | 电源按钮     | 7  | 硬盘 3 LED                 |
| 2  | 状态 LED   | 8  | 硬盘 4 LED                 |
| 3  | LAN LED  | 9  | 硬盘 5 LED                 |
| 4  | USB LED  | 10 | 硬盘 6 LED                 |
| 5  | 硬盘 1 LED | 11 | USB 3.2 Gen 2 一键复制 A 型端口 |
| 6  | 硬盘 2 LED | 12 | USB 一键复制按钮               |


## 后面板

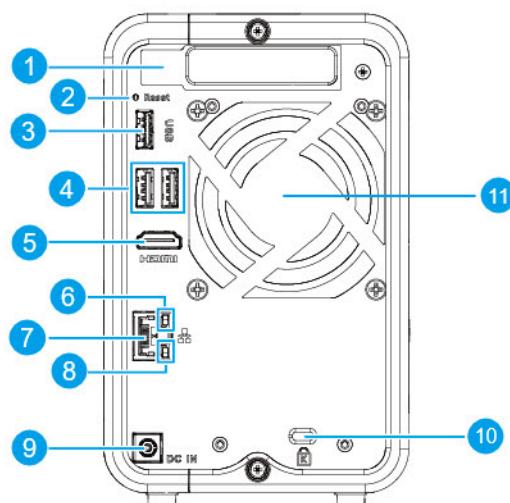

TS-262


| 编号 | 组件                 | 编号 | 组件                 |
|----|--------------------|----|--------------------|
| 1  | PCIe 半高盖板          | 7  | 2.5Gb 以太网端口 (RJ45) |
| 2  | 重置按钮               | 8  | 2.5Gb 以太网速度 LED    |
| 3  | USB 3.2 Gen 2 A型端口 | 9  | 电源输入               |
| 4  | USB 3.2 Gen 1 A型端口 | 10 | Kensington 安全锁孔    |
| 5  | HDMI 2.0 端口        | 11 | 系统风扇               |

| 编号 | 组件               | 编号 | 组件 |
|----|------------------|----|----|
| 6  | 2.5 Gb 以太网活动 LED | -  | -  |

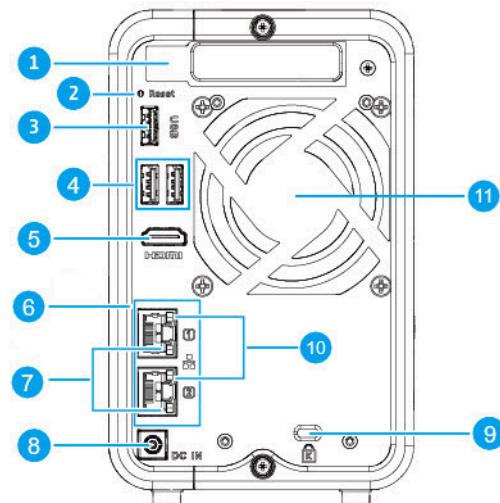


TS-264


| 编号 | 组件                  | 编号 | 组件               |
|----|---------------------|----|------------------|
| 1  | PCIe 半高盖板           | 7  | 2.5 Gb 以太网速度 LED |
| 2  | 重置按钮                | 8  | 电源输入             |
| 3  | USB 3.2 Gen 2 A 型端口 | 9  | Kensington 安全锁孔  |
| 4  | USB 3.2 Gen 1 A 型端口 | 10 | 2.5 Gb 以太网活动 LED |
| 5  | HDMI 2.0 端口         | 11 | 系统风扇             |
| 6  | 2.5 Gb 以太网端口 (RJ45) | -  | -                |

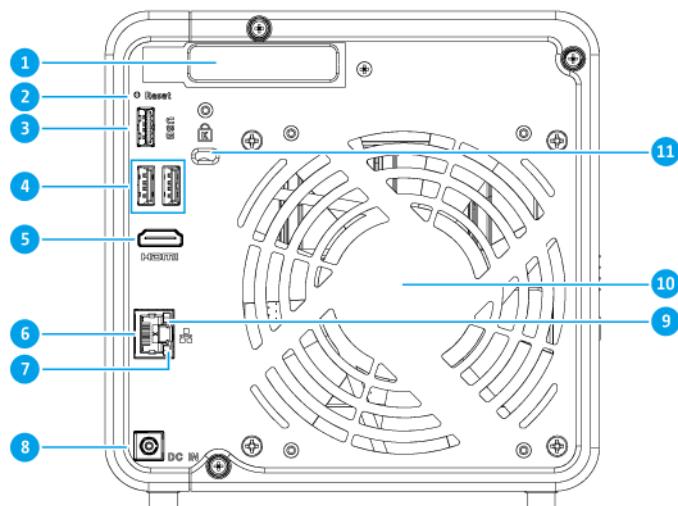**TS-462**

| 编号 | 组件                  | 编号 | 组件               |
|----|---------------------|----|------------------|
| 1  | PCIe 半高盖板           | 7  | 2.5 Gb 以太网活动 LED |
| 2  | 重置按钮                | 8  | 电源输入             |
| 3  | USB 3.2 Gen 2 A 型端口 | 9  | 2.5 Gb 以太网速度 LED |
| 4  | USB 3.2 Gen 1 A 型端口 | 10 | 系统风扇             |
| 5  | HDMI 2.0 端口         | 11 | Kensington 安全锁孔  |
| 6  | 2.5 Gb 以太网端口 (RJ45) | -  | -                |

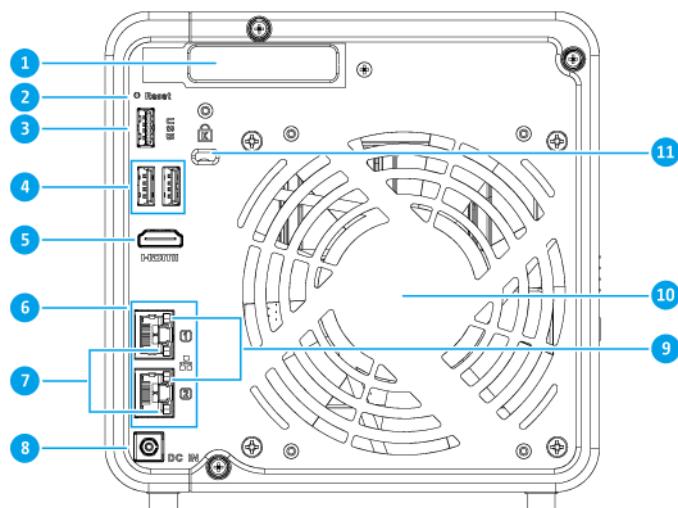**TS-464**

| 编号 | 组件                  | 编号 | 组件               |
|----|---------------------|----|------------------|
| 1  | PCIe 半高盖板           | 7  | 2.5 Gb 以太网活动 LED |
| 2  | 重置按钮                | 8  | 电源输入             |
| 3  | USB 3.2 Gen 2 A 型端口 | 9  | 2.5 Gb 以太网速度 LED |
| 4  | USB 3.2 Gen 1 A 型端口 | 10 | 系统风扇             |
| 5  | HDMI 2.0 端口         | 11 | Kensington 安全锁孔  |
| 6  | 2.5 Gb 以太网端口 (RJ45) | -  | -                |

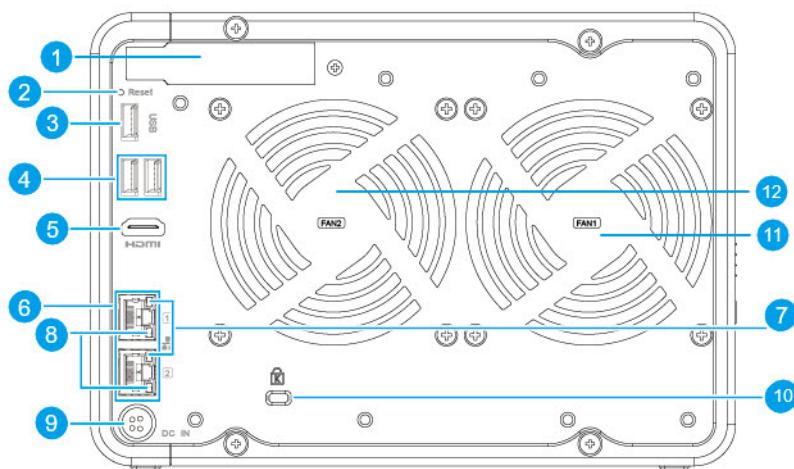


### TS-664

| 编号 | 组件                  | 编号 | 组件               |
|----|---------------------|----|------------------|
| 1  | PCIe 半高盖板           | 7  | 2.5 Gb 以太网速度 LED |
| 2  | 重置按钮                | 8  | 2.5 Gb 以太网活动 LED |
| 3  | USB 3.2 Gen 2 A 型端口 | 9  | 电源输入             |
| 4  | USB 3.2 Gen 1 A 型端口 | 10 | Kensington 安全锁孔  |
| 5  | HDMI 2.0 端口         | 11 | 系统风扇             |
| 6  | 2.5 Gb 以太网端口 (RJ45) | 12 | 系统风扇             |

## 系统主板


### 注意

以下型号的内存容量无法扩展：TS-262、TS-264、TS-462-4G、TS-464-8G、TS-664-8G。

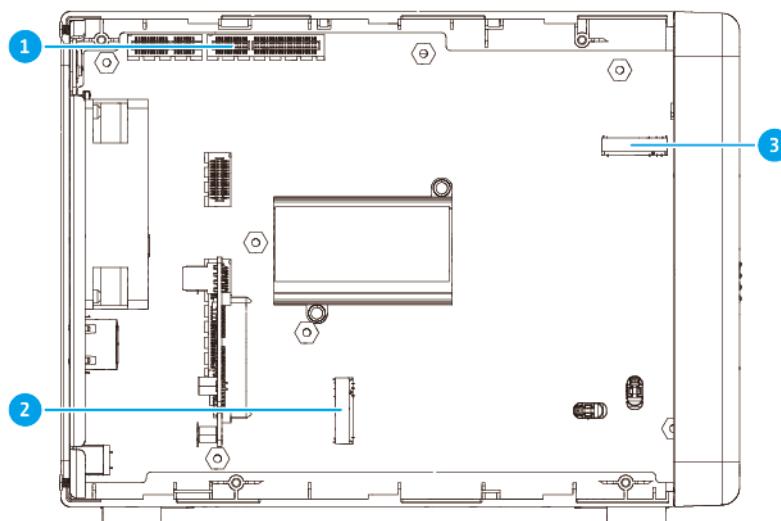**TS-262、TS-264****注意**

此图不含机箱。

| 编号 | 组件                         | 编号 | 组件           |
|----|----------------------------|----|--------------|
| 1  | PCIe 插槽 (PCIe Gen 3.0 x 2) | 3  | M.2 SSD 插槽 2 |
| 2  | M.2 SSD 插槽 1               | -  | -            |

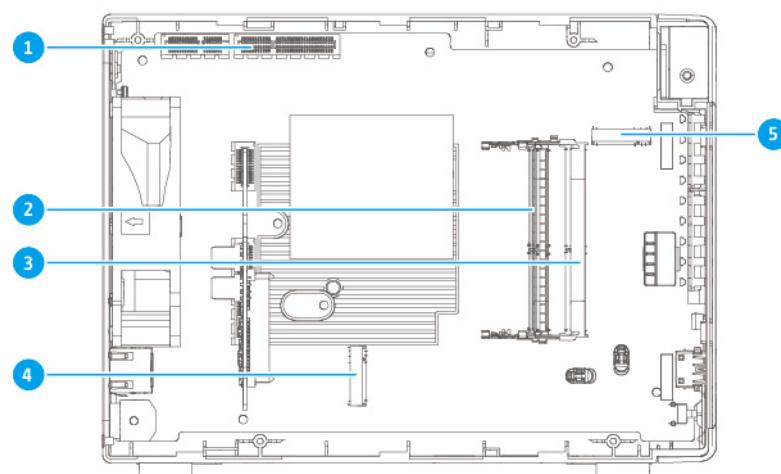
**TS-462、TS-464、TS-664**

**注意**


此图不含机箱。

| 编号 | 组件                         | 编号 | 组件           |
|----|----------------------------|----|--------------|
| 1  | PCIe 插槽 (PCIe Gen 3.0 x 2) | 4  | M.2 SSD 插槽 1 |
| 2  | 内存插槽 1                     | 5  | M.2 SSD 插槽 2 |
| 3  | 内存插槽 2                     | -  | -            |


## 正面硬盘编号

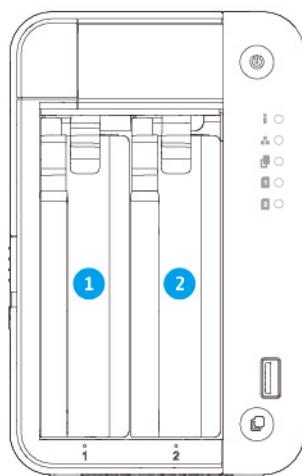

TS-262、TS-264

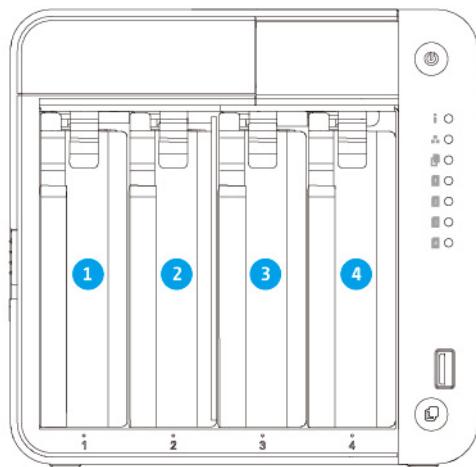


**TS-462、TS-464**

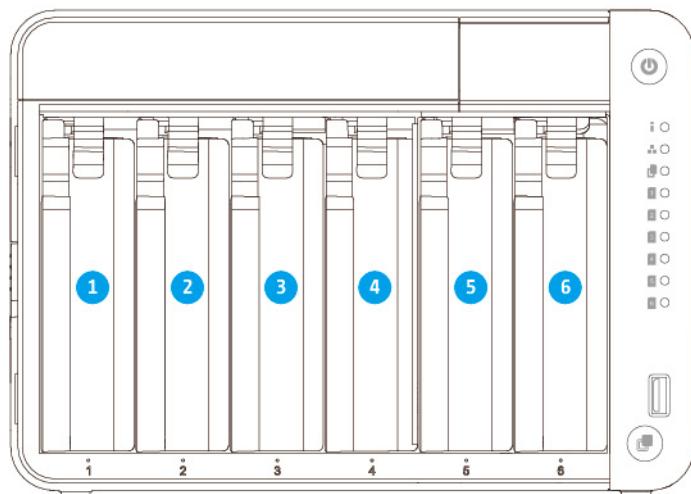


**TS-664**

## 网络端口编号

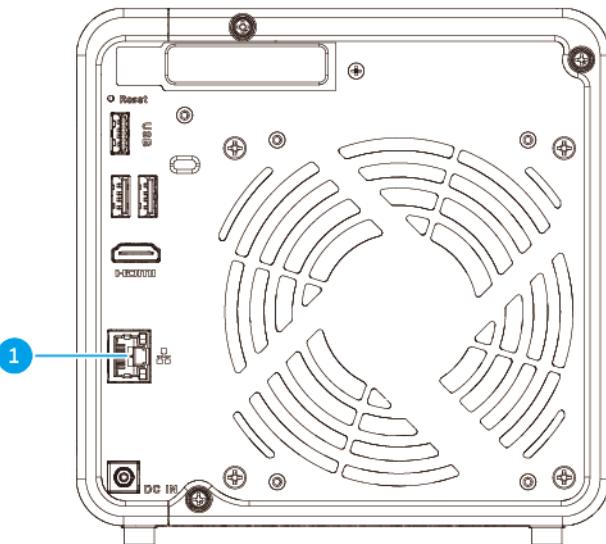


TS-x62

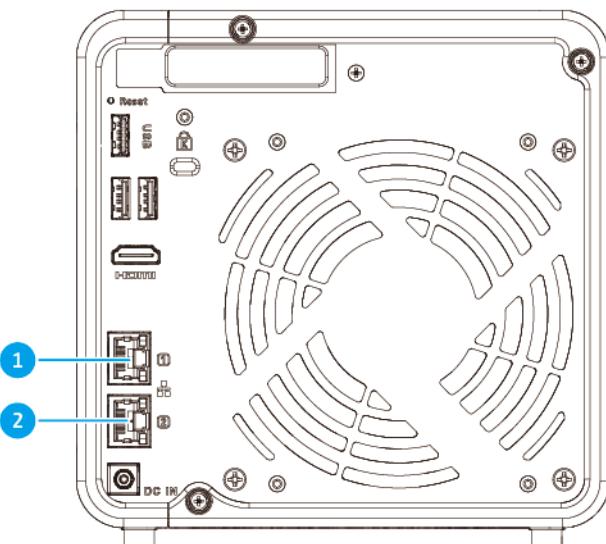


TS-x64

## USB 端口编号

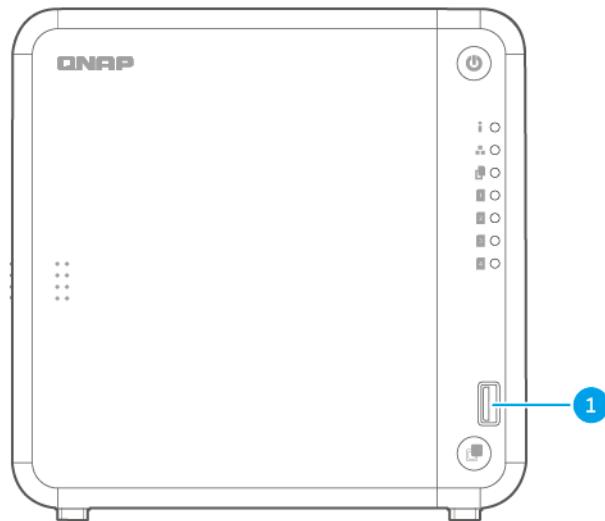

前 USB 端口

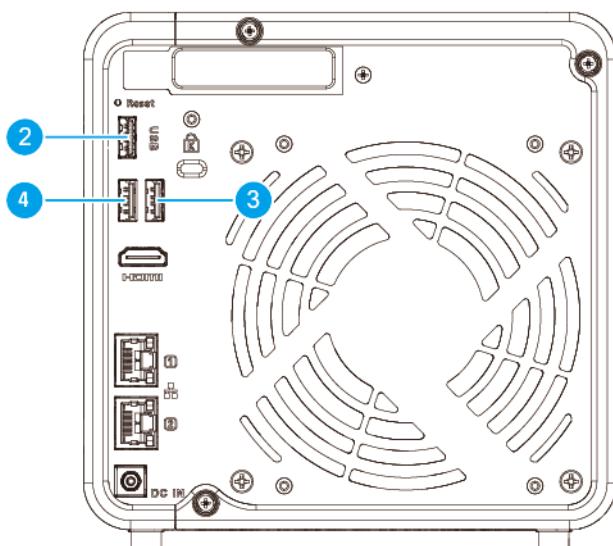

后 USB 端口

## 安装要求

| 类别      | 项目   |
|---------|--|
| 环境      | <ul style="list-style-type: none"> <li>室温：0°C 至 40°C (32 至 104°F)</li> <li>无冷凝相对湿度：5% 至 95%</li> <li>湿球温度：27°C (80.6°F)</li> <li>平坦的防静电表面，无直射阳光、液体或化学药剂</li> <li>无可能阻塞设备通风或者压住设备或电源线的物品</li> </ul> |
| 硬件和外围设备 | <ul style="list-style-type: none"> <li>存储硬盘<br/>有关兼容硬盘型号的列表，请转到 <a href="https://www.qnap.com/compatibility">https://www.qnap.com/compatibility</a>。</li> <li>网线</li> </ul>                        |
| 工具      | <ul style="list-style-type: none"> <li>平头螺丝刀</li> <li>防静电腕带</li> </ul>   |

## 设置 NAS

### 重要

在设置 NAS 或安装 NAS 组件之前，请仔细阅读所有安全要求和信息。

- 将 NAS 设备置于符合要求的环境中。  
有关详细信息，请参见[安装要求](#)。
- 安装硬盘。  
有关详细信息，请参见以下主题：
  - [在 3.5 英寸托盘上安装 2.5 英寸硬盘](#)
  - [在 3.5 英寸托盘上安装 3.5 英寸硬盘](#)
  - [安装 M.2 固态硬盘](#)
- 可选：连接扩展单元。  
有关详细信息，请参见[扩展单元安装](#)。
- 连接电源线和所有适用的线缆。
- 启动 NAS 电源。
- 安装 QTS。  
有关详细信息，请参见[QTS 安装](#)。
- 登录 QTS。

## 3. 安装和配置

本章提供了具体的硬件和固件安装与配置步骤。

### 硬件安装

本节提供有关安装硬盘、更换内存模块、安装扩展卡和连接扩展单元的信息。

#### 硬盘安装

NAS 兼容 3.5 英寸硬盘、2.5 英寸固态硬盘和 M.2 固态硬盘。

#### 在 3.5 英寸托盘上安装 2.5 英寸硬盘

##### 警告


- 安装硬盘将删除硬盘上的所有数据。




**转动的风扇叶片：**使您的双手和身体其他部位远离正在转动的风扇叶片。

- 请执行静电放电 (ESD) 规程，以避免组件损坏。

1. 关闭 NAS 电源。
2. 取下前盖。
  - a. 找到 NAS 左侧的锁紧机构。
  - b. 向上滑动锁扣以释放前盖。

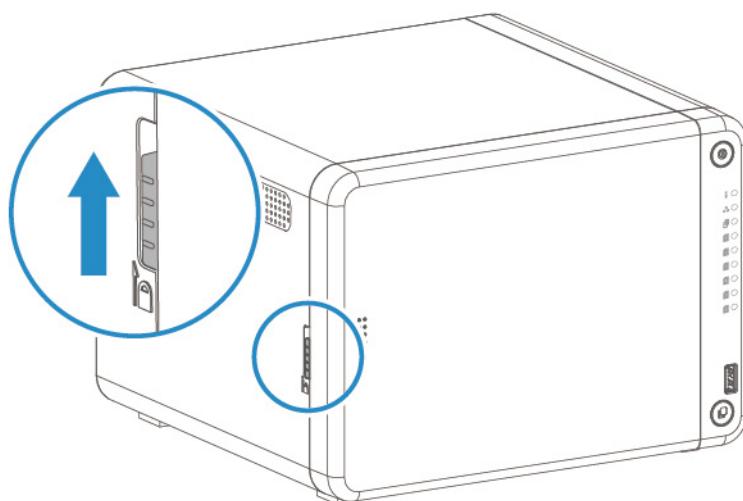


c. 将前盖向左滑动，然后拉出。

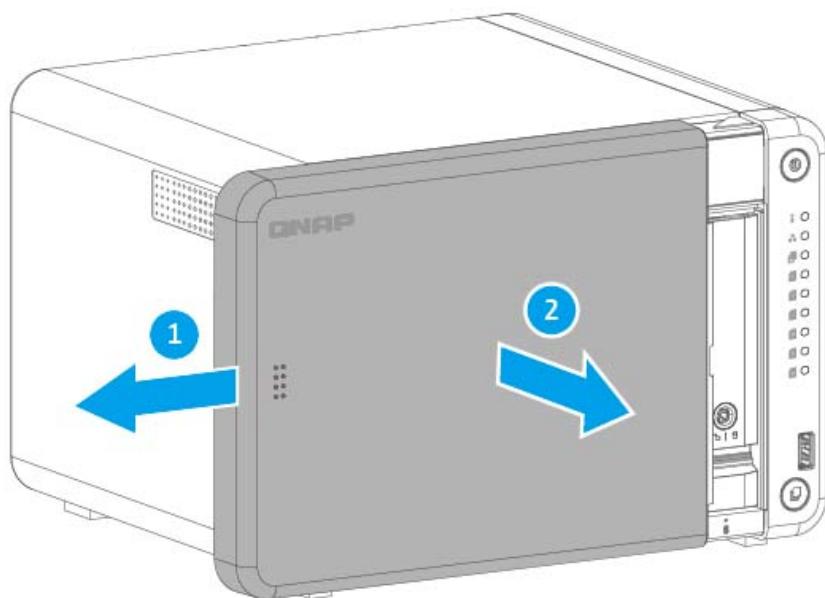



3. 取下硬盘托盘。

a. 按压闩锁的同时拉出硬盘托盘，取下该托盘。

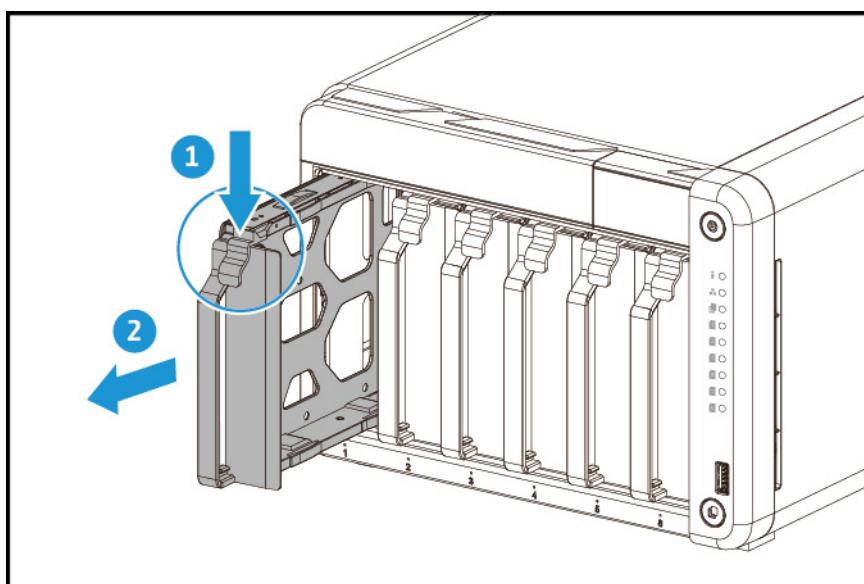


**4. 将硬盘安装到托盘上。**

- a. 将硬盘放在托盘上，使硬盘底部的孔与托盘底部的孔对齐。
- b. 安装螺丝。

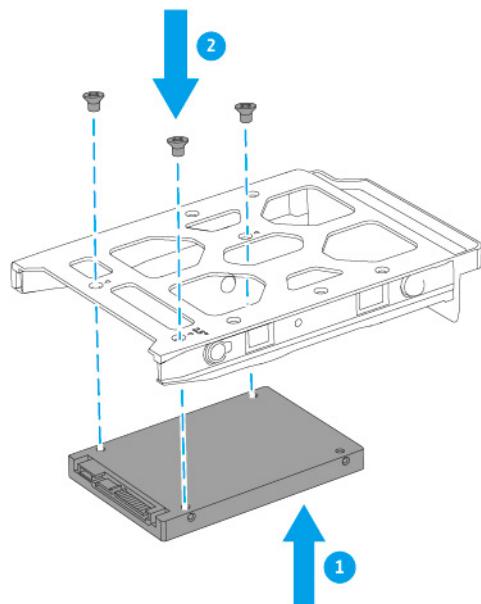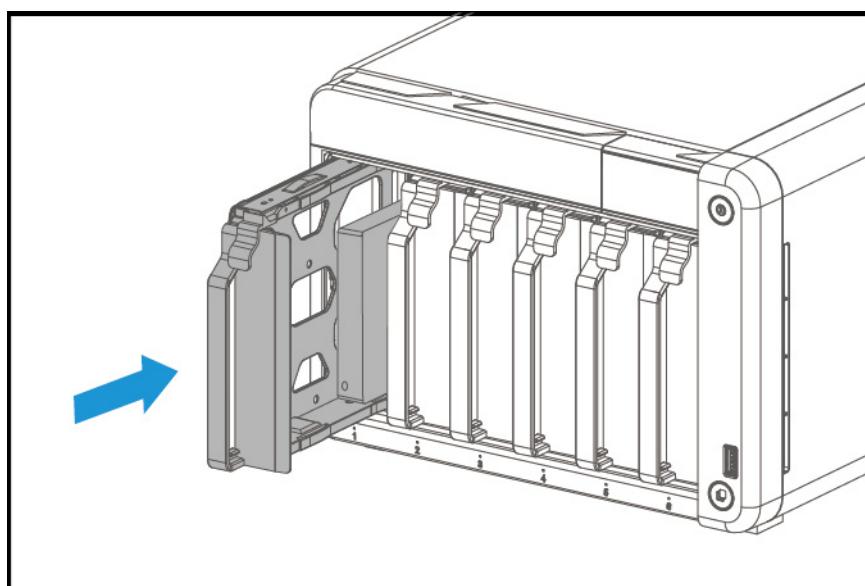
**5. 将托盘插入硬盘架。**

**6. 安装前盖。**

- a. 将前盖与外壳上的凹槽对齐，然后向右滑动。

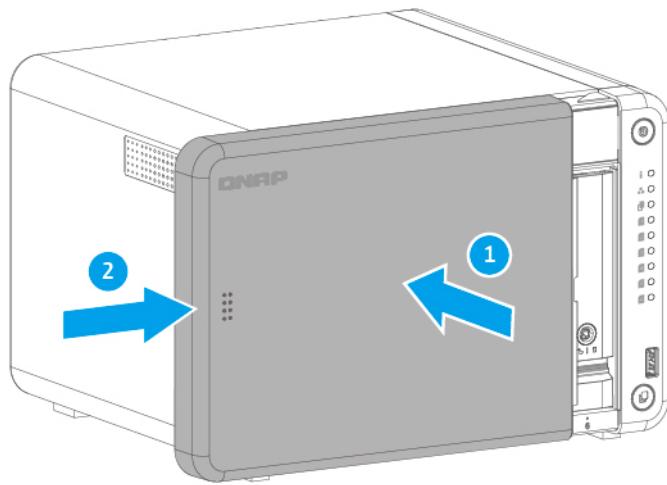

- b. 向下滑动锁扣以固定前盖。

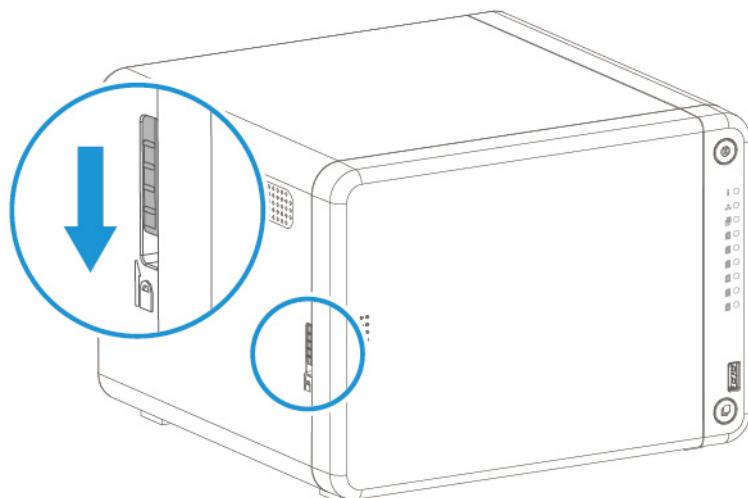**7. 启动 NAS 电源。**

## 在 3.5 英寸托盘上安装 3.5 英寸硬盘

### 警告

- 安装硬盘将删除硬盘上的所有数据。




**转动的风扇叶片：**使您的双手和身体其他部位远离正在转动的风扇叶片。

- 请执行静电放电 (ESD) 规程，以避免组件损坏。


1. 关闭 NAS 电源。

2. 取下前盖。

- 找到 NAS 左侧的锁紧机构。
- 向上滑动锁扣以释放前盖。

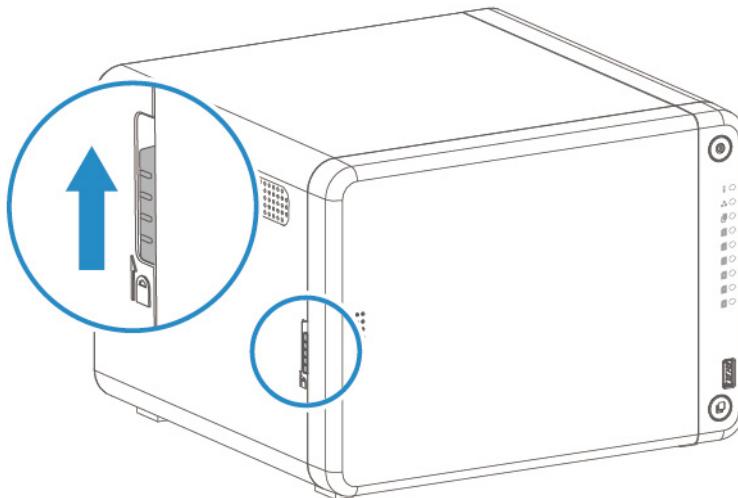


c. 将前盖向左滑动，然后拉出。

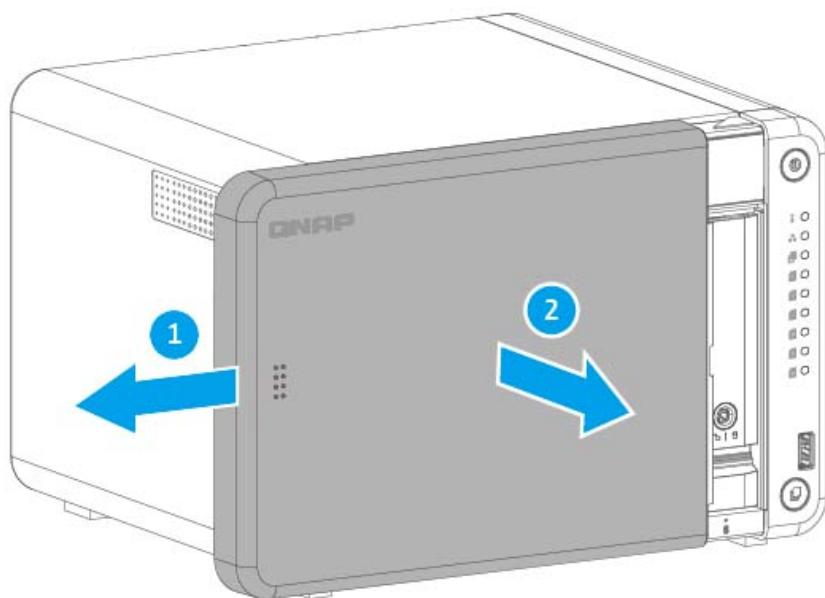


3. 取下硬盘托盘。

a. 按压闩锁的同时拉出硬盘托盘，取下该托盘。

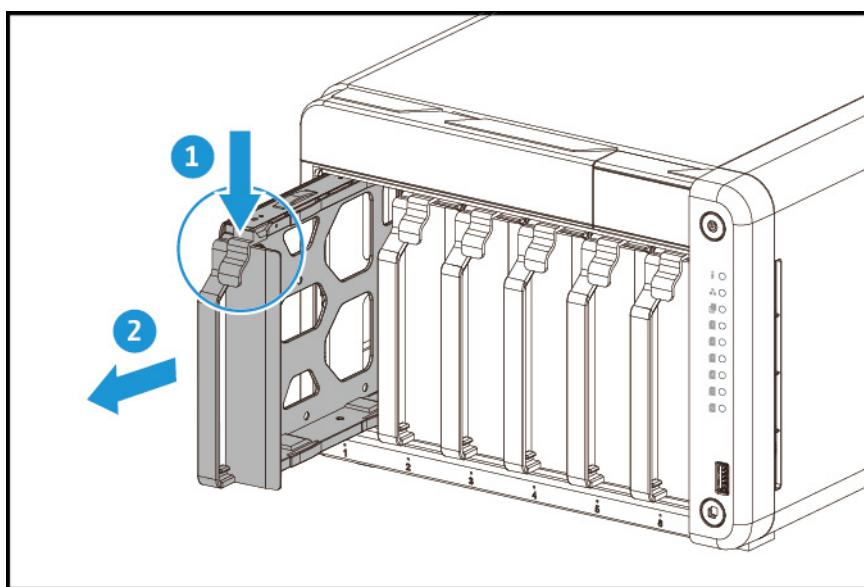


**4. 将硬盘安装到托盘上。**

- a. 取下硬盘托盘两侧的固定面板。

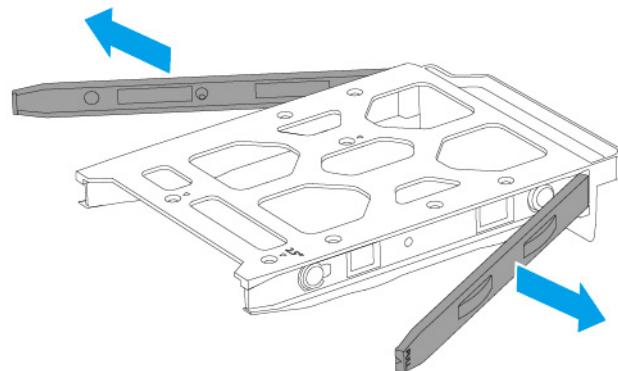


- b. 将硬盘放在托盘上，使硬盘底部的孔与托盘底部的孔对齐。


- c. 装上固定面板，将硬盘锁定在托盘上。

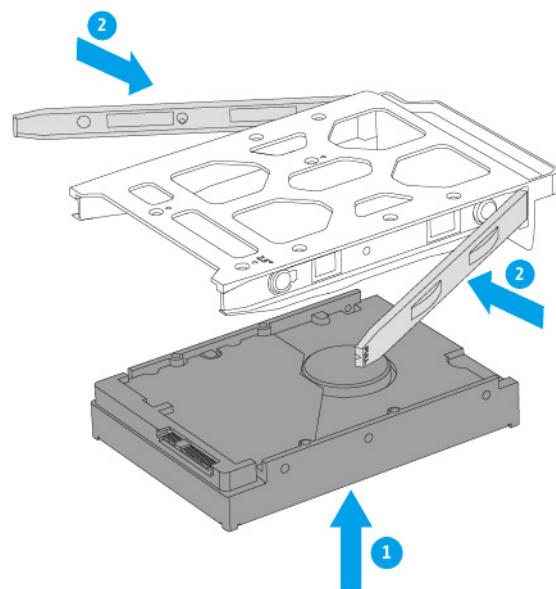

d. 可选: 装上螺丝, 进一步固定硬盘。

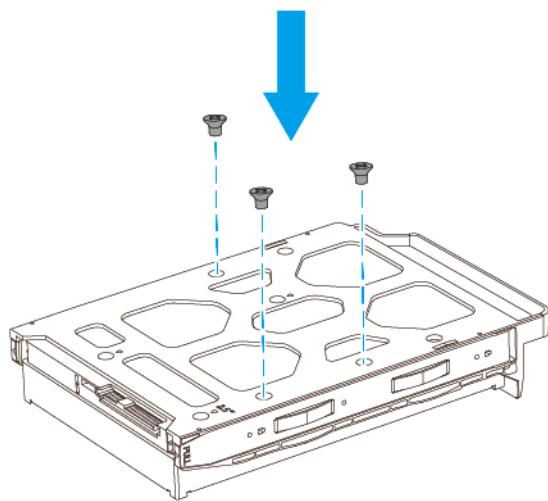


5. 将托盘插入硬盘架。

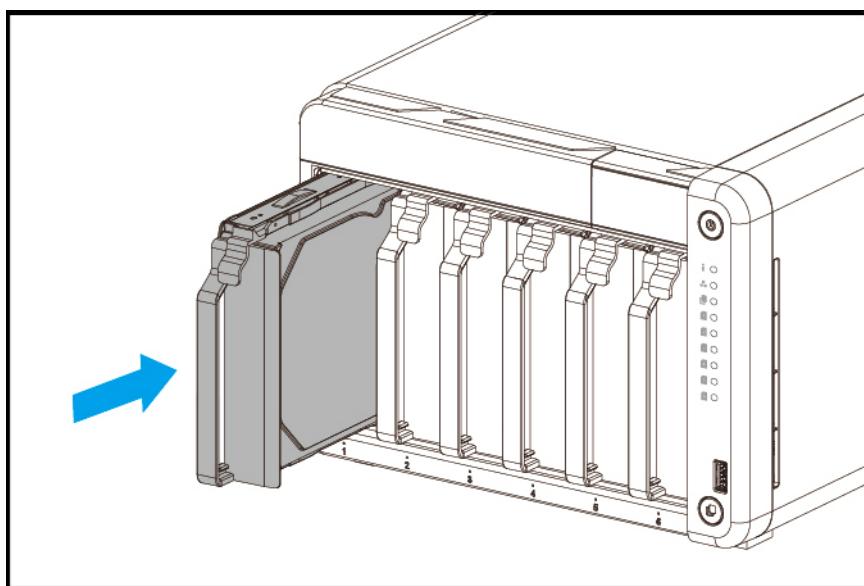


**6. 安装前盖。**

- a. 将前盖与外壳上的凹槽对齐，然后向右滑动。

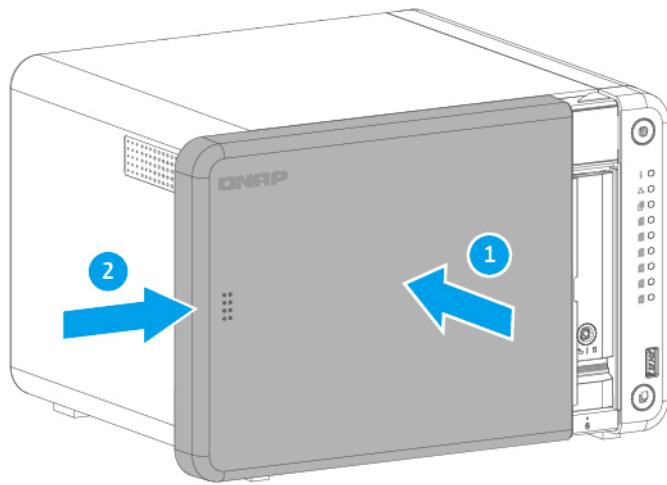

- b. 向下滑动锁扣以固定前盖。

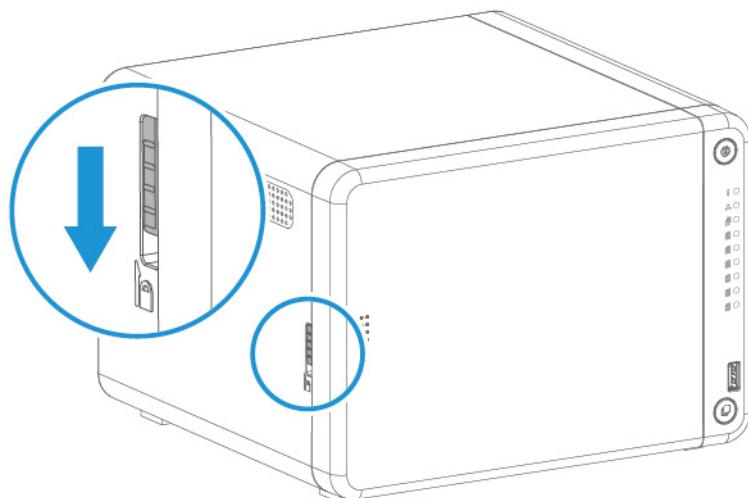**7. 启动 NAS 电源。**

## 安装 M.2 固态硬盘

### 警告

- 只有合格人员才能执行以下步骤。不遵守说明可能会导致重伤或死亡。
- 请执行静电放电 (ESD) 规程，以避免组件损坏。



**转动的风扇叶片：**使您的双手和身体其他部位远离正在转动的风扇叶片。




**运动的其他组件：**使您的双手和身体其他部位远离正在运动的其他组件。

### 重要


- NAS 有两个 M.2 SSD 插槽。有关兼容的 M.2 SSD 的列表，请转到 <https://www.qnap.com/compatibility>。
- QNAP 建议在 M.2 SSD 控制器上安装散热片，以提高散热效果并确保性能稳定。
- 安装非 QNAP 出品的散热片前，请确保该散热片的尺寸和外形合适。
- 散热片未随 NAS 提供，必须单独购买。有关详细信息，请联系授权经销商或转到 <https://shop.qnap.com/>。

- 关闭 NAS 电源。
- 从插座上拔下电源线。
- 拔掉所有线缆和外接部件。
- 取下前盖。
  - 找到 NAS 左侧的锁紧机构。

**b.** 向上滑动锁扣以释放前盖。

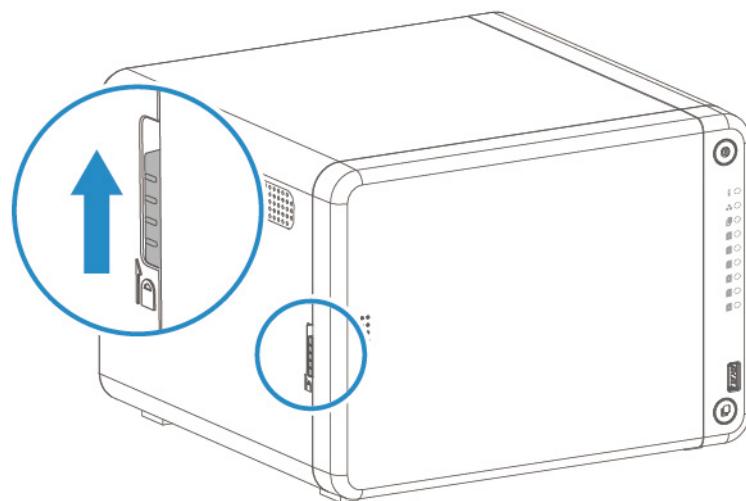


**c.** 将前盖向左滑动，然后拉出。

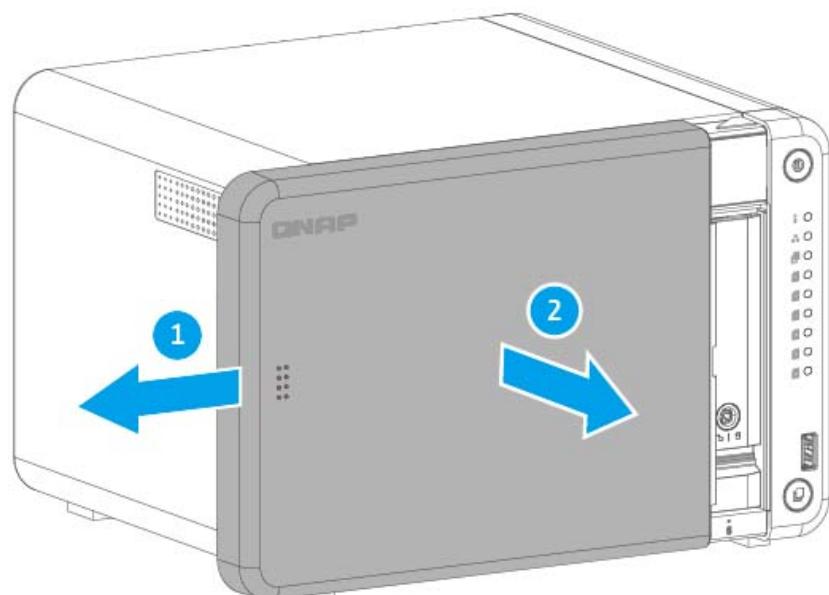

**5. 取下每个硬盘托盘。**

- a. 按压闩锁的同时拉出硬盘托盘，取下该托盘。

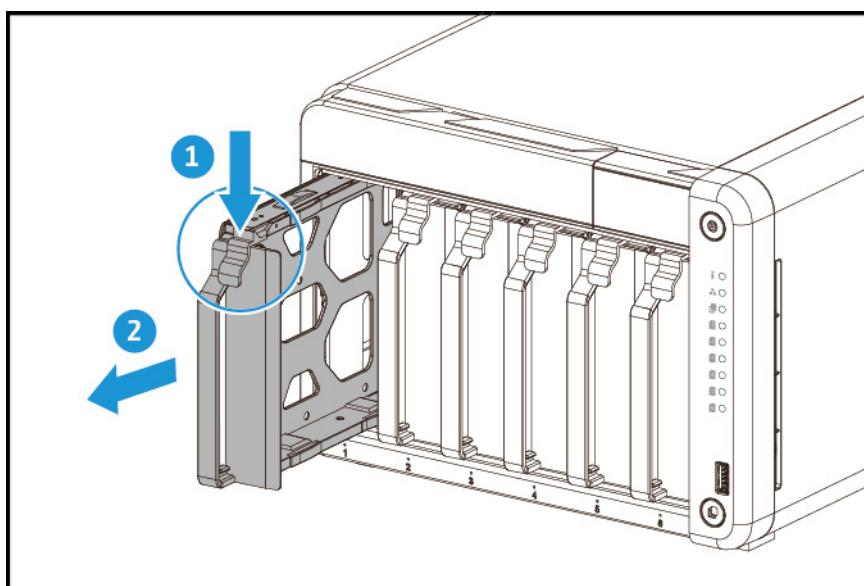


**6. 可选: 在 M.2 SSD 上安装散热片。**

- a. 在 M.2 SSD 上找到控制器。


**注意**

控制器位置因 M.2 SSD 的型号和制造商而异。  
有关详细信息，请参阅文档或联系制造商。

- b. 取下散热片的保护膜。

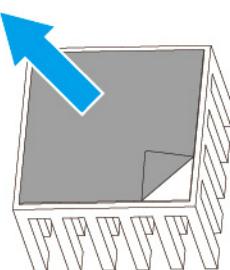

- c. 将散热片安装到控制器上。

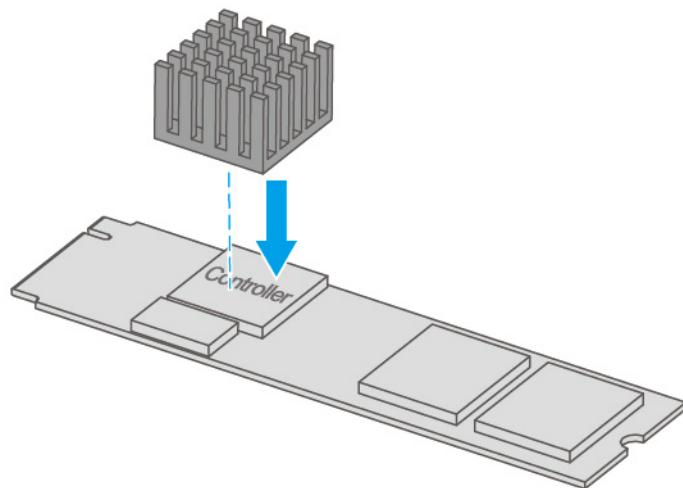


## 7. 安装 M.2 SSD。

### 注意


以下安装图不含机箱。

- a. 按压 M.2 固定扣的边缘，将其解开。

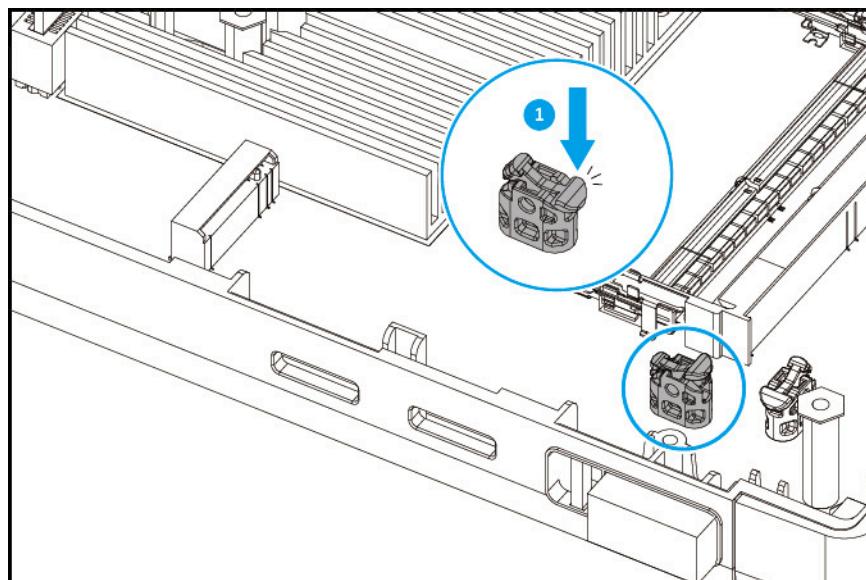


- b. 将 M.2 SSD 插入插槽中。

c. 小心地向下按压 M.2 SSD，直到固定扣将硬盘锁定到位。

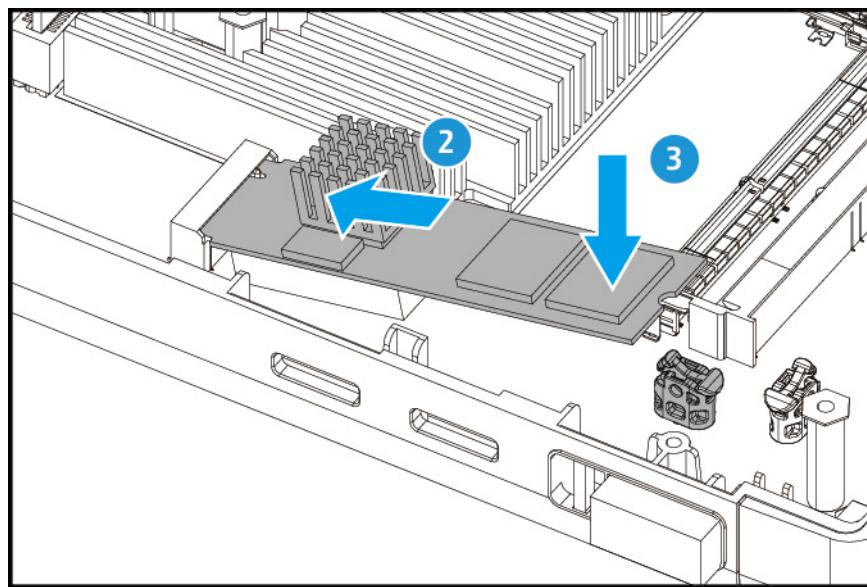


d. 确认 M.2 固定扣已牢牢将 M.2 SSD 固定到位。

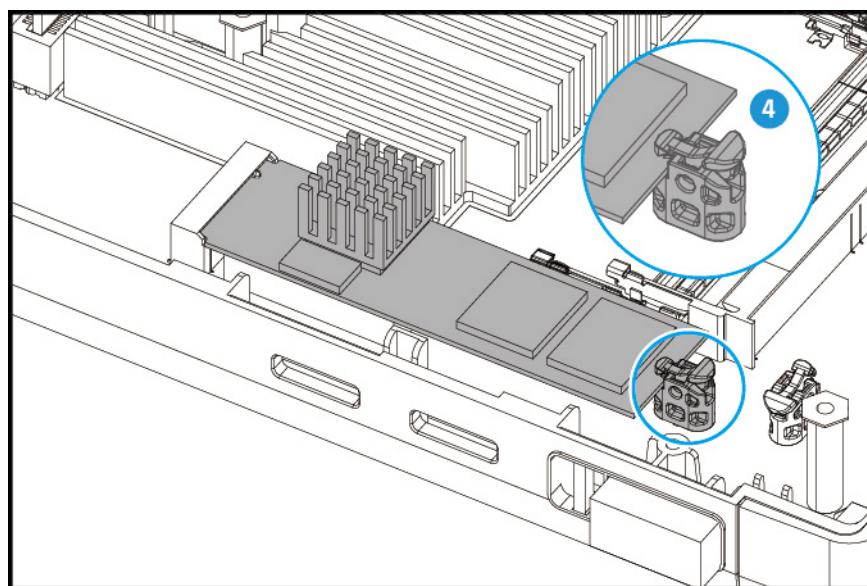


8. 可选: 安装另一个 M.2 SSD。

9. 将每个硬盘托盘滑入 NAS。

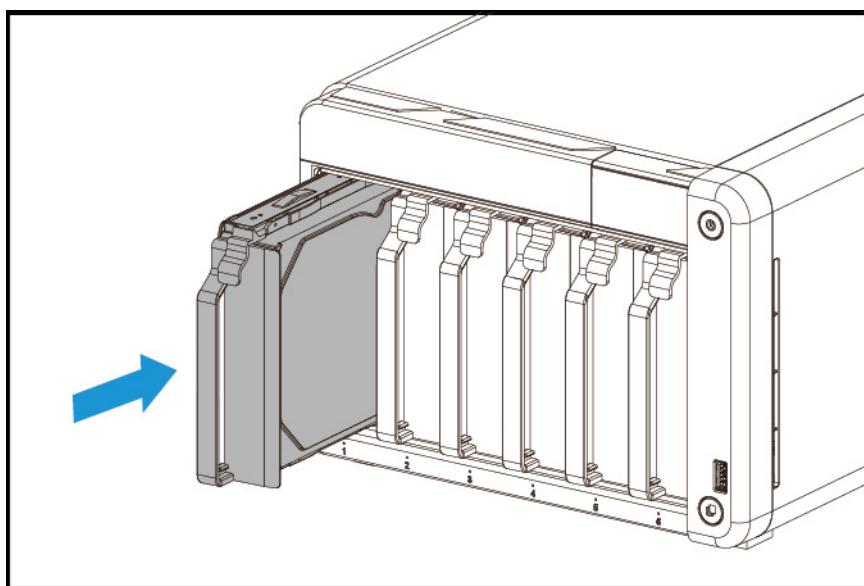


10. 安装前盖。

a. 将前盖与外壳上的凹槽对齐，然后向右滑动。

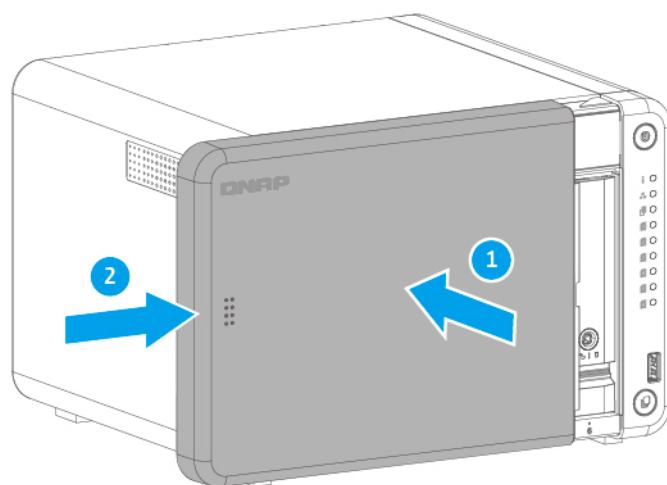

- b.** 向下滑动锁扣以固定前盖。

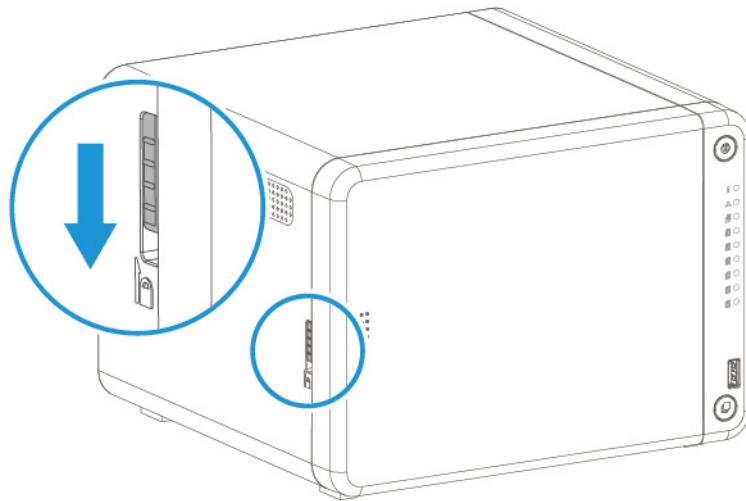

11. 连接所有线缆和外接部件。
12. 将电源线连接到插座。
13. 启动 NAS 电源。

## 更换内存模块 (TS-462-2G、TS-464-4G、TS-664-4G)


TS-462-2G、TS-464-4G 和 TS-664-4G 有两个内存插槽。您可以通过升级内存模块来增加 NAS 的内存容量。使用两个模块时，只能使用类型和容量均相同的 QNAP 模块，以保持系统性能和稳定性。可以从授权经销商处购买 QNAP 内存模块。

### 警告


- 只有合格人员才能执行以下步骤。不遵守说明可能会导致重伤或死亡。
- 请执行静电放电 (ESD) 规程，以避免组件损坏。

1. 关闭 NAS 电源。
2. 从插座上拔下电源线。
3. 拔掉所有线缆和外接部件。
4. 取下前盖。
  - a. 找到 NAS 左侧的锁紧机构。

**b.** 向上滑动锁扣以释放前盖。

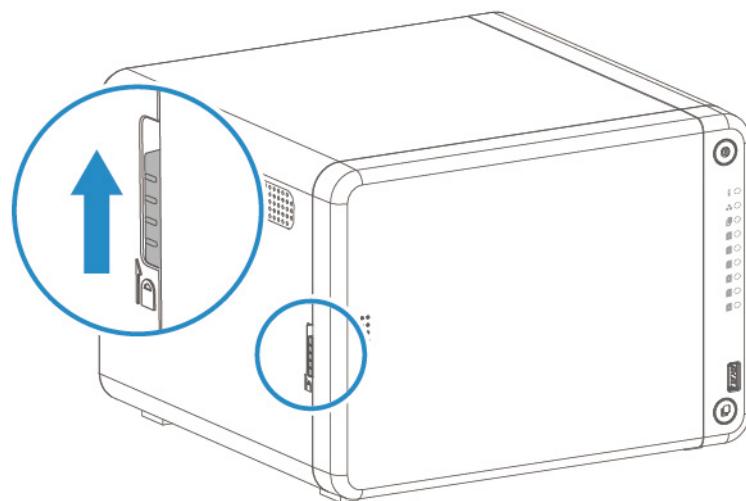


**c.** 将前盖向左滑动，然后拉出。

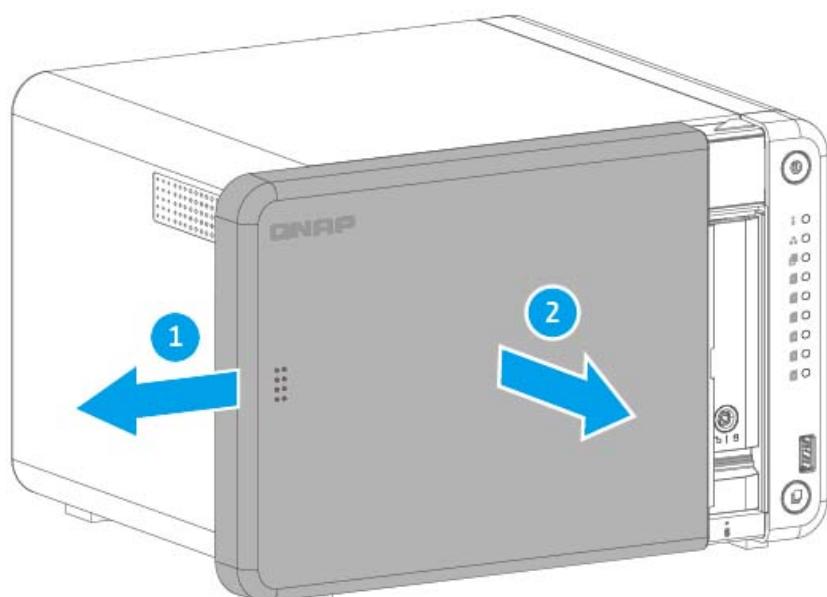

5. 取下每个硬盘托盘。

- a. 按压闩锁的同时拉出硬盘托盘，取下该托盘。

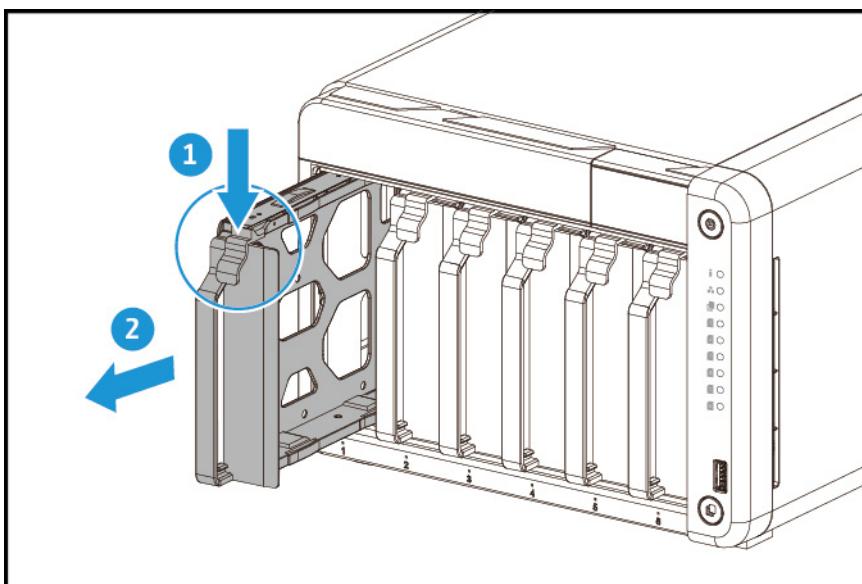


6. 取下现有模块。

**注意**

以下安装图不含机箱。

- a. 同时向外推动固定夹以释放模块。

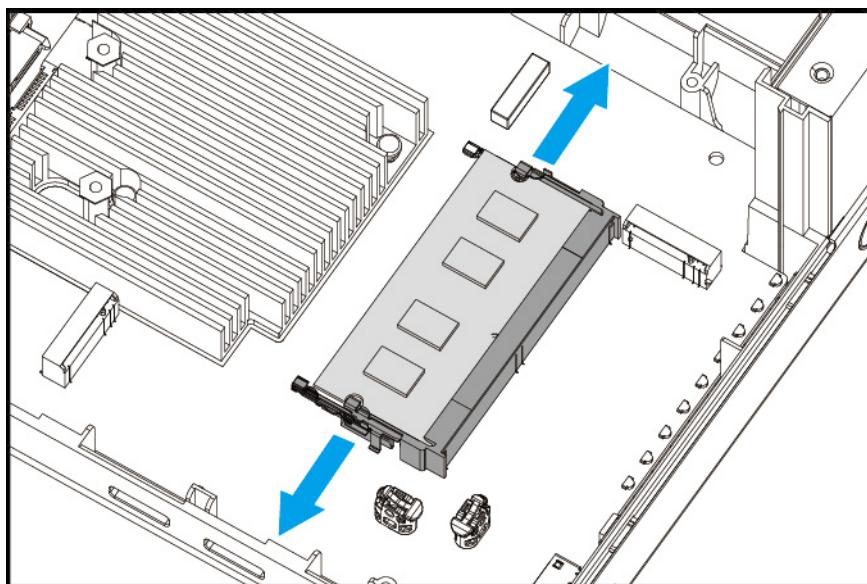


- b. 确认模块向上倾斜并已完全脱离插槽。

**警告**

如果尝试在模块尚未完全脱离时将其取出，可能会损坏模块和系统主板。

- c. 握住模块边缘。
- d. 小心将模块滑出插槽。

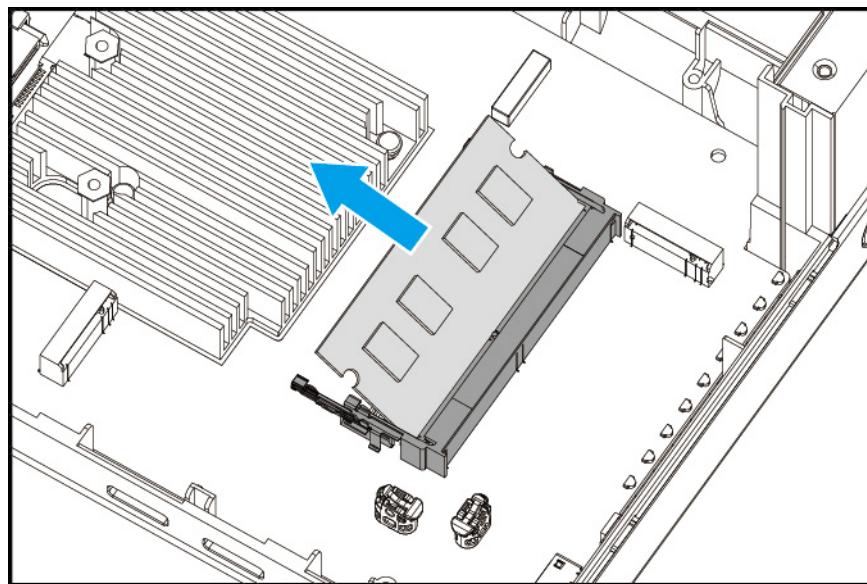


**警告**

- 请勿触摸内部组件，特别是金属接头。
- 不要折弯模块。


**7. 安装新模块。**

- a. 将凹口与插槽内的凸起对齐。
- b. 将模块插入插槽中。
- c. 确认金属接头已完全插入插槽中。

d. 小心地向下按压模块，直到固定夹将模块锁定到位。

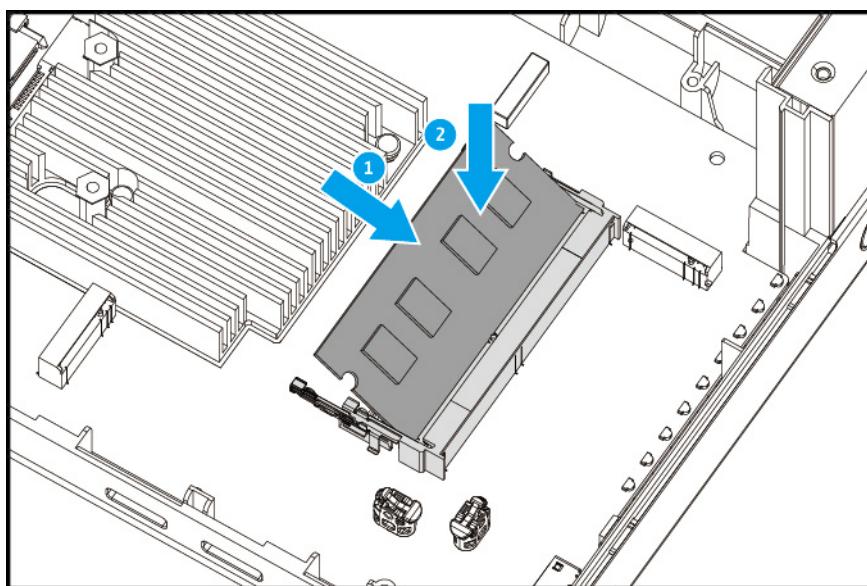


8. 将每个硬盘托盘滑入 NAS。

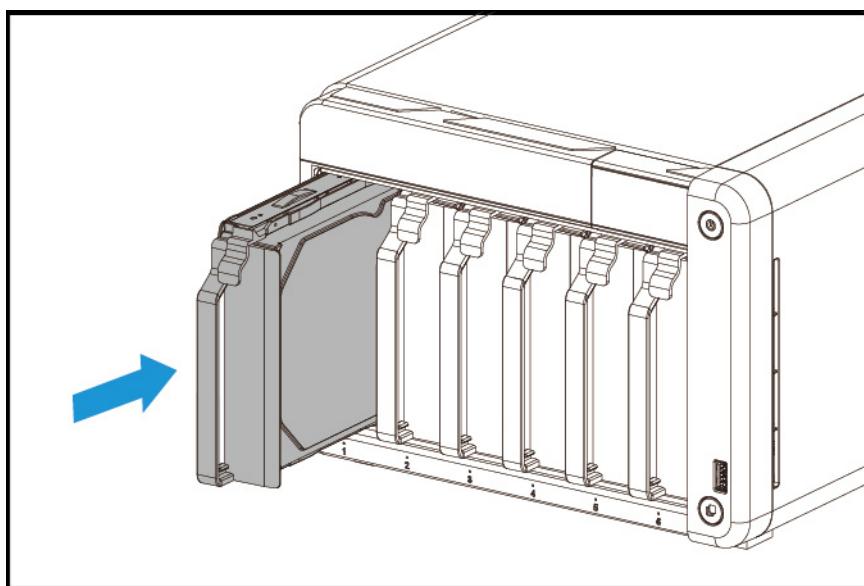


**9. 安装前盖。**

- a. 将前盖与外壳上的凹槽对齐，然后向右滑动。

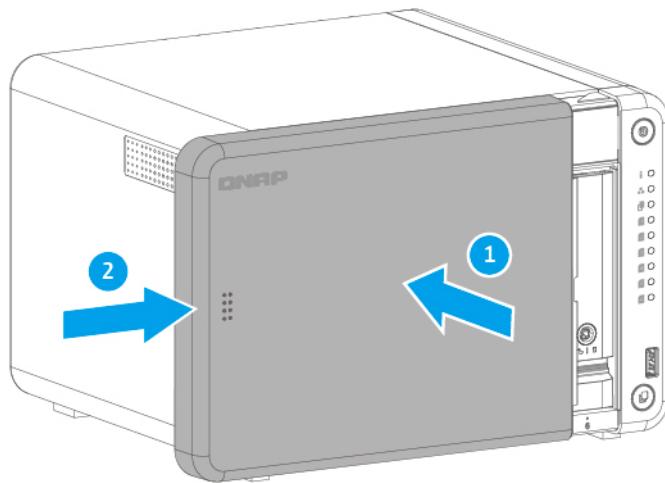

- b. 向下滑动锁扣以固定前盖。

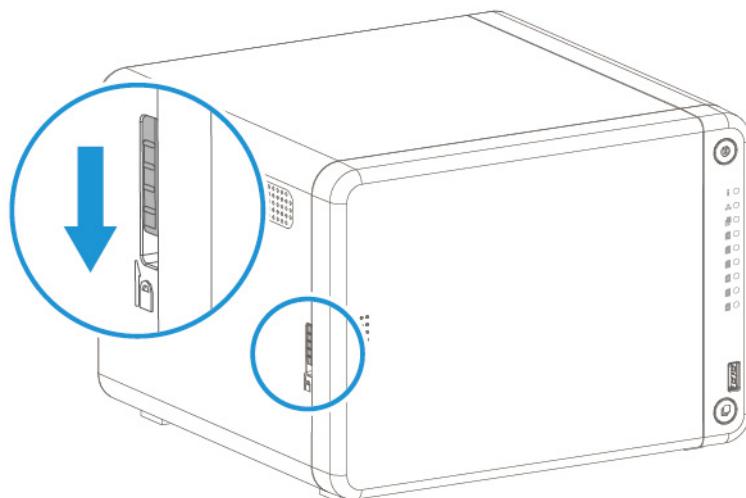**10. 连接所有线缆和外接部件。**

11. 将电源线连接到插座。

12. 启动 NAS 电源。

13. 确认 NAS 能够识别该模块。

- a. 以管理员身份登录 QTS。
- b. 转到控制台 > 系统 > 系统状态 > 硬件信息。
- c. 检查内存总容量值。

## 安装扩展卡

NAS 支持精选的扩展卡。从公司网站购买的 QNAP 品牌扩展卡随附有适合该 NAS 的支架。

### 警告

- 只有合格人员才能执行以下步骤。不遵守说明可能会导致重伤或死亡。
- 请执行静电放电 (ESD) 规程，以避免组件损坏。




**转动的风扇叶片：**使您的双手和身体其他部位远离正在转动的风扇叶片。




**运动的其他组件：**使您的双手和身体其他部位远离正在运动的其他组件。

1. 关闭设备。
2. 从插座上拔下电源线。
3. 拔掉所有线缆和外接部件。
4. 取下前盖。
  - a. 找到 NAS 左侧的锁紧机构。
  - b. 向上滑动锁扣以释放前盖。

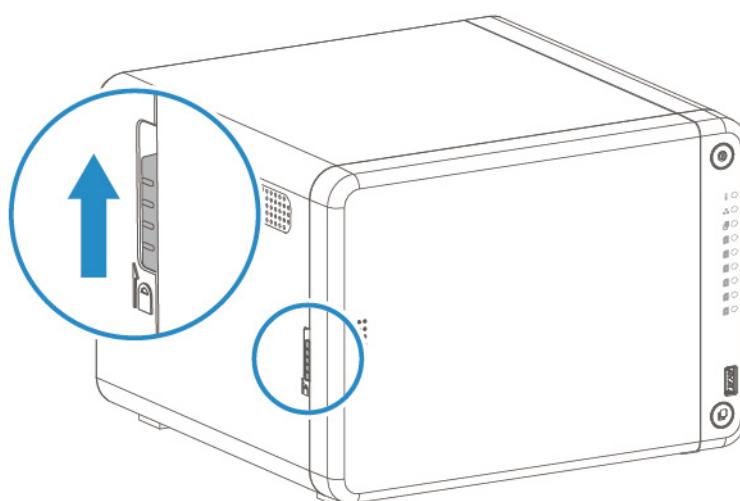


c. 将前盖向左滑动，然后拉出。

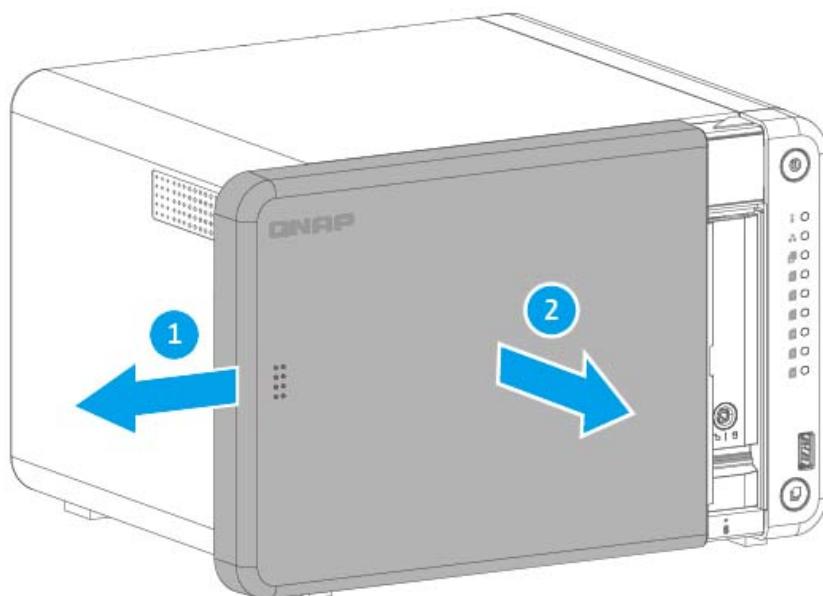


5. 取下外壳盖。

a. 卸下用于将外壳盖固定到机箱的螺丝。

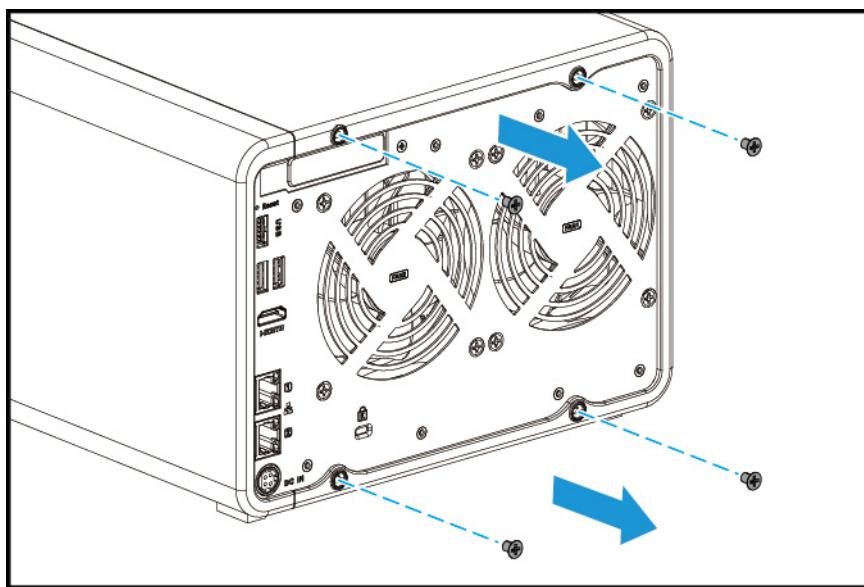


b. 将外壳盖向后滑动。

c. 将外壳盖向左滑动，使其完全脱离机箱。

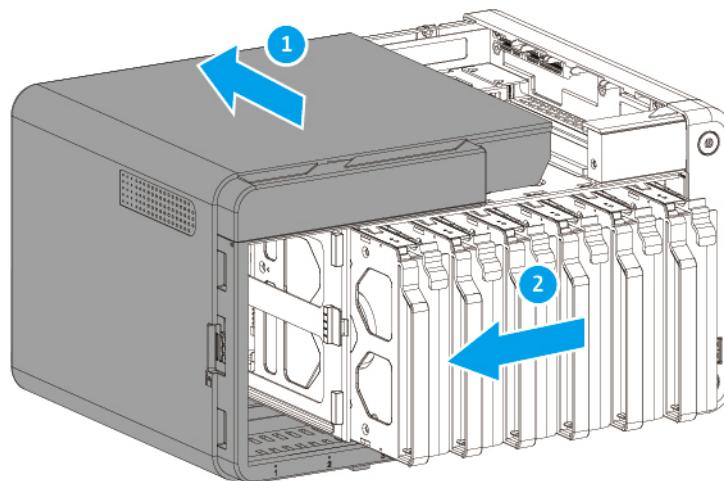


6. 取下 PCIe 盖板。

- a. 取下用于将盖板固定到支架的螺丝。
- b. 将盖板从插槽中拉出。

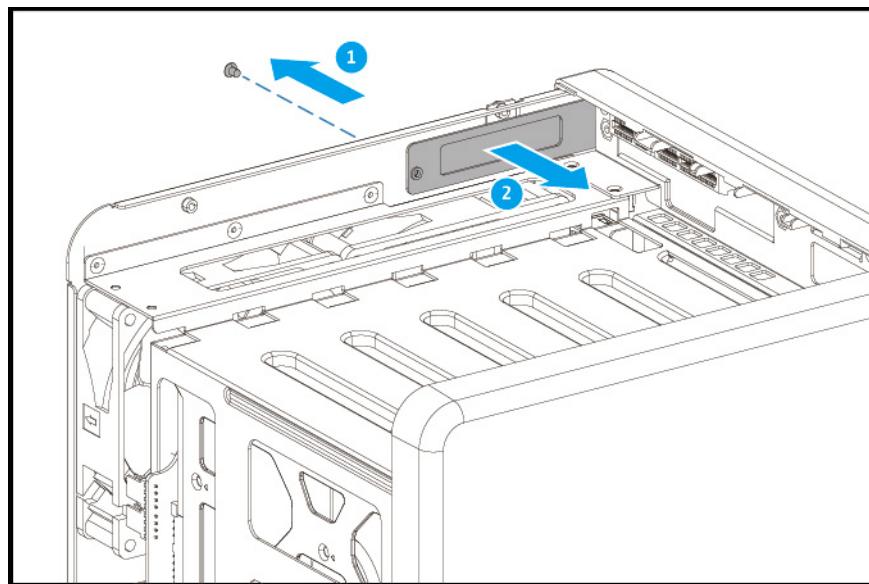


**7. 可选: 将全高支架安装到扩展卡上。**

- a. 卸下现有支架的所有螺丝。

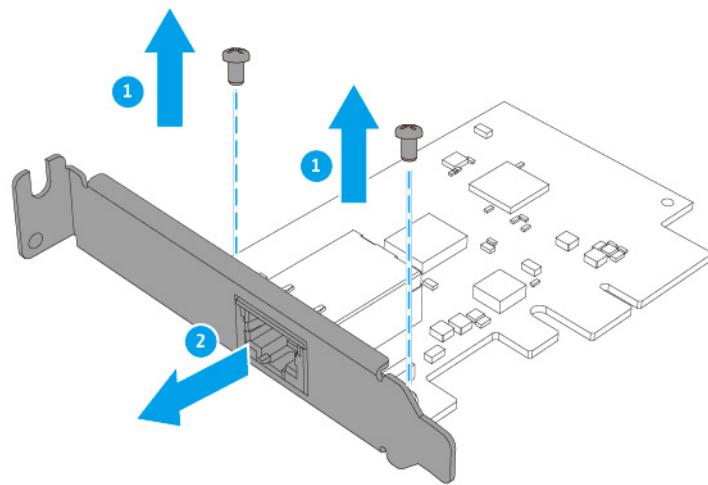

- b. 小心地从扩展卡取下支架。

- c. 使用相同的螺丝将全高支架安装到扩展卡上。

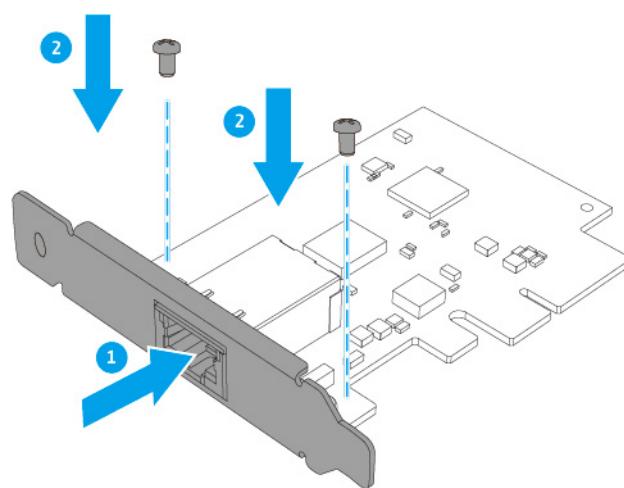


- d. 确认支架不会移动。

**8. 安装扩展卡。**

- a. 握住卡片边缘。


- b. 将其插入插槽中。

c. 安装螺丝。

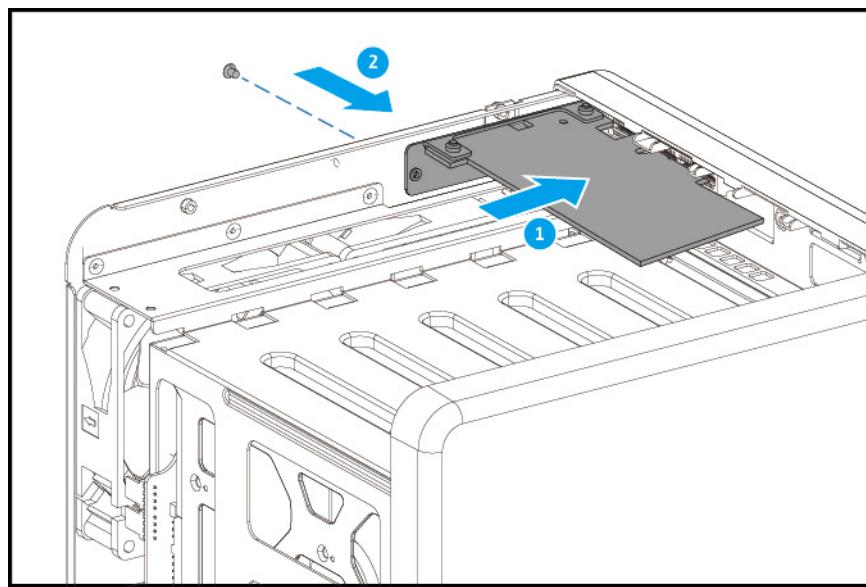


9. 安装外壳盖。

- a. 将外壳盖放在 NAS 上。
- b. 将外壳盖滑到左侧。
- c. 将外壳盖向前滑动，将其固定到机箱。

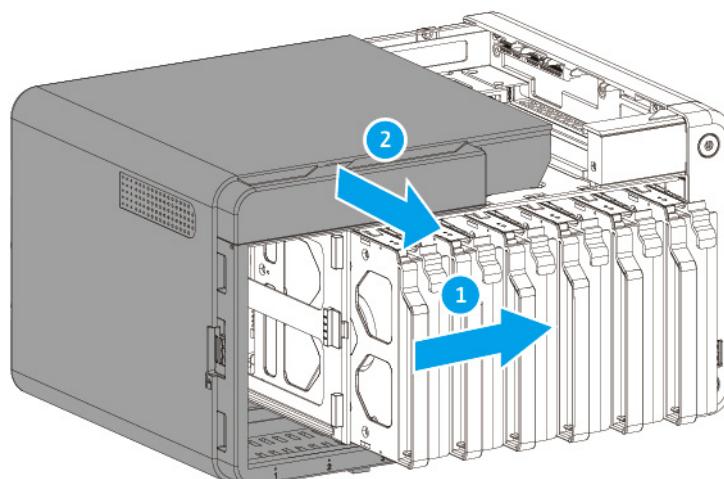


d. 安装 NAS 背面的螺丝。

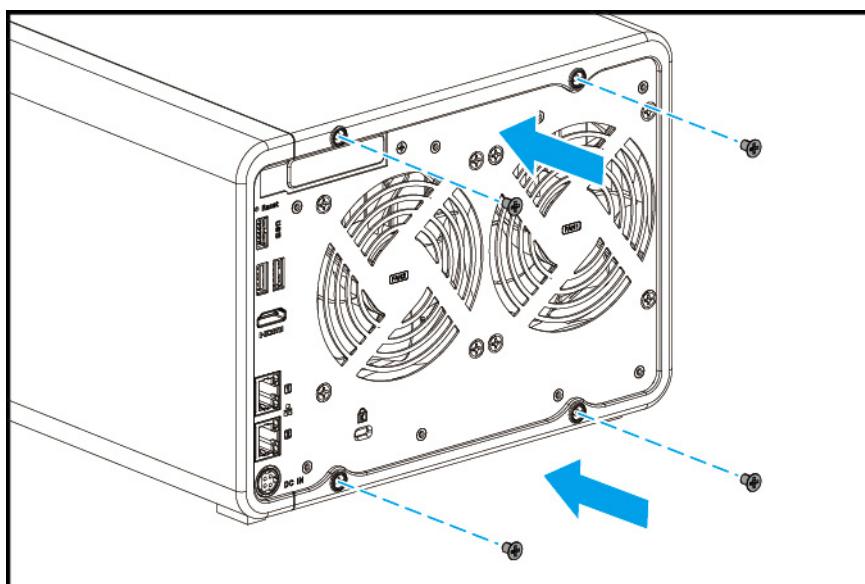


10. 安装前盖。

a. 将前盖与外壳上的凹槽对齐，然后向右滑动。

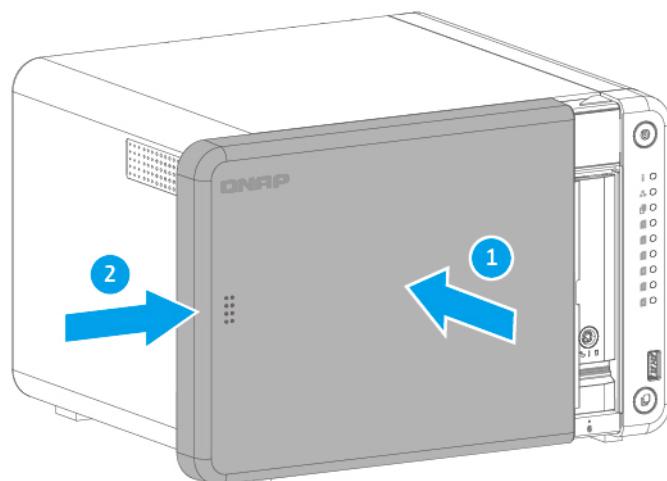

- b.** 向下滑动锁扣以固定前盖。

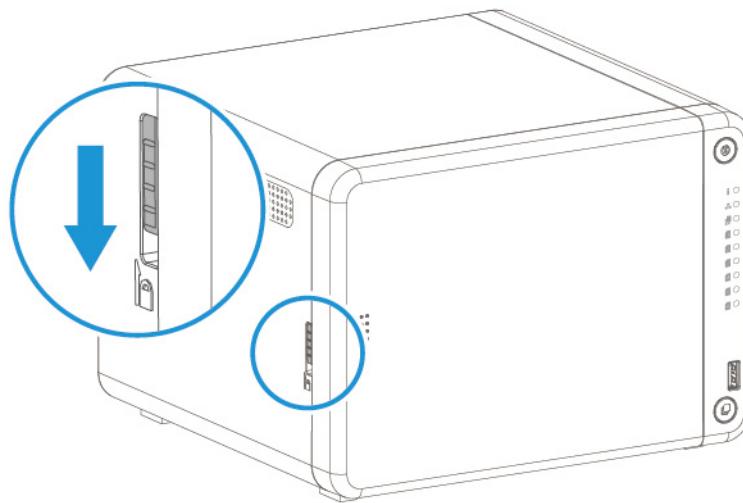

11. 连接所有线缆和外接部件。
12. 将电源线连接到插座。
13. 启动 NAS 电源。

## 扩展单元安装

NAS 支持 SATA 和 USB 扩展单元。有关详细信息，请参见下表。

您可以从 QNAP 或授权经销商处购买存储扩展配件。

有关详细信息，请转到 <https://shop.qnap.com/>。

有关兼容扩展单元的列表和最大可应用扩展单元数，请转到 <https://www.qnap.com/go/compatibility-expansion>。

| 扩展单元型号  | 描述  | 需要的配件  |
|---------|---|--|
| TR-002  | <ul style="list-style-type: none"> <li>• 使用 USB 3.2 Gen 2 C 型接口</li> <li>• 支持 SATA HDD/SSD</li> </ul> | USB 3.2 Gen 2 A 型至 C 型线缆   |
| TR-004  | <ul style="list-style-type: none"> <li>• 使用 USB 3.2 Gen 1 C 型接口</li> <li>• 支持 SATA HDD/SSD</li> </ul> | USB 3.2 Gen 2 A 型至 C 型线缆   |
| TR-004U | <ul style="list-style-type: none"> <li>• 使用 USB 3.2 Gen 1 C 型接口</li> <li>• 支持 SATA HDD/SSD</li> </ul> | <ul style="list-style-type: none"> <li>• USB 3.2 Gen 1 A 型至 C 型线缆</li> <li>• RAIL-B02</li> </ul> |


| 扩展单元型号       | 描述  | 需要的配件   |
|--------------|---|---|
| TL-D800C     | <ul style="list-style-type: none"> <li>使用 USB 3.2 Gen 2 C 型接口</li> <li>支持 SATA HDD/SSD</li> </ul>       | USB 3.2 Gen 2 A 型至 C 型线缆  |
| TL-R1200C-RP | <ul style="list-style-type: none"> <li>使用 USB 3.2 Gen 2 C 型接口</li> <li>支持 SATA HDD/SSD</li> </ul>       | <ul style="list-style-type: none"> <li>USB 3.2 Gen 2 A 型至 C 型线缆</li> <li>RAIL-B02</li> </ul>  |
| TL-D400S     | <ul style="list-style-type: none"> <li>使用 SATA 6 Gbps (SFF-8088) 接口</li> <li>支持 SATA HDD/SSD</li> </ul> | <ul style="list-style-type: none"> <li>1 x SFF-8088 连接器线缆</li> <li>QXP-400eS-A1164 主机总线适配器</li> </ul>                               |
| TL-D800S     | <ul style="list-style-type: none"> <li>使用 SATA 6 Gbps (SFF-8088) 接口</li> <li>支持 SATA HDD/SSD</li> </ul> | <ul style="list-style-type: none"> <li>2 x SFF-8088 连接器线缆</li> <li>QXP-800eS-A1164 主机总线适配器</li> </ul>                               |
| TL-D1600S    | <ul style="list-style-type: none"> <li>使用 SATA 6 Gbps (SFF-8088) 接口</li> <li>支持 SATA HDD/SSD</li> </ul> | <ul style="list-style-type: none"> <li>4 x SFF-8088 至 SFF-8644 连接器线缆</li> <li>QXP-1600eS-A1164 主机总线适配器</li> </ul>                   |
| TL-R400S     | <ul style="list-style-type: none"> <li>使用 SATA 6 Gbps (SFF-8088) 接口</li> <li>支持 SATA HDD/SSD</li> </ul> | <ul style="list-style-type: none"> <li>1 x SFF-8088 连接器线缆</li> <li>QXP-400eS-A1164 主机总线适配器</li> <li>RAIL-B02</li> </ul>             |
| TL-R1200S-RP | <ul style="list-style-type: none"> <li>使用 SATA 6 Gbps (SFF-8088) 接口</li> <li>支持 SATA HDD/SSD</li> </ul> | <ul style="list-style-type: none"> <li>3 x SFF-8088 至 SFF-8644 连接器线缆</li> <li>QXP-1600eS-A1164 主机总线适配器</li> <li>RAIL-B02</li> </ul> |

## 连接 USB 扩展单元

要将设备连接到 USB 扩展单元，需要 USB A 型至 USB C 型线缆。

- 确认 NAS 已关机。
- 将扩展单元连接到 NAS。
  - 将 USB 线缆连接到扩展单元上的 USB C 型端口。

- b.** 将 USB 线缆连接到 NAS 上的 USB 3.2 Gen 2 A 型端口。

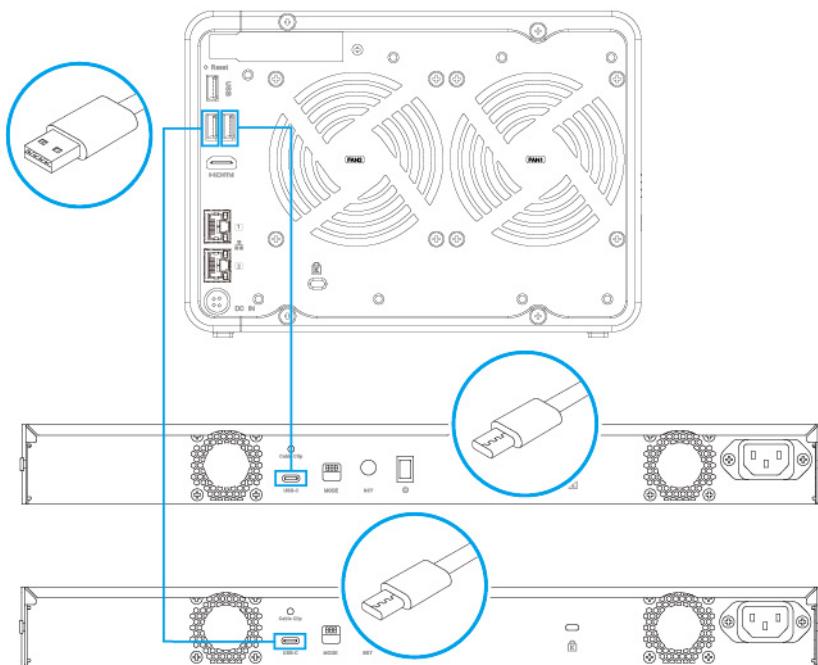

### 注意

此图所示为连接到两个 TR-004U USB 扩展单元的 TS-664。

3. 为扩展单元接通电源。
4. 启动 NAS 电源。
5. 确认 NAS 能够识别扩展单元。
  - a. 以管理员身份登录 QTS。
  - b. 转到**主菜单 > 存储与快照总管 > 概述 > 系统**。
  - c. 确认扩展单元已列出。

## 连接 SATA 扩展单元


NAS 支持连接一个 SATA 扩展单元。有关所需配件的详细信息，请参见[扩展单元安装](#)。

1. 关闭 NAS 电源。
2. 在 PCIe 插槽上安装主机总线适配器。  
有关详细信息，请参见[安装扩展卡](#)。

### 注意

将 SATA JBOD 设备连接到主机设备时，需要 QNAP QXP 主机总线适配器。第三方主机总线适配器与 QNAP JBOD 设备不兼容。

**3. 按以下拓扑将扩展单元连接到 NAS。**

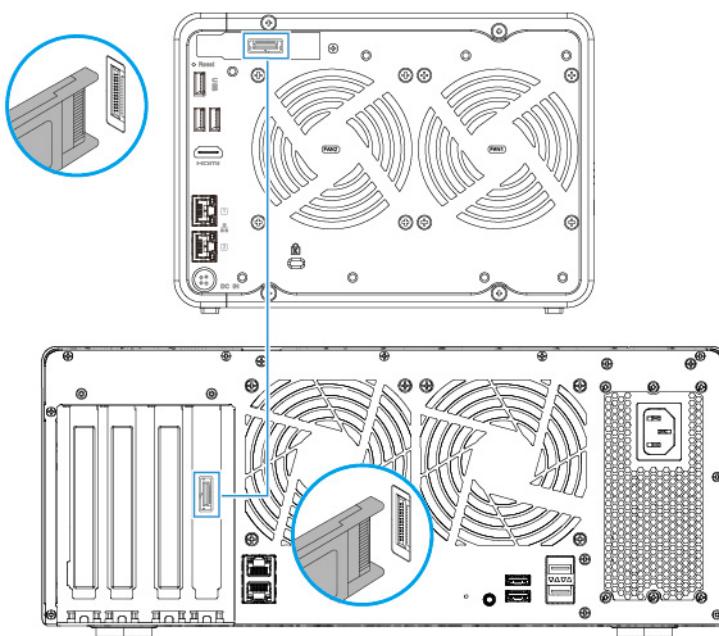

**4. 启动 SATA JBOD 扩展单元电源。**

**5. 启动 NAS 电源。**

**6. 确认 NAS 能够识别扩展单元。**

- a.** 以管理员身份登录 QuTS hero。
- b.** 转到**主菜单 > 存储与快照总管 > 概述 > 系统**。
- c.** 确认扩展单元已列出。

## QTS 安装

NAS 使用 QNAP QTS 操作系统。可以使用以下任一方法安装 QTS。

| 方法                     | 描述   | 要求  |
|------------------------|--|---|
| Qfinder Pro 安装<br>(推荐) | <p>如果 NAS 已连接到您的局域网，可以执行以下操作：</p> <ul style="list-style-type: none"> <li>• 使用 Qfinder Pro 定位 NAS。</li> <li>• 完成“智能安装指南”向导中的步骤。</li> </ul> <p>有关详细信息，请参见<a href="#">使用 Qfinder Pro 初始化 QTS</a>。</p> | <ul style="list-style-type: none"> <li>• 计算机</li> <li>• 网线</li> <li>• Qfinder Pro 安装程序</li> </ul> |

| 方法   | 描述  | 要求  |
|------|---|---|
| 云安装  | <p>如果 NAS 已连接到 Internet，可以执行以下操作：</p> <ul style="list-style-type: none"> <li>扫描 NAS 上的二维码。</li> <li>指定 Cloud Key。</li> <li>登录您的 myQNAPcloud 帐户。</li> <li>使用 myQNAPcloud Link 远程访问 NAS。</li> <li>完成“智能安装指南”向导中的步骤。</li> </ul> <p>有关详细信息，请参见<a href="#">使用云安装网站初始化 QTS</a>。</p> | <ul style="list-style-type: none"> <li>计算机或移动设备</li> <li>网线</li> <li>myQNAPcloud 帐户</li> <li>Cloud Key</li> </ul> |
| 本地安装 | <p>如果 NAS 支持 HDMI 输出，可以执行以下操作：</p> <ul style="list-style-type: none"> <li>将 NAS 连接到所需的硬件。</li> <li>完成“智能安装指南”向导中的步骤。</li> </ul> <p>有关详细信息，请参见<a href="#">使用 HDMI 连接初始化 QTS</a>。</p>   | <ul style="list-style-type: none"> <li>监视器</li> <li>HDMI 线缆</li> <li>USB 键盘或遥控器（仅部分型号提供）</li> </ul>               |

## 使用 Qfinder Pro 初始化 QTS

您可以使用 Qfinder Pro 初始化 QTS，Qfinder Pro 是一款实用工具，设计用于帮助您在网络上查找和管理 QNAP 设备。

### 警告

初始化 QTS 将删除硬盘上的所有数据。请先备份您的数据，然后再继续。

- 启动 NAS 电源。
- 将 NAS 连接到您的局域网中。
- 在已连接到同一局域网的计算机上运行 Qfinder Pro。

### 提示

要下载 Qfinder Pro，请转到 <https://www.qnap.com/utilities>。

- 单击下一步。  
QNAP 保修服务页面将在默认 Web 浏览器中打开。
- 单击检查保修期。  
QNAP 保修服务窗口将在新 Web 页中打开。

### 重要

您可以在 [QNAP 保修服务](#) 中查看设备保修策略或购买延长保修计划。

**6. 关闭保修页面。**

智能安装指南将在默认 Web 浏览器中打开。

**7. 如果屏幕显示其他操作系统，请单击 QTS。**

**注意**

仅当 NAS 支持安装多个操作系统且安装的默认操作系统不是 QTS 时，才需要执行此步骤。

NAS 将重新启动，且智能安装屏幕显示 QTS 为要安装的操作系统。

**8. 单击启动智能安装。**

**9. 请使用以下任意方法指定固件版本。**

| 方式            | 用户操作   |
|---------------|--|
| <b>当前版本</b>   | 选择 <b>当前版本</b> 。   |
| <b>最新可用版本</b> | <p><b>a.</b> 选择<b>最新可用版本</b>。</p> <p><b>b.</b> 单击<b>检查更新</b>。</p> <p>系统将检查设备可用的最新固件更新。如果有更新的版本，系统将下载固件更新并重新启动 NAS。</p> |
| <b>已上传的版本</b> | <p><b>a.</b> 选择<b>已上传的版本</b>。</p> <p><b>b.</b> 单击<b>浏览</b>。</p> <p>此时会出现文件上传窗口。</p> <p><b>c.</b> 选择固件文件。</p>           |

**10. 单击下一步。**

此时会出现**输入 NAS 名称和管理员密码**屏幕。

**11. 指定以下信息。**

- NAS 名称：**指定 1 至 14 个字符的名称。名称可以包含字母（A 到 Z、a 到 z）、数字（0 到 9）和连字符（-），但不能以连字符结尾。
- 用户名：**指定包含 1 至 32 个字符的管理员用户名。用户名可以包含字母（A 到 Z、a 到 z）、数字（0 到 9）、和连字符（-）、多字节中文、日文、韩文和俄文字符。  
用户名不得包含以下特殊字符：重音符（'）、星号（\*）、等号（=）、加号（+）、方括号（[ ]）、花括号（{}）、斜线（/）、竖线（|）、分号（;）、冒号（:）、撇号（'）、引号（"）、逗号（,）、小于号（<）、大于号（>）、反斜线（/）、问号（?）、百分号（%）、美元符号（\$）和空格。

**重要**

要保护您的 NAS 免受暴力破解攻击，请在 QTS 初始化期间创建新的系统管理员帐户，以禁用默认“admin”帐户。

- 密码：**指定 1 至 64 个字符的管理员密码。密码可以包含任意个 ASCII 字符。

- 确认密码：再次输入新管理员密码。

**12. 单击下一步。**

此时会出现**设置日期和时间**屏幕。

**13. 使用以下任意方法指定时区、日期和时间：**

**提示**

QNAP 建议连接到 NTP 服务器，以确保 NAS 遵循协调世界时 (UTC) 标准。

| 方式            | 用户操作  |
|---------------|---|
| 与计算机或移动设备时间同步 | <b>选择与计算机/设备时间一致</b><br>NAS 将与用于完成初始化的计算机或移动设备的日期和时间同步。     |
| 手动输入          | <b>a. 选择手动输入。</b><br><b>b. 指定日期和时间。</b><br>NAS 将使用指定的日期和时间。 |
| 自动与时间服务器同步    | <b>单击自动与 Internet 时间服务器同步。</b><br>NAS 将与 NTP 服务器同步。         |

**14. 单击下一步。**

此时会出现**配置网络设置**屏幕。

**15. 使用以下任意方法配置网络设置。**

| 方式                      | 用户操作   |
|-------------------------|--|
| <b>自动获取 IP 地址(DHCP)</b> | <b>选择自动获取 IP 地址(DHCP)。</b><br>系统将自动检测和配置 IP 地址设置。  |
| <b>使用静态 IP 地址</b>       | <b>a. 选择使用静态 IP 地址。</b><br>此时会出现 IP 地址配置页。<br><br><b>b. 指定以下 IP 地址配置：</b> <ul style="list-style-type: none"> <li>· 接口</li> <li>· IP 地址</li> <li>· 子网掩码</li> <li>· 默认网关</li> <li>· 主 DNS 服务器</li> <li>· 次要 DNS 服务器</li> </ul> |

**16. 单击下一步。**

此时会出现**Thunderbolt 连接页**。

**注意**

仅当设备支持 Thunderbolt 时才会出现此页面。您需要使用 Thunderbolt 线缆将设备连接到计算机。

**17. 单击下一步。**

此时会出现摘要屏幕。

**18. 检查设置。****19. 单击应用。**

此时会出现确认消息。

**警告**

单击初始化后，将先删除硬盘上的所有数据，然后再安装 QTS。

**20. 单击初始化。****重要**

初始化可能需要几分钟才能完成。在此过程中请勿关闭设备。

此时即会初始化 QTS。

## 使用云安装网站初始化 QTS

您可以在云安装网站上初始化 QTS，此网站设计用于帮助您设置 QNAP 设备。

**警告**

初始化 QTS 将删除硬盘上的所有数据。请先备份您的数据，然后再继续。

**1. 启动 NAS 电源。****2. 将 NAS 连接到 Internet。****3. 使用以下方法之一转到“QNAP Cloud 安装”网站：**

- 在计算机上，转到专用于您所在区域的网站：
  - 全球： <https://install.qnap.com>
  - 中国： <https://install.qnap.com.cn>
- 或使用移动设备扫描 NAS 上的二维码。

网页中会列出本地网络上所有尚未初始化的 QNAP NAS 设备。

**4. 从列表中找到您的 NAS，然后单击**初始化**。**

**提示**

如果您的 NAS 已连接到 Internet，您还可以转到 <https://install.qnap.com/set> 以输入印刷在 NAS 上的 Cloud Key。这样即使 NAS 与您的计算机不在同一网络上，您也可以初始化 NAS。

安装向导将在默认 Web 浏览器中打开

**5. 创建帐户或登录 myQNAPcloud。**

**注意**

创建帐户后，您必须返回此页面才能完成安装。

**6. 为 NAS 指定 myQNAPcloud 设备名称。**

**注意**

- myQNAPcloud 设备名称用于远程访问 NAS。
- 因安全原因，在您的 NAS 上初始化 myQNAPcloud Link 远程连接服务后，会将其禁用。通过 LAN 连接到 QTS，然后安装 myQNAPcloud Link 可启用此服务。

**7. 单击**下一步**。**

QNAP 保修服务页面将在默认 Web 浏览器中打开。

**8. 单击**检查保修期**。**

QNAP 保修服务窗口将在新 Web 页中打开。

**重要**

您可以在 [QNAP 保修服务](#) 中查看设备保修策略或购买延长保修计划。

**9. 关闭保修页面。**

智能安装指南将在默认 Web 浏览器中打开。

**10. 如果屏幕显示其他操作系统，请单击**QTS**。**

**注意**

- 仅当 NAS 支持安装多个操作系统且安装的默认操作系统不是 QTS 时，才需要执行此步骤。
- 如果屏幕显示 QuTS hero，您可能需要先单击**跳过**。

NAS 将重新启动，且智能安装屏幕显示 QTS 为要安装的操作系统。

**11. 单击**启动智能安装**。**

**12.** 请使用以下任意方法指定固件版本。

| 方式            | 用户操作   |
|---------------|--|
| <b>当前版本</b>   | 选择 <b>当前版本</b> 。   |
| <b>最新可用版本</b> | <p><b>a.</b> 选择<b>最新可用版本</b>。</p> <p><b>b.</b> 单击<b>检查更新</b>。</p> <p>系统将检查设备可用的最新固件更新。如果有更新的版本，系统将下载固件更新并重新启动 NAS。</p> |
| <b>已上传的版本</b> | <p><b>a.</b> 选择<b>已上传的版本</b>。</p> <p><b>b.</b> 单击<b>浏览</b>。</p> <p>此时会出现文件上传窗口。</p> <p><b>c.</b> 选择固件文件。</p>           |

**13.** 单击**下一步**。

此时会出现**输入 NAS 名称和管理员密码**屏幕。

**14.** 指定以下信息。

- NAS 名称**: 指定 1 至 14 个字符的名称。名称可以包含字母（A 到 Z、a 到 z）、数字（0 到 9）和连字符（-），但不能以连字符结尾。
- 用户名**: 指定包含 1 至 32 个字符的管理员用户名。用户名可以包含字母（A 到 Z、a 到 z）、数字（0 到 9）、和连字符（-）、多字节中文、日文、韩文和俄文字符。  
用户名不得包含以下特殊字符：重音符（'）、星号（\*）、等号（=）、加号（+）、方括号（[ ]）、花括号（{}）、斜线（\）、竖线（|）、分号（;）、冒号（:）、撇号（'）、引号（"）、逗号（,）、小于号（<）、大于号（>）、反斜线（/）、问号（?）、百分号（%）、美元符号（\$）和空格。

**重要**

要保护您的 NAS 免受暴力破解攻击，请在 QTS 安装期间创建新的系统管理员帐户，以禁用默认“admin”帐户。

- 密码**: 指定 1 至 64 个字符的管理员密码。密码可以包含任意个 ASCII 字符。
- 确认密码**: 再次输入新管理员密码。

**15.** 单击**下一步**。

此时会出现**设置日期和时间**屏幕。

**16.** 使用以下任意方法指定时区、日期和时间：

**提示**

QNAP 建议连接到 NTP 服务器，以确保 NAS 遵循协调世界时 (UTC) 标准。

| 方式            | 用户操作   |
|---------------|--|
| 与计算机或移动设备时间同步 | 选择 <b>与计算机/设备时间一致</b><br>NAS 将与用于完成初始化的计算机或移动设备的日期和时间同步。         |
| 手动输入          | <p>a. 选择<b>手动输入</b>。</p> <p>b. 指定日期和时间。<br/>NAS 将使用指定的日期和时间。</p> |
| 自动与时间服务器同步    | 单击 <b>自动与 Internet 时间服务器同步</b> 。<br>NAS 将与 NTP 服务器同步。            |

**17. 单击下一步。**

此时会出现**配置网络设置**屏幕。

**18. 使用以下任意方法配置网络设置。**

| 方式                      | 用户操作  |
|-------------------------|---|
| <b>自动获取 IP 地址(DHCP)</b> | 选择 <b>自动获取 IP 地址(DHCP)</b> 。<br>系统将自动检测和配置 IP 地址设置。   |
| <b>使用静态 IP 地址</b>       | <p>a. 选择<b>使用静态 IP 地址</b>。<br/>此时会出现 IP 地址配置页。</p> <p>b. 指定以下 IP 地址配置：</p> <ul style="list-style-type: none"> <li>• 接口</li> <li>• IP 地址</li> <li>• 子网掩码</li> <li>• 默认网关</li> <li>• 主 DNS 服务器</li> <li>• 次要 DNS 服务器</li> </ul> |

**19. 单击下一步。**

此时会出现**Thunderbolt 连接**页。

**注意**

仅当设备支持 Thunderbolt 时才会出现此页面。您需要使用 Thunderbolt 线缆将设备连接到计算机。

**20. 单击下一步。**

此时会出现**摘要**屏幕。

**21. 检查设置。**

## 22. 单击应用。

此时会出现确认消息。

### 警告

单击初始化后，将先删除硬盘上的所有数据，然后再安装 QTS。

## 23. 单击初始化。

### 重要

初始化可能需要几分钟才能完成。在此过程中请勿关闭设备。

此时即会初始化 QTS。

## 使用 HDMI 连接初始化 QTS

如果 NAS 支持 HDMI，您可以在 HDMI 显示器上初始化 QTS。

### 警告

初始化 QTS 将删除硬盘上的所有数据。请先备份您的数据，然后再继续。

**1. 将 HDMI 显视器连接到 NAS。**

**2. 将 USB 键盘连接到 NAS 或准备好 QNAP 红外遥控器（仅部分型号提供）。**

**3. 启动 NAS 电源。**

此时会出现“智能安装指南”的欢迎屏幕。

**4. 选择启动智能安装指南。**

此时会出现输入 NAS 名称和管理员密码屏幕。

**5. 指定以下信息：**

- NAS 名称：**指定 1 至 14 个字符的名称。名称可以包含字母（A 到 Z、a 到 z）、数字（0 到 9）和连字符（-），但不能以连字符结尾。

- 用户名：**指定包含 1 至 32 个字符的管理员用户名。用户名可以包含字母（A 到 Z、a 到 z）、数字（0 到 9）、和连字符（-）、多字节中文、日文、韩文和俄文字符。

用户名不得包含以下特殊字符：重音符（'）、星号（\*）、等号（=）、加号（+）、方括号（[ ]）、花括号（{}）、斜线（/）、竖线（|）、分号（;）、冒号（:）、撇号（'）、引号（"）、逗号（,）、小于号（<）、大于号（>）、反斜线（/）、问号（?）、百分号（%）、美元符号（\$）和空格。

### 重要

要保护您的 NAS 免受暴力破解攻击，请在 QTS 安装期间创建新的系统管理员帐户，以禁用默认“admin”帐户。

- 密码：**指定 1 至 64 个字符的管理员密码。密码可以包含任意个 ASCII 字符。

- 确认密码：**再次输入新管理员密码。

**6. 单击下一步。**

此时会出现 **Thunderbolt 连接页**。

**注意**

仅当设备支持 Thunderbolt 时才会出现此页面。您需要使用 Thunderbolt 线缆将设备连接到计算机。

**7. 单击下一步。**

此时会出现**摘要屏幕**。

**8. 检查设置。****9. 单击下一步。**

此时会出现**确认屏幕**。

**警告**

**单击下一步后**，将先删除硬盘上的所有数据，然后再安装 QTS。

**10. 单击下一步。****注意**

初始化可能需要几分钟才能完成。在此过程中请勿关闭设备。

此时即会初始化 QTS。

## 4. 基本操作

本章介绍 NAS 的基本操作。

### 电源按钮

| 操作   | 用户操作          | 结果                                     |
|------|---------------|--|
| 启动电源 | 按下此按钮一次。      | 设备开机。                                  |
| 关闭电源 | 按住此按钮 1.5 秒钟。 | 设备关机。                                  |
| 强制关机 | 按住此按钮 5 秒钟。   | 设备关机。<br><b>重要</b><br>仅当设备无响应时才能使用此方法。 |

### 重置按钮

#### 重要

要保护您的设备免受暴力破解攻击，QNAP 建议在系统重置后禁用默认 admin 帐户。要禁用默认 admin 帐户，您必须先创建新管理员帐户，注销 admin 帐户，然后使用新帐户登录。

| 操作     | 用户操作         | 结果   |
|--------|--------------|--|
| 基本系统重置 | 按住此按钮 3 秒钟。  | <p>以下设置将重置为默认值：</p> <ul style="list-style-type: none"> <li>admin 帐户将自动启用。</li> <li>系统管理员密码：有关默认密码的详细信息，请参见<a href="#">此常见问题</a>。</li> <li>admin 帐户将自动启用。</li> <li>TCP/IP 配置： <ul style="list-style-type: none"> <li>通过 DHCP 自动获取 IP 地址设置</li> <li>禁用巨型帧</li> <li>如果启用端口中继（仅限多局域网型号），则端口中继模式将重置为“主动备份(故障转移)”。</li> </ul> </li> <li>系统端口：8080（系统服务端口）</li> <li>安全等级：低（允许所有连接）</li> <li>LCD 面板密码：（空白）</li> <li>VLAN：禁用</li> </ul> |
| 高级系统重置 | 按住此按钮 15 秒钟。 | <p>恢复默认出厂设置。<br/>要在高级系统重置后检索旧数据，请在 NAS 上重新创建先前的文件夹结构。</p>  |

## USB 一键复制按钮

使用 USB 一键复制按钮，可以将数据备份从 USB 设备复制到 NAS，或将数据备份从 NAS 复制到 USB 设备。

此功能支持增量备份。NAS 只会复制在上次备份后修改或添加的文件。

要配置外部设备连接到按钮的 USB 端口时按钮的行为，请在 QNAP 操作系统上安装并使用 Hybrid Backup Sync。有关详细信息，请参见 [Hybrid Backup Sync](#) 文档。

## LED

开启设备电源后，LED 指示灯会指示系统状态和相关信息。以下 LED 信息仅适用于硬盘已正确安装并且设备已连接到网络或主机的情况。

有关 LED 位置的详细信息，请参见[前面板](#)。

## 系统状态 LED

| 状态              | 描述  |
|-----------------|---|
| 红绿交替闪烁，间隔 0.5 秒 | <ul style="list-style-type: none"> <li>硬盘正在格式化。</li> <li>设备正在初始化。</li> <li>操作系统正在更新。</li> <li>RAID 正在重建。</li> <li>正在进行在线 RAID 容量扩展。</li> <li>正在进行在线 RAID 级别迁移。</li> </ul>   |
| 红色              | <ul style="list-style-type: none"> <li>硬盘无效。</li> <li>磁盘卷的容量已满。</li> <li>磁盘卷的容量即将被占满。</li> <li>系统风扇故障。</li> <li>访问（读/写）数据时出错。</li> <li>在硬盘上检测到坏扇区。</li> <li>设备处于降级只读模式（RAID 5 或 RAID 6 中的两个成员硬盘出现故障，但仍可读取数据）。</li> <li>硬件自检发生错误。</li> </ul> |
| 闪烁红色，间隔 0.5 秒   | 设备处于降级模式（RAID 1、RAID 5 或 RAID 6 中的一个成员硬盘出现故障）。  |
| 绿色              | 设备已就绪。  |
| 闪烁绿色，间隔 0.5 秒   | <ul style="list-style-type: none"> <li>设备未配置。</li> <li>硬盘未格式化。</li> </ul>   |
| 熄灭              | <ul style="list-style-type: none"> <li>所有硬盘都处于待机模式。</li> <li>设备已关机。</li> </ul>  |

## 硬盘 LED

| 状态   | 描述                      |
|------|-------------------------|
| 闪烁红色 | 正在访问数据，在此过程中发生了硬盘读/写错误。 |

| 状态   | 描述         |
|------|------------|
| 红色   | 发生硬盘读/写错误。 |
| 闪烁绿色 | 正在访问数据。    |
| 绿色   | 硬盘就绪。      |
| 熄灭   | 未检测到硬盘。    |

### LAN LED

| 状态   | 描述                   |
|------|----------------------|
| 橙色   | 网络连接正以 1 Gbps 的速度运行。 |
| 闪烁橙色 | 正在从网络访问设备。           |
| 熄灭   | 设备未连接至网络。            |

### 2.5 Gb 以太网速度 LED

| 状态 | 描述   |
|----|--|
| 绿色 | 网络连接正以 2.5 Gbps 的速度运行。   |
| 橙色 | 网络连接正以 1 Gbps 或 100 Mbps 的速度运行。  |
| 熄灭 | <ul style="list-style-type: none"> <li>• 网络连接正以 10 Mbps 的速度运行。</li> <li>• 没有网络连接。</li> </ul> |

### 2.5 Gb 以太网活动 LED

| 状态   | 描述         |
|------|------------|
| 橙色   | 网络连接已建立。   |
| 闪烁橙色 | 正在从网络访问设备。 |
| 熄灭   | 没有网络连接。    |

## USB 一键复制 LED

| 状态            | 描述   |
|---------------|--|
| 闪烁蓝色，间隔 0.5 秒 | <ul style="list-style-type: none"> <li>检测到一个 USB 设备连接到 USB 一键复制端口。</li> <li>正在从设备移除一个连接到前 USB 端口的 USB 设备。</li> <li>正在访问一个连接到前 USB 端口的 USB 设备。</li> </ul> |
| 蓝色            | 在前 USB 端口中检测到 USB 设备。  |
| 熄灭            | NAS 已经完成与连接到前 USB 端口的 USB 设备间的数据复制。  |

## 警告音

| 时长           | 频率         | 描述  |
|--------------|------------|---|
| 短提示音 (0.5 秒) | 1          | <ul style="list-style-type: none"> <li>NAS 正在启动。</li> <li>按下重置按钮 3 秒钟后，NAS 将重置配置。</li> <li>按下重置按钮 10 秒钟后，NAS 将重置配置并重新启动。</li> <li>操作系统已更新。</li> </ul> |
|              | 3          | <ul style="list-style-type: none"> <li>无法将 NAS 数据复制到连接到 USB 一键复制端口的外部存储设备。</li> </ul>   |
| 长提示音 (1.5 秒) | 3 (每 5 分钟) | <ul style="list-style-type: none"> <li>系统风扇故障。</li> <li>风扇模块已移除。</li> </ul>   |
|              | 2          | <ul style="list-style-type: none"> <li>磁盘卷的容量即将被占满。</li> <li>磁盘卷的容量已满。</li> <li>硬盘处于降级模式。</li> <li>硬盘正在重建。</li> <li>插入或抽出硬盘。</li> </ul>               |
|              | 1          | <ul style="list-style-type: none"> <li>NAS 已通过强制关闭关机（硬件关闭）。</li> <li>NAS 已成功开机并准备就绪。</li> </ul>   |

## 5. NAS 迁移

通过将所有硬盘从源 NAS 安装到目标 NAS，可以将数据和设置从当前 NAS 迁移到另一个型号的 NAS，从而使中断次数降到最低。迁移后，目标 NAS 上将保留 RAID 配置和其他设置。

### NAS 迁移要求

只能将硬盘迁移到特定的 NAS 型号，具体取决于源 NAS。有关兼容直接 NAS 迁移功能的 NAS 型号的列表，请参见 <https://www.qnap.com/go/nas-migration>。

设备必须符合以下要求：

- QTS NAS 支持多种类型的 NAS 迁移：
  - ARM NAS 至 ARM NAS
  - x86 NAS 至 x86 NAS
  - ARM NAS 至 x86 NAS

#### 注意

无法从 x86 NAS 迁移至 ARM NAS。

- 目标 NAS 必须在与源 NAS 相同的 QTS 版本（或更高版本）上运行。

#### 重要

由于文件系统不兼容，因此不支持 QTS NAS 和 QuTS hero NAS 之间的系统迁移。

#### 警告

在 QTS NAS 和 QuTS hero NAS 之间迁移硬盘可能导致数据损坏。

- 目标 NAS 必须有足够的可用的硬盘架，以容纳要从源 NAS 迁移的所有硬盘。

对于不支持 NAS 迁移的 NAS 型号，可以使用 HBS 3 迁移现有数据。有关详细信息，请参见 [使用 HBS 3 迁移 NAS 数据](#)。

### NAS 迁移后的状态和设置变化

迁移后，NAS 数据和设置的状态会发生变化。

| 数据和设置             | NAS 迁移后                 |
|-------------------|-------------------------|
| 注册 myQNAPcloud 名称 | 注册的 myQNAPcloud 名称不会迁移。 |

| 数据和设置         | NAS 迁移后  |
|---------------|--|
| 加密的磁盘卷        | <p>如果 NAS 不支持文件系统加密，加密的磁盘卷不会迁移。</p> <div data-bbox="552 370 609 402" style="background-color: #ffcccb; padding: 2px 5px; border-radius: 5px;"><b>警告</b></div> <p>为防止数据丢失，请备份加密磁盘卷的加密密钥并将其保存在安全的位置。也可以选择在迁移之前解密磁盘卷。</p>   |
| 共享文件夹         | <p>所有共享文件夹及其中存储的下载文件都会得到保留。</p> <div data-bbox="552 633 609 664" style="background-color: #ffcccb; padding: 2px 5px; border-radius: 5px;"><b>警告</b></div> <p>为防止数据丢失，请在迁移之前备份加密共享文件夹的加密密钥或密码，并将其保存在安全的位置。</p> <div data-bbox="552 826 609 857" style="background-color: #ffcccb; padding: 2px 5px; border-radius: 5px;"><b>重要</b></div> <p>迁移后，必须重新配置目标 NAS 上的文件夹权限。</p> |
| 网络            | <ul style="list-style-type: none"> <li>如果目标 NAS 上的网络端口数量或规格与源 NAS 不同，则以下网络和虚拟设置可能会更改并需要重新配置：端口中继、虚拟机、Thunderbolt、USB QuickAccess 等。</li> <li>在 QTS 4.3.5 或更低版本上运行源 NAS 时，必须重新配置网络设置。</li> </ul>  |
| Windows AD 配置 | <p>必须重新配置 Windows AD 配置。</p>   |
| 许可证           | <p>许可证不会迁移。</p> <div data-bbox="552 1343 609 1374" style="background-color: #ffcccb; padding: 2px 5px; border-radius: 5px;"><b>警告</b></div> <p>为防止丢失所有软件许可证，QNAP 建议在数据迁移之前停用源 NAS 上的许可证。</p>   |
| 应用程序          | <p>如果目标 NAS 的 RAM 少于源 NAS，则以下功能和应用程序可能无法运行：Virtualization Station、Qsirch 和快照。</p>  |
| 服务            | <p>只能使用目标 NAS 支持的服务。</p>   |
| 多媒体功能         | <p>默认情况下，会禁用某些多媒体功能。</p>   |

## 迁移 NAS

### 重要

执行 NAS 迁移之前，请确保您已了解所有要求以及迁移后可能发生的变化。有关详细信息，请参见以下主题：

- [NAS 迁移要求](#)
- [NAS 迁移后的状态和设置变化](#)

1. 关闭源 NAS 和目标 NAS。

2. 取下硬盘。

### 重要

QNAP 建议在安装硬盘时按照源 NAS 硬盘顺序安装。拆除硬盘时，记下硬盘托盘顺序。

a. 从源 NAS 中取下硬盘。

b. 从目标 NAS 中取下硬盘托盘。

3. 安装硬盘。

a. 将源 NAS 硬盘安装到目标 NAS 硬盘托盘上。

b. 将硬盘托盘插入目标 NAS 中。

4. 启动目标 NAS 的电源。

5. 在目标 NAS 上以管理员身份登录 QTS。

目标 NAS 会自动检查最新固件更新。

## 使用 HBS 3 迁移 NAS 数据

对于不支持直接迁移的 NAS 型号，可以首先初始化目标 NAS，然后使用 HBS 3 将数据从源 NAS 复制到目标 NAS。

## 准备目标 NAS

1. 登录 QTS。
2. 创建一个或多个存储池。  
有关详细信息，请参见《QTS 用户指南》的“创建存储池”主题。
3. 创建一个或多个卷。  
有关详细信息，请参见《QTS 用户指南》的“创建卷”主题。
4. 在目标 NAS 上创建共享文件夹。  
有关详细信息，请参见《QTS 用户指南》的“创建共享文件夹”主题。

**5. 将 HBS 3 安装到目标 NAS 上。**

a. 转到 **App Center**。

b. 搜索 HBS 3。

c. 单击安装。

HBS 3 已安装在目标 NAS 上。

**6. 启用目标 NAS 上的远程服务器设置。**

a. 转到 **App Center > HBS 3 > 服务 > RTRR 服务器**。

b. 单击启用 **RTRR 服务器**。

此时会出现“RTRR 服务器设置”窗口。

c. 指定 **RTRR 服务器** 设置。

| 设置 | 描述   |
|----|--|
| 密码 | <p>指定由以下各组中的任何字符构成，包含 1 至 16 个字符的密码：</p> <ul style="list-style-type: none"> <li>• 字母：A 至 Z、a 至 z</li> <li>• 数字：0 至 9</li> <li>• 特殊字符：.-_~!@#\$%^&amp;(){}</li> <li>• 不以空格开头或结尾。</li> </ul> |
| 端口 | 指定用于访问 RTRR 服务器的端口号。   |

**7. 单击应用。**

此时会出现确认窗口。

**8. 单击确定。**

已完成远程服务器设置。

## 创建单向同步作业

**1. 在源 NAS 上，转到 **App Center > HBS 3 > 同步**。**

**2. 单击立即同步。**

**3. 选择单向同步作业。**

此时会出现创建同步作业窗口。

**4. 单击远程 NAS。**

**5. 单击添加新帐户。**

此时会出现创建存储空间窗口。

**6. 选择目标 NAS 作为目标存储空间并指定以下内容：**

| 设置               | 描述  |
|------------------|---|
| <b>名称</b>        | 用于标识存储空间的名称。  |
| <b>IP 地址/主机名</b> | 用于访问存储空间的 IP 地址或主机名。<br><br><b>提示</b><br>单击  扫描可用设备。 |
| <b>端口</b>        | 用于访问存储空间的端口号。<br>此值必须介于 1 至 65535 之间。   |
| <b>密码</b>        | 用于访问存储空间的密码。  |
| <b>使用 SSL 连接</b> | 访问远程 NAS 时需要 SSL 连接。  |

**7. 可选: 测试连接。**

| 测试           | 描述               |
|--------------|------------------|
| <b>检测服务器</b> | 测试所选存储空间的可访问性。   |
| <b>速度测试</b>  | 测试所选存储空间的网络连接速度。 |

**8. 单击创建。**

**9. 单击选择。**

**10. 选择配对文件夹。**

**重要**

- 所选文件夹中的所有子文件夹和文件都会被选中。
- 每个作业最多只能同步 16 个配对文件夹。

**a.** 在来源的下方，单击 。  
此时会打开一个对话框。

**b.** 选择一个文件夹。

**c. 单击确定。**  
该对话框关闭。

**d.** 在目标的下方，单击 。  
此时会打开一个对话框。

**e.** 选择一个文件夹。

- f. 单击确定。
- g. 可选: 必要时可以添加更多配对文件夹。

11. 单击下一步。  
此时会出现计划屏幕。

12. 选择立即同步。

13. 单击下一步。  
此时会出现规则屏幕。

14. 可选: 配置作业规则。

15. 单击下一步。  
此时会出现摘要屏幕。

16. 查看作业摘要。

17. 单击创建。  
源 NAS 运行创建的单向同步作业。

#### 注意

将共享文件夹从源 NAS 迁移到目标 NAS 可能需要数分钟。

## 将本地用户或组设置导入目标 NAS

1. 启动源 NAS 的电源。
2. 从源 NAS 备份用户或组设置。
  - a. 登录 QTS。
  - b. 转到控制台 > 权限 > 用户。
  - c. 单击创建，然后单击导入/导出用户。  
此时会出现导入/导出用户窗口。
  - d. 选择导出用户和用户组设置。
  - e. 单击下一步。  
NAS 用户和用户组设置将导出为文件，并下载到您的计算机上。
3. 源 NAS 上的用户设置已导入目标 NAS。
  - a. 在目标 NAS 上，登录 QTS。
  - b. 转到控制台 > 权限 > 用户。
  - c. 单击创建，然后单击导入/导出用户。

- d. 选择导入用户及用户群组设置。

**注意**

可以选择向新创建的用户发送通知邮件或覆盖重复用户。

- e. 在您的计算机上，选择从源 NAS 导出的用户设置文件。  
源 NAS 用户设置文件已导入目标 NAS。

## 6. 故障排除

本章介绍基本故障排除信息。

### 强制 Qfinder Pro 或 myQNAPcloud 定位 NAS

如果在 QTS 安装过程中 Qfinder Pro 或 myQNAPcloud 无法定位 NAS，则硬盘或数据可能有故障。

1. 关闭 NAS 电源。
2. 取下所有硬盘。
3. 启动 NAS 电源。
4. 使用 Qfinder Pro 或 myQNAPcloud 定位 NAS。
5. 重新插入硬盘。
6. 继续安装 QTS。

### 热插拔故障硬盘

在以下情况下，NAS 支持热插拔硬盘：

| RAID 类型 | 磁盘数量             | 情形                     |
|---------|------------------|------------------------|
| RAID 1  | 2                | 一个成员硬盘有故障。             |
| RAID 5  | $\geq 3$         | 一个成员硬盘有故障。             |
| RAID 6  | $\geq 4$         | 一个或两个成员硬盘有故障。          |
| RAID 10 | $\geq 4$ (必须为偶数) | 处于两个不同对中的一个或两个成员硬盘有故障。 |
| RAID 50 | $\geq 6$         | 每个子组的一个磁盘有故障。          |

1. 登录 QTS。
2. 转到**主菜单 > 存储与快照总管 > 存储 > 磁盘/VJBOD**。
3. 找到发生故障的硬盘。
4. 准备一个与故障硬盘具有相同或更大容量的新硬盘。
5. 从设备中取下故障硬盘。
6. 等待 20 秒或设备发出两声提示音。
7. 从硬盘托盘中取下故障硬盘。
8. 将新硬盘插入硬盘托盘中。

**9. 安装新硬盘。**

此时 NAS 会发出两声提示音。

**10. 转到主菜单 > 存储与快照总管 > 存储 > 存储/快照。**

**11. 找到包含新硬盘的卷，然后确认状态为正在重建。**

## 恢复意外移除的硬盘

NAS 支持独有的 RAID 恢复技术，可以从意外断开或移除的硬盘中恢复发生故障的 RAID 组。用户可以从降级模式恢复非活动 RAID 1、RAID 5、RAID 6、RAID 10 或 RAID 50 组。

| RAID 类型 | RAID 恢复支持 | 磁盘数量             | 磁盘容错数量        |
|---------|-----------|------------------|---------------|
| 单一      | 否         | 1                | 不适用           |
| JBOD    | 是         | $\geq 2$         | 不适用           |
| RAID 0  | 是         | $\geq 2$         | 不适用           |
| RAID 1  | 是         | 2                | 1             |
| RAID 5  | 是         | $\geq 3$         | 1             |
| RAID 6  | 是         | $\geq 4$         | 2             |
| RAID 10 | 是         | $\geq 4$ (必须为偶数) | 每个子组的一个磁盘有故障。 |
| RAID 50 | 是         | $\geq 6$         | 每个子组的一个磁盘有故障。 |

## 支持和其他资源

QNAP 提供了以下资源：

| 资源        | URL   |
|-----------|---|
| 文档        | <a href="https://download.qnap.com">https://download.qnap.com</a>   |
| 兼容性列表     | <a href="https://www.qnap.com/compatibility">https://www.qnap.com/compatibility</a>                           |
| NAS 迁移兼容性 | <a href="https://www.qnap.com/go/nas-migration">https://www.qnap.com/go/nas-migration</a>                     |
| 扩展单元兼容性   | <a href="https://www.qnap.com/go/compatibility-expansion">https://www.qnap.com/go/compatibility-expansion</a> |
| 服务门户      | <a href="https://service.qnap.com">https://service.qnap.com</a>   |
| 产品支持状态    | <a href="https://www.qnap.com/go/product/eol.php">https://www.qnap.com/go/product/eol.php</a>                 |

| 资源        | URL   |
|-----------|---|
| 下载项       | <a href="https://download.qnap.com">https://download.qnap.com</a> |
| 社区论坛      | <a href="https://forum.qnap.com">https://forum.qnap.com</a>       |
| QNAP 配件商店 | <a href="https://shop.qnap.com">https://shop.qnap.com</a>         |

## 7. 术语表

### Cloud Key

分配给每个 NAS 设备的唯一 8 位数代码

### myQNAPcloud

提供各种远程访问服务，如 DDNS 和 myQNAPcloud Link

### myQNAPcloud Link

可用于通过 Internet 访问 QNAP 设备，而且不必配置复杂的端口转发设置

### Qfinder Pro

一种 QNAP 实用工具，可用于查找和访问局域网中的 QNAP NAS 设备

### QNAP ID

用户帐户，可用于使用 myQNAPcloud 远程访问和其他 QNAP 服务

### QTS

QNAP NAS 操作系统

## 8. 声明

本章提供有关保修、免责声明、许可和联邦法规的信息。

### 有限保修

QNAP 为本公司产品提供有限保修服务。自发票注明日期起一 (1) 年或更长限期内，QNAP 品牌的硬件产品享受材料和工方面艺缺陷的保修服务。 ("保修期")。请访问 [www.qnap.com/warranty](http://www.qnap.com/warranty) 查看您的法定权利 (QNAP 可不时自行修改这些权利)。

### 免责声明

本文档中提供的信息与 QNAP Systems, Inc. (即 "QNAP") 的产品有关。本文档未通过禁止反言或其他方式授予对任何知识产权的明示或暗示许可。除非在 QNAP 针对此类产品的销售条款和条件中明确注明，QNAP 不承担任何责任，并且 QNAP 不提供任何与 QNAP 产品的销售和/或使用有关的明示或暗示的担保，包括与特定用途的适用性、适销性或者侵犯任何专利、版权或其他知识产权有关的责任或担保。

在任何情况下，对于因使用本产品、其随附软件或文档而导致的直接、间接、特殊、偶发或继发损失，QNAP 的赔偿责任均不出超产品售价。QNAP 对其产品或本文档的内容或使用以及所有随附软件，不做任何明示、暗示或法定的保证或表述，并特别声明，不保证其质量、性能、适销性或适用于任何特定用途。QNAP 保留修改或更新其产品、软件或文档的权利，无需通知任何个人或实体。

建议定期备份系统，以避免任何潜在的数据丢失。QNAP 对所有类型的数据丢失或恢复不承担任何责任。

如果退回 QNAP 产品（例如 NAS，网络连接存储）包装中的任何组件进行退款或维修，请务必妥善包装以便运输。对于因包装不当而造成的任何形式的损坏，QNAP 将不予赔偿。

所有特性、功能和其他产品规格如有更改，恕不另行通知，亦不承担任何责任。本文所包含的信息如有更改，恕不另行通知。

此外，文中未使用 ® 或 ™ 符号。

### 版权和商标

版权所有 © 2023 QNAP Systems, Inc. 保留所有权利。

QNAP 和其他 QNAP 产品名称及徽标是 QNAP Systems, Inc. 的专有标志、商标或注册商标。



词语 HDMI、HDMI High-Definition Multimedia Interface (高清晰度多媒体接口)、HDMI 商业外观和 HDMI 徽标均为 HDMI Licensing Administrator, Inc. 的商标或注册商标。

本文提及的其他公司名称和产品是其各自持有者的商标或注册商标。

# GNU General Public License

Version 3, 29 June 2007

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

## Preamble

The GNU General Public License is a free, copy left license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program--to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps: (1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively

proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

## Terms and Conditions

### 1. Definitions.

“This License” refers to version 3 of the GNU General Public License.

“Copyright” also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

“The Program” refers to any copyrightable work licensed under this License. Each licensee is addressed as “you”. “Licensees” and “recipients” may be individuals or organizations.

To “modify” a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a “modified version” of the earlier work or a work “based on” the earlier work.

A “covered work” means either the unmodified Program or a work based on the Program.

To “propagate” a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To “convey” a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays “Appropriate Legal Notices” to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

### 2. Source Code.

The “source code” for a work means the preferred form of the work for making modifications to it. “Object code” means any non-source form of a work.

A “Standard Interface” means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The “System Libraries” of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A “Major Component”, in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The “Corresponding Source” for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work’s System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example,

Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source.

The Corresponding Source for a work in source code form is that same work.

### **3. Basic Permissions.**

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law. You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

### **4. Protecting Users' Legal Rights From Anti-Circumvention Law.**

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

### **5. Conveying Verbatim Copies.**

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

### **6. Conveying Modified Source Versions.**

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- a.** The work must carry prominent notices stating that you modified it, and giving a relevant date.

- b.** The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".
- c.** You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.
- d.** If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.  
A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit.  
Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

## 7. Conveying Non-Source Forms.

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a.** Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b.** Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c.** Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d.** Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source.  
Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.

- e. Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

"Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

## 8. Additional Terms.

"Additional permissions" are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to

require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a.** Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b.** Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c.** Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d.** Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e.** Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f.** Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered “further restrictions” within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

## 9. Termination.

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

#### **10. Acceptance Not Required for Having Copies.**

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

#### **11. Automatic Licensing of Downstream Recipients.**

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An “entity transaction” is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

#### **12. Patents.**

A “contributor” is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's “contributor version”.

A contributor's “essential patent claims” are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, “control” includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a “patent license” is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To “grant” such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you

must either (1) cause the Corresponding Source to be so available, or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

### **13. No Surrender of Others' Freedom.**

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

### **14. Use with the GNU Affero General Public License.**

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

### **15. Revised Versions of this License.**

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version

number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

#### **16. Disclaimer of Warranty.**

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

#### **17. Limitation of Liability.**

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### **18. Interpretation of Sections 16 and 17.**

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

END OF TERMS AND CONDITIONS

## **CE 声明**



本设备符合 CE 合规性 B 类标准。

## UKCA 声明



此设备符合在英国销售产品的 UKCA 要求。

## FCC 声明

### FCC B 类声明



此设备符合 FCC 规则的第 15 部分的要求。运行需满足下面两个条件：

1. 本设备不会产生有害干扰。
2. 本设备必须承受受到的干扰，包括可能导致运行异常的干扰。

#### 注意

经测试，本设备符合 FCC 规则第 15 部分中针对 B 类数字设备的限制标准。这些限制标准旨在提供合理的保护，以防止在住宅区安装设备时产生有害干扰。本设备会产生、使用并可发出射频能量，如果不按说明安装和使用，可能会对无线电通信产生有害干扰。但是，并不保证在特定安装中不会产生此类干扰。如果本设备确实对收音机或电视机接收造成有害干扰（可通过打开和关闭本设备来判定），建议用户尝试采取下列一项或多项措施来消除干扰：

- 改变接收天线的方向或位置。
- 增加本设备与接收设备之间的间距。
- 将本设备与接收设备分别接入不同回路的电源插座。
- 请咨询经销商或经验丰富的收音机/电视机技术人员以寻求帮助。

#### 重要

若未经 QNAP Systems, Inc. 批准对本设备进行改动，可能会导致用户失去 FCC 授予的操作本设备的资格。

## VCCI 声明



VCCI-B

## BSMI 声明



D33B77  
RoHS

## SJ/T 11364-2006



本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

| 部件名称  | 有毒有害物质或元素 |           |           |                 |               |                 |
|-------|-----------|-----------|-----------|-----------------|---------------|-----------------|
|       | 铅<br>(Pb) | 汞<br>(Hg) | 镉<br>(Cd) | 六价铬<br>(Cr(VI)) | 多溴联苯<br>(PBB) | 多溴二苯醚<br>(PBDE) |
| 壳体    | 0         | 0         | 0         | 0               | 0             | 0               |
| 显示    | 0         | 0         | 0         | 0               | 0             | 0               |
| 印刷电路板 | 0         | 0         | 0         | 0               | 0             | 0               |

| 部件名称       | 有毒有害物质或元素 |           |           |                 |               |                 |
|------------|-----------|-----------|-----------|-----------------|---------------|-----------------|
|            | 铅<br>(Pb) | 汞<br>(Hg) | 镉<br>(Cd) | 六价铬<br>(Cr(VI)) | 多溴联苯<br>(PBB) | 多溴二苯醚<br>(PBDE) |
| 金属螺帽       | 0         | 0         | 0         | 0               | 0             | 0               |
| 电缆组装       | 0         | 0         | 0         | 0               | 0             | 0               |
| 风扇组装       | 0         | 0         | 0         | 0               | 0             | 0               |
| 电力供应组<br>装 | 0         | 0         | 0         | 0               | 0             | 0               |
| 电池         | 0         | 0         | 0         | 0               | 0             | 0               |

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。